

## Warranty

This product is warranted to the retail consumer for 90 days from date of retail purchase, against defects in material and workmanship.

### WHAT IS COVERED

- Replacement parts and labor.
- Transportation charges to customer for the repaired product.

### WHAT IS NOT COVERED

- Commercial or industrial use of this product.
- Damage caused by abuse, accident, misuse, or neglect.
- Transportation of the unit or component from the customer to Koolatron.

### IMPLIED WARRANTIES

Any implied warranties, including the implied warranty of merchantability are also limited to duration of 90 days from the date of retail purchase.

### WARRANTY AND SERVICE PROCEDURE

Keep the original, dated, sales receipt with this manual. If you have a problem with your unit, or you require replacement parts, please telephone the following number for assistance: **1-800-265-8456**

A Koolatron Master Service Centre must perform all warranty work. Service after warranty may be obtained at a Master Service Centre or at an authorized service dealer. Purchase Receipt is required to establish warranty eligibility.

Koolatron has Master Service Centres at these locations:

U.S.A. - 4330 Commerce Dr., Batavia, NY 14020-4102

Canada - 139 Copernicus Blvd., Brantford, ON N3P1N4



[www.koolatron.com](http://www.koolatron.com)

©2020 Koolatron, Inc. All rights reserved.

All specifications are subject to change without notice.

Assembled in North America



# DELUXE WINE CELLAR

## 12-bottle wine cooler



**WC12-35D**  
User Manual

*Please Read These Instructions Carefully Before Use!*

## FEATURES

This twelve-bottle wine cooler is designed to accept 750 ml bottles up to 315mm (12.5") tall. It has the temperature settings between 8°C (46°F) and 18°C (66°F). Interior light operated by touch button on the digital control panel. Temperature selection, °C or °F, switchable.

## PARTS

- Wine cooler - 5 wood shelves - User manual

## SAFETY

- This unit is an indoor appliance. DO NOT use OUTDOORS.
- Household Use Only
- There must be at least 127 mm (5") clearance around the unit to ensure proper ventilation.
- Place unit on a flat surface, away from heat sources
- Do not use the appliance if the plug or cable is damaged. If the power cord is damaged and/or is malfunctioning, please contact the manufacturer.
- Pull the plug out of the outlet to disconnect. DO NOT pull the cord.
- Do not touch the plug with wet hands.
- Unplug the appliance when not in use.

### Use of extension cords

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord. However, if you must use an extension cord, it is absolutely necessary that it is a UL-listed (in the United States) or a CSA-listed (in Canada), 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord is 15 amperes (minimum) and 120 volts.

## SPECIFICATIONS

|                     |  |
|---------------------|--|
| Power Requirements: | AC 120V 60Hz 75 Watts  |
| Capacity:           | 12 x 750 ml (25.4 oz) bottles                                |
| Max. Temp.:         | 18°C +/- 3°C (66°F +/- 5°F) at 22°C (72°F) ambient air temp. |
| Min. Temp.:         | 8°C +/- 3°C (46°F +/- 5°F) at 22°C (72°F) ambient air temp.  |
| Weight:             | 12.3 kg (27.1 lbs)   |

## INSTALLATION



Choose a location where there is an electrical outlet within reach of the power cord. There must be at least 127 mm (5") clearance around the unit to ensure proper ventilation.

**NOTE Free-standing installation only!**

## OPERATING INSTRUCTIONS

1. Insert the power plug into the power socket. Make sure the power socket is 110-120V AC/60Hz.



2. Set the desired cooling temperature by pressing the buttons  or  to set your desired temperature. Each depression of the buttons will scroll through the available temperature settings. Numbers will flash while setting. Solid numbers indicate the current internal temperature in Celcius or Fahrenheit. Switch to your preference using the °C to °F switch.
3. Allow the empty Wine Cellar to operate for approximately 3 hours. This will allow it to reach the desired temperature.
4. Fill the wine cooler with your choice of wine bottles. Allow 24 hours of operation before the bottles reach the desired temperature.
5. The right touch control button operates both the interior light and switches the temp. display from Celcius to Fahrenheit. Touch once to turn the interior light on or off. To switch between Celcius and Fahrenheit, hold button for 4 seconds.

The Wine Cellar should be placed where the ambient temperature is between 59°F to 77°F (15°C to 25°C). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

### RECOMMENDED TEMPERATURES FOR CHILLING WINE

Red Wines: 15-18°C (59-66°F)

White Wines 8-15°C (46-59°F)

The above temperatures may fluctuate depending on whether the interior light is ON or OFF or the bottles are located on the upper/middle/lower section.

## MAINTENANCE

- Clean the interior using mild detergents or glass cleaning products.
- NEVER use harsh detergents or solvents.
- DO NOT immerse in water.
- Periodically, empty the tray of accumulated condensation located at the back of the unit.