



## USER'S MANUAL

30" Slide-In Gas Range

WiFi Connectivity with Smart Device App

5 Burner Cooktop with Edge-to-Edge Grates

6.1 Cubic Feet Total Oven Capacity

Glass Touch Controls

"Built In" Appearance



(Pictures are for reference only and may not accurately represent all models covered by this manual.)

**Note:**

Before using this product, please read this manual carefully and keep it for future reference.

Contact Midea Customer Service at 1-866-646-4332 or visit [midea.com/us/support](http://midea.com/us/support) for assistance.

**MODEL NUMBERS**

**MGS30S2AST**

**MGS30S4AST**

[www.midea.com](http://www.midea.com)



# Dear user

---

**Thankyou** for letting Midea help you "make yourself at home. "

This manual is part of our commitment to your total satisfaction.

Please read this manual carefully before use and keep it in a convenient place for future reference.

To help us serve you better, please consider registering your product using our convenient Midea app MSmartlife, by visiting <http://www.midea.com>, or by texting a picture of your proof of purchase to **1-844-224-1614**.

By using the text option you will earn an additional 3 month warranty extension immediately following the completion of the product's original warranty.

<b>SAFETY DEFINITIONS</b> .....	<b>5</b>
<b>IMPORTANT SAFETY INSTRUCTIONS</b> .....	<b>6</b>
<b>PREPARING FOR FIRST USE</b> .....	<b>15</b>
Range Overview .....	15
Review of Controls.....	16
WiFi Connection .....	17
Setting the Clock .....	17
Before First Use .....	18
<b>COOKTOP OPERATION</b> .....	<b>19</b>
Warnings.....	19
Types of Cooktop Burners .....	20
Pan Size/Burner Size Selection.....	21
Cooktop Indicators.....	21
Controlling the Cooktop Burners.....	22
Flame Characteristics.....	22
Griddle.....	23
In Case of Power Failure.....	24
<b>OVEN OPERATION</b> .....	<b>25</b>
Warnings .....	25
Oven Racks.....	26
Removing/Inserting Racks.....	27
Rack Positions .....	28
Preheating.....	28
Bake.....	29

Keep Warm .....	29
Broil .....	30
Proof .....	31
Convection Bake .....	32
Convection Roast .....	33
Pizza Mode .....	34
Delay .....	34
Cook Time .....	35
Probe .....	36
Sabbath Mode .....	38
Steam Clean .....	40
Self Clean .....	41
Control Lock .....	42
WiFi (Remote Operation) .....	42
Timer .....	43
Oven Lights .....	43
In Case of Power Failure .....	43
<b>CONTROL SETTINGS .....</b>	<b>44</b>
<b>CLEANING AND MAINTENANCE .....</b>	<b>46</b>
Control Lock .....	46
Cooktop .....	46
Cooktop Burners .....	47
Control Panel .....	48
Oven Interior .....	49
Oven Lights .....	50
Drawer .....	50
Door .....	51
<b>TROUBLESHOOTING .....</b>	<b>53</b>
Cooktop .....	53
Oven .....	54
<b>WARRANTY .....</b>	<b>57</b>

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---

### SAFETY DEFINITIONS

Warnings and safety instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven. Known hazards and their severity are identified in this manual with the following symbols:

#### **WARNING**

This symbol indicates the presence of a hazard which may result in death or serious injury if not avoided.

#### **CAUTION**

This symbol indicates the presence of a hazard which may result in minor or moderate personal injury if not avoided.

#### **NOTICE**

This symbol indicates the presence of a hazard which may result in minor property damage if not avoided.

#### **NOTE**

This alerts the user to information that will help avoid confusion or common cooking mistakes and obtain the best possible user experience.

**IMPORTANT SAFETY INSTRUCTIONS**  
**READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

---

## IMPORTANT SAFETY INSTRUCTIONS

### **⚠WARNING**

Read all safety instructions before using this product. Failure to follow these instructions may result in fire, electrical shock, serious injury, or death. It is the owner's responsibility to ensure that anyone using the appliance knows how to operate it safely.

**WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.**

- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**
- **WHAT TO DO IF YOU SMELL GAS**
  - **Do not try to light any appliance.**
  - **Do not touch any electrical switch.**
  - **Do not use any phone in your building.**
  - **Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.**
  - **If you cannot reach your gas supplier, call the fire department.**
- **Installation and service must be performed by a qualified installer, service agency or the gas supplier.**

**IMPORTANT SAFETY INSTRUCTIONS**  
**READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE**

## **⚠️ WARNING**

### **Never Operate the Top Surface Cooking Section of this Appliance Unattended**

- **Failure to follow this warning statement could result in fire, explosion, or burn hazard that could cause property damage, personal injury, or death.**
- **If a fire should occur, keep away from the appliance and immediately call your fire department.**

**DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**

## **⚠️ WARNING**


### **TIP OVER HAZARD**

A child or adult can tip the range and be killed. Verify the anti-tip device has been properly installed and engaged per installation instructions. Ensure the anti-tip device is re-engaged when the range is moved.

Do not operate the range without the anti-tip device in place and engaged. Failure to do so can result in death or serious burns to children or adults. Do not remove the leveling legs. Doing so will prevent the range from being secured by the anti-tip device.



Anti-Tip Bracket

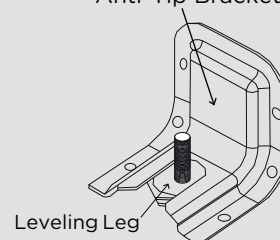

To confirm the anti-tip bracket is properly installed, look underneath the range to confirm rear leveling leg is engaged in bracket. If visual inspection is not possible:

- Slide range forward
- Confirm anti-tip bracket is securely attached to floor or wall in correct position according to installation instructions.
- Fully slide the range back against the wall so that leveling leg engages with anti-tip bracket.

If range is removed from service, secure door closed or remove door to minimize tip over risk. (See "Door" section under "Cleaning and Maintenance" in this manual for instructions on how to remove door.)

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---

### **⚠WARNING**

#### **INSTALLATION AND MAINTENANCE**

- This appliance is intended for normal residential use. It is not approved for commercial use, outdoor installation, or any other application not specifically allowed by this manual.
- Be sure your appliance is properly installed and grounded by a qualified service provider.
- **DO NOT** operate this appliance if it has been damaged or is not working properly. Contact a qualified service provider for repairs.
- **DO NOT** repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified service provider.
- **DO NOT** allow cooking grease or other flammable materials accumulate in or on the range. Grease in the oven or on the cooktop may ignite.
- Clean kitchen ventilating hoods frequently. Grease should not be allowed to accumulate on hood or filter.
- Clean cooktop with caution – To avoid steam burns, do not use wet sponge or cloth while cooking area is hot. Some cleaners can produce noxious fumes if applied to a hot surface.
- **DO NOT** use oven cleaners. No commercial oven cleaner or oven liner protective coating of any kind should be used with any part of this appliance.
- This appliance should not be installed with a ventilation system that blows air downward toward the appliance. This type of ventilation system may cause ignition and combustion problems with the gas cooking appliance resulting in personal injury or unintended operation.
- This appliance requires connection to a 3-prong, 120VAC, 60Hz grounded electrical source. When installed, appliance must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, NFPA 70 or the Canadian Electric Code, CSA C22.1-02.
- **DO NOT** clean door gasket – The door gasket is essential for a good seal. Care should be taken not to rub, damage, or move the gasket.
- Clean only parts and areas listed in the "Cleaning and Maintenance" section of this manual.

SAFETY  
INSTRUCTIONS

PREPARING  
FOR FIRST USE

COOKTOP  
OPERATION

OVEN  
OPERATION

CONTROL  
SETTINGS

CLEANING AND  
MAINTENANCE

TROUBLESHOOTING

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---

### **⚠WARNING**

#### **GAS SAFETY**

- Have the installer show you where the gas shut-off valve is located.
- NEVER cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning.
- This appliance is shipped from the factory set for use with Natural Gas. It can be converted for use with LP (propane). The conversion must be performed by a qualified technician in accordance with the installation instructions and local codes. The agency performing this work assumes responsibility for the conversion.

#### **GENERAL USAGE**

- This appliance is configurable to allow remote operation at any time. Do not store any flammable materials or temperature sensitive items inside oven, in storage drawer, or on top or near cooktop of the appliance, including paper, plastic, pot holders, linens, wall coverings, curtains, drapes, or cleaning chemicals.
- NEVER use this appliance as a space heater to heat or warm the room. Doing so may result in carbon monoxide poisoning and overheating of the oven.
- Children should not be left alone or unattended in the area where appliance is in use. Children should not be allowed to play in or on, or otherwise interact with the range.
- Do not allow anyone to climb, stand, lean, sit, or hang on any part of an appliance, especially a door, drawer, or operation panel.
- CAUTION - Do not store items of interest to children in cabinets above a range or on the backguard of a range - children climbing on the range to reach items could be seriously injured.
- Loose-fitting or hanging garments should never be worn while using the appliance.
- This appliance has not been evaluated for use with any 3rd party after-market systems. Do not attempt to use this appliance with a wok ring or any other after-market device that may block air to the burner or otherwise cause a fire or carbon monoxide hazard.


# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

### **⚠️WARNING**

#### COOKTOP HAZARDS

- **DO NOT USE WATER ON GREASE FIRES.** Smother fire or flame with a close-fitting lid or metal tray. Never pick up a flaming pan. Dry chemical or foam-type extinguisher may be used if it is CLASS ABC or CLASS K and you already know how to use it.
- It is strongly recommended that a CLASS ABC or CLASS K fire extinguisher be kept near the range in an easily accessible location, and that household members are familiarized in advance with its operating instructions.
- Do not use aluminum foil to line or cover the grates or any other part of the cooktop. Doing so may result in carbon monoxide poisoning, overheating of the cooktop surfaces, or fire.
- Only certain types of glass, glass/ceramic, ceramic, earthenware, or other glazed utensils are suitable for range-top service without breaking due to the sudden change in temperature.
- Flames extending beyond the edge of the cookware are a burn hazard. Set the burner controls so that flames do not extend beyond the edge of the pot.

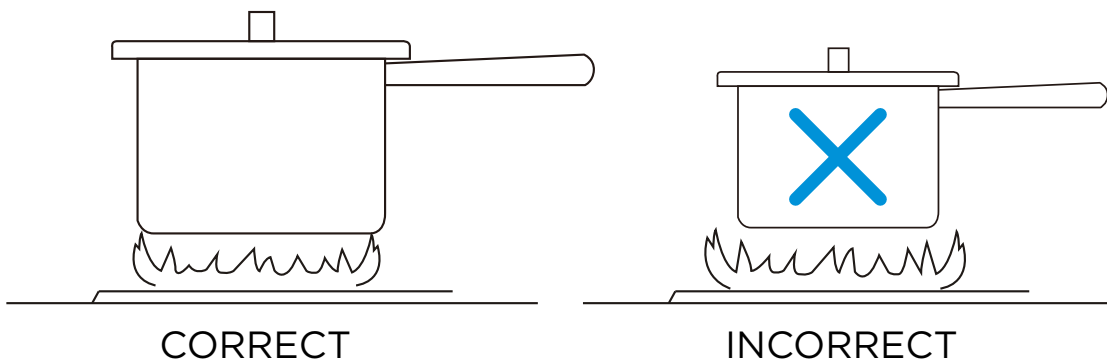

## IMPORTANT SAFETY INSTRUCTIONS

### READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---

- To reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the utensil, the handle of a utensil should be positioned so that it is turned inward, and does not extend over the front of the counter top or over adjacent cooktop burners.
- **DO NOT TOUCH COOKTOP BURNERS, GRATES, OR AREAS NEAR BURNERS** - Cooktop area may be hot even though no flames are present. Areas near cooktop burners may become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact cooktop area until they have had sufficient time to cool. Among these areas are the cooktop, grates, and surfaces facing the cooktop.
- Use proper pan size. This appliance is equipped with cooktop burners of different size. Select utensils having flat bottoms large enough to cover the entire burner and flame. The use of undersized utensils will expose a portion of the flame to direct contact and may result in ignition of clothing. Proper relationship of utensil to burner will also improve efficiency.
- In the event that personal clothing or hair catches fire, drop and roll immediately to extinguish flames.
- Always turn hood ON when cooking at high heat or when flambéing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambé).
- Hot oil is capable of causing severe burns. Never move cooking utensils containing hot grease. Wait until it has cooled before disposing of grease.
- Use high heat settings only when necessary. To avoid splattering, heat oil slowly on medium-low settings.
- Do not attempt to lift the cooktop. Doing so may damage the gas tubing to the surface burners resulting in a gas leak and risk of fire.

# IMPORTANT SAFETY INSTRUCTIONS



## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

### **⚠️ WARNING**

#### **OVEN HAZARDS**

- Never place anything (aluminum foil, spill mat, baking stone, cookware, etc.) on the bottom of the oven cavity. These items can trap heat or melt, resulting in damage to the appliance and risk of electric shock, smoke, or fire.
- Use care when opening the door. Let hot air or steam escape before removing or replacing food.
- Use only dry pot holders. Moist or damp pot holders on hot surfaces may result in burns from steam. Do not let pot holder touch hot grates or flames. Do not use a towel or other bulky cloth.
- Do not heat unopened food containers - Build-up of pressure may cause container to burst and result in injury.
- Always place oven racks in the desired location while oven is cool. If rack must be moved while oven is hot, do not let pot holder contact hot oven surfaces.
- Do not use a broiler pan without its insert. Do not cover the broiler insert with aluminum foil, as exposed fat and grease could ignite.
- Do not obstruct oven vents or any other slots or openings on the unit.

Oven and cooling Vents  
Do not obstruct oven vents

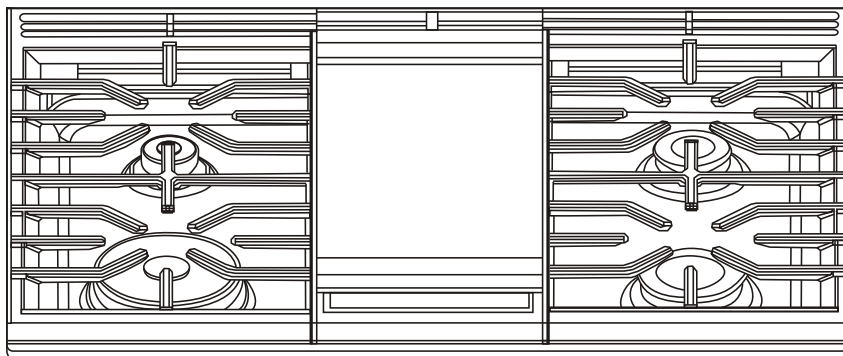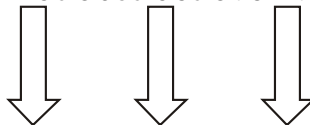

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---

- DO NOT TOUCH OVEN BURNERS OR INTERIOR SURFACES OF OVEN – Oven burners and surfaces may be hot even though no flames are present. Interior surfaces of an oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact oven burners or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns – among these surfaces are oven vent openings and surfaces near these openings, oven doors, and windows of oven doors.
- If materials inside the oven should ignite, keep door closed and turn off power at the fuse or breaker box. Wait for the oven to cool before removing contents, cleaning the oven, and restoring power.

### **⚠ WARNING**

#### **SELF-CLEAN HAZARDS**

- Before self-cleaning the oven, ensure oven is empty. Remove broiler pan, racks, cookware, and anything else.
- To avoid ignition inside the oven, clean excess grease or food out of the oven before starting self-clean.
- The door will lock several minutes after the start of a self-clean function. If the door is opened prior to being locked, the self-clean function will be automatically cancelled. If door does not lock within 15 minutes, cancel self-clean and contact a qualified service provider for repairs.
- In the event of ignition inside the oven during self-clean, turn off the oven and wait for the fire to extinguish. **DO NOT FORCE THE DOOR OPEN.**
- Wait for the oven to cool before removing contents and cleaning the oven.
- If the self-cleaning mode malfunctions, keep door closed, turn off the appliance, disconnect the circuit at the circuit breaker box, and contact a qualified service provider for repairs.
- Some birds are extremely sensitive to the fumes produced during a self-clean cycle. Move birds to another well-ventilated room.

# IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE

---


### **⚠️ WARNING**

#### **FCC NOTICE**

- According to Federal Communication Commission requirements, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
    - Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.
    - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
    - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# PREPARING FOR FIRST USE

## Range Overview:

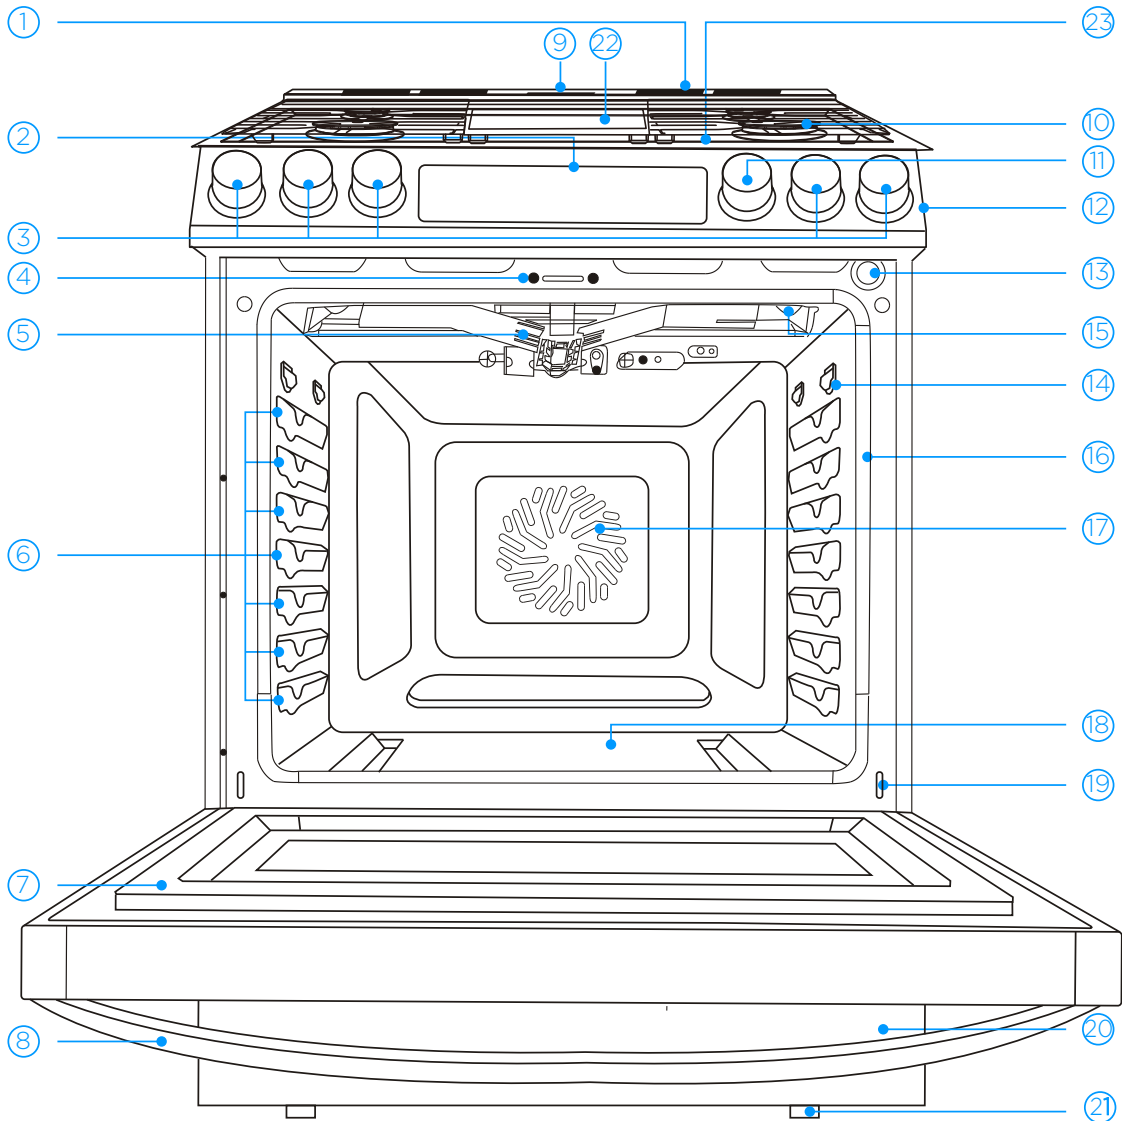


- |                         |  |                                   |
|-------------------------|--|-----------------------------------|
| 1 Cooling Vents         | 9 Oven Vent                                | 16 Door Gasket                    |
| 2 Oven Control          | 10 Cooktop                                 | 17 Convection Fan                 |
| 3 Cooktop Control Knobs | 11 Control input knob or oven light switch | 18 Oven Bottom                    |
| 4 Door Lock             | 12 Control Panel                           | 19 Door Hinge (each side)         |
| 5 Broil Burner          | 13 Door Switch                             | 20 Storage Drawer                 |
| 6 Rack Positions        | 14 Meat Probe Jack                         | 21 Leveling Legs (front and back) |
| 7 Door                  | 15 Oven Lights                             | 22 Griddle                        |
| 8 Door Handle           |  | 23 Grate                          |


## Review of Controls:

All Midea ranges are provided with intuitive touch controls to help you easily take advantage of the features available in your oven. Depending on the model and configuration, your oven may be controlled in one of two ways. Control Input Knob models will have a dedicated knob used to set temperatures and select options. Numeric Keypad Input models have a numeric keypad for entering times and temperatures.

### Control User Interface (Control Input Knob Models)

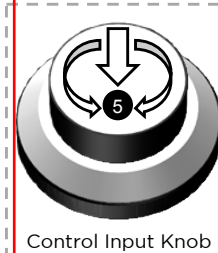

### Control User Interface (Numeric Keypad Input Models)

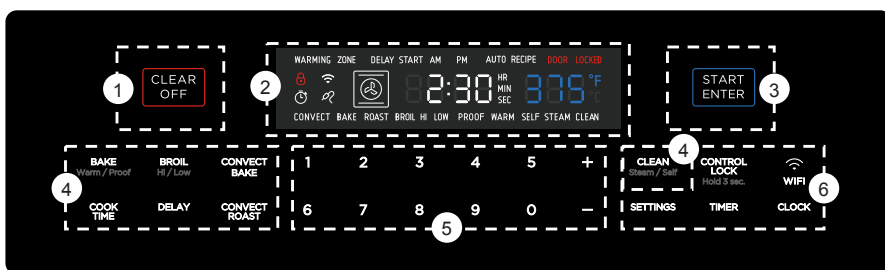


(use keypad for numeric input)

1. **CLEAR/OFF** Key - Immediately halts any oven operation. If the door is locked for self-clean, pressing this key will stop the function, but the door will not unlock until the oven temperature has dropped to a safe level.
2. **Display** - Communicates information to the user, such as time-of-day, oven temperature, and cooking mode.
3. **START/ENTER** Key - Initiates the selected oven operation or selects an available option. NOTE: On Control Input Knob models, pressing in on the knob performs the same function as pressing the START/ENTER key.
4. **Oven Operations** - Select from the available operating modes to perform the desired task. Some modes, such as PROBE, COOK TIME, and DELAY, can only be used in conjunction with other modes. See mode-specific instructions in this manual for details.
5. **Numeric Input** - Used to enter desired oven temperature, set the clock, change settings, or input other information into the appliance.
6. **Auxiliary Features** - Useful features that are not specifically associated with oven operation, such as TIMER, CONTROL LOCK, and SETTINGS.

## WiFi Connection:

Your oven is equipped to communicate with the Midea "MSmartLife" App, providing you with access to certain features and controls from your smartphone or tablet.\* To take advantage of these features, you must first connect your oven to your WiFi network and the Midea "MSmartLife" App.

- 1 Have the smart devices nearby with internet access for downloading the app.
- 2 Have the home WiFi "Network Name" and password ready.
- 3 Download and install the "MSmartLife" app from Google Play or the App Store.
- 4 Open the app. If you have an existing account, login. Otherwise, create a new account and login.
- 5 Press the "Add Device" button and follow the app instructions onscreen to complete the connection.
- 6 Once the connection is complete, the connected  icon located on your range display will be illuminated and the app will also confirm you are connected.
- 7 If the connection icon does not turn on, repeat the connection instructions on the app to reconnect. If issues continue, please contact Midea customer service at **1-866-646-4332** or by visiting **midea.com/us/support** for assistance.


To connect additional devices, repeat step 2 above for each device.

## Setting the Clock:

If you have successfully connected the oven to the Midea App, the clock will automatically be set based on your location. If the app has incorrectly identified your location or you otherwise want to set a different time, the automatic setting can be disabled through the app. To set the clock manually at the appliance:

---

\*Compatible Apple or Android device(s) and home WiFi network required.

1. Press the "CLOCK" button - the time display will begin to flash. NOTE: Some models do not have a dedicated "CLOCK" button on the control display. For these models, select the  option under the SETTINGS menu. See "Control Settings" section later in this manual.

2. Enter the time using the Control Input knob or for key pad models use the numeric pad and "+" / "-" buttons to change between AM / PM.

3. Press the "START/ENTER" button or click the Control Input Knob (if present) to accept the currently displayed time, or press "CLOCK" or "CLEAR/OFF" to exit to the previous time setting.

### BEFORE USING YOUR NEW RANGE FOR THE FIRST TIME:

1. Ensure all packaging, literature, removable labels, and protective plastic film are removed. Check inside oven, inside drawer, and around door and trim edges carefully.
2. While cool, wipe down all surfaces, including inside oven and drawer, with a damp, non-abrasive cloth to remove dust that may have settled during shipping and storage.
3. Familiarize yourself with the controls and features described in this manual.
4. Confirm that cooktop burners and oven operate as intended. Contact Midea customer service at **1-866-646-4332** or by visiting **[midea.com/us/support](http://midea.com/us/support)** immediately if appliance is not working as expected.
5. Start the oven in BAKE mode at the highest available temperature setting. Allow oven to run for 1 hour to remove any dust or impurities. There will be a distinctive odor - this is normal. Ensure your kitchen is well ventilated during this conditioning period.

# COOKTOP OPERATION

## ⚠️WARNING

### FIRE, CARBON MONOXIDE HAZARD

- DO NOT USE WATER ON GREASE FIRES. Smother fire or flame with a close-fitting lid or metal tray. Never pick up a flaming pan.
- Never operate the top surface cooking section of this appliance unattended. Boil-over causes smoking and greasy spillovers that may ignite. Turn off all controls when done cooking.
- Burners and burner caps must be positioned and aligned correctly on cooktop for proper combustion. See "Burner Assembly" section under "Cooktop Operation" for details on position and assembly.
- Do not use aluminum foil to line or cover the grates or any other part of the cooktop. Doing so may result in carbon monoxide poisoning, overheating of the cooktop surfaces, or fire.
- Do not operate cooktop while wearing loose-fitting or hanging garments.
- Do not place items that can melt or burn on the cooktop, even when it is not being used.

## ⚠️CAUTION

### BURN, CUT, ELECTRIC SHOCK HAZARDS

- To minimize burn risk and maximize cooking efficiency, select cookware and adjust burners so that flames do not extend beyond the edge of the pan.
- Until the cooktop and grates have completely cooled after use, the surface may still be hot and burns may occur after the burner has been turned off.
- To avoid steam burns, do not use wet sponge or cloth while cooking area is hot.

## NOTICE


### PREVENTING DAMAGE

- Do not allow cookware to boil dry or otherwise overheat.
- Do not cook foods packaged in aluminum foil directly on the cooktop.
- Do not otherwise use aluminum foil, or any material that could melt, directly on the cooktop.
- Never cook directly on the grates. Always use appropriate cookware.


## Types of Cooktop Burners:

All Midea ranges are provided with 5 cooktop burners. Some models may include burners with multiple rings for greater cooking flexibility. See diagrams below. (Images do not represent all possible configurations.) See "Cooktop Burners" section under "Cleaning and Maintenance" for proper burner position and alignment.

**NOTE:** Higher powered burners are placed towards the front for higher temperature or shorter duration cooking, such as boiling, searing, and pan frying. Lower powered burners are placed towards the rear for lower temperature or longer duration cooking, such as simmer or melting chocolate.

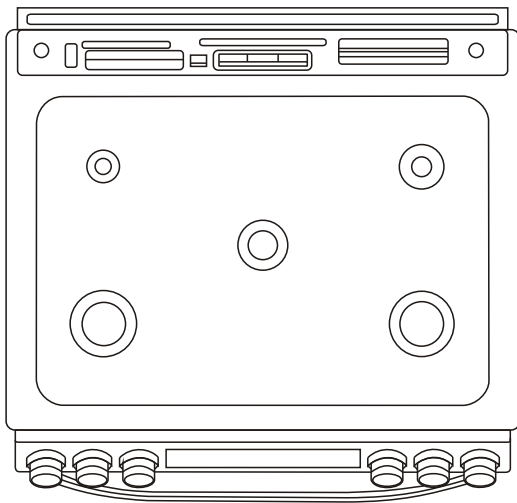

Numeric Keypad  
Input models

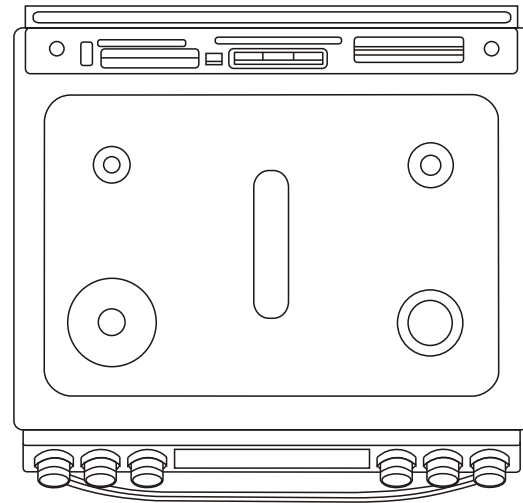


Control Input Knob  
models

## Pan Size/Burner Size Selection:


To minimize burn risk and maximize cooking efficiency, select cookware and adjust burners so that flames do not extend beyond the edge of the pan as indicated below:

### Correct Selection:


Small Pan on Small Burner

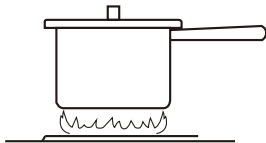

Large Pan on Large Burner

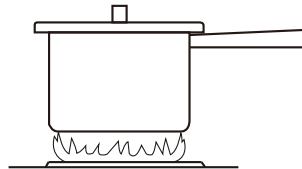


Large Pan on Small Burner

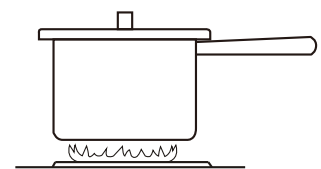


### Incorrect Selection:

Small Pan on Large Burner

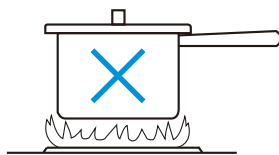


Pan Off-Center on Burner

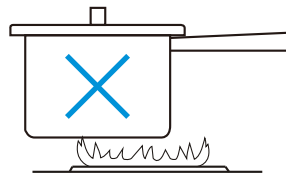

## Cooktop Indicators (some models):

Control Input Knob models include the additional feature of additional illumination around the knob to indicate that the cooktop is in use. Only the knobs that are currently in use will be illuminated.

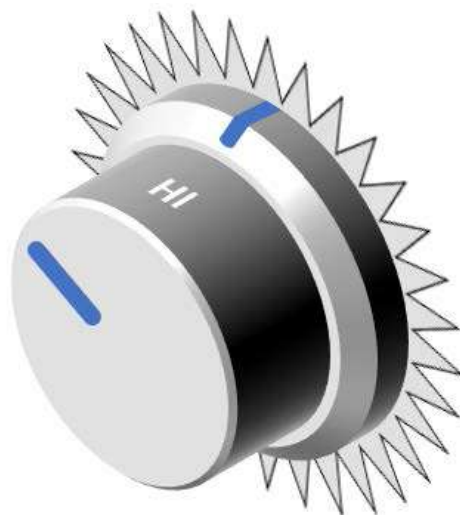


Surface-On Indication by Knob Backlighting

## Controlling the Cooktop Burners:

To turn a cooktop burner on, push in on the control knob and turn left (counter-clockwise) to the "LIGHT" position. Gas will flow and the igniters on all burners will begin to spark. The small icon above the control knob indicates the location of the burner being controlled. The various settings (from OFF to HI) are located on the knob itself. After the burner ignites, adjust to the desired heat setting by aligning the power level on the knob to the indicator mark on the control panel. Most chefs will advise to observe the flame, not the knob, while adjusting the burner setting. To turn a burner off, simply rotate the control knob right (clockwise) to the OFF position.

Icon on Control Panel indicating which Burner the knob controls

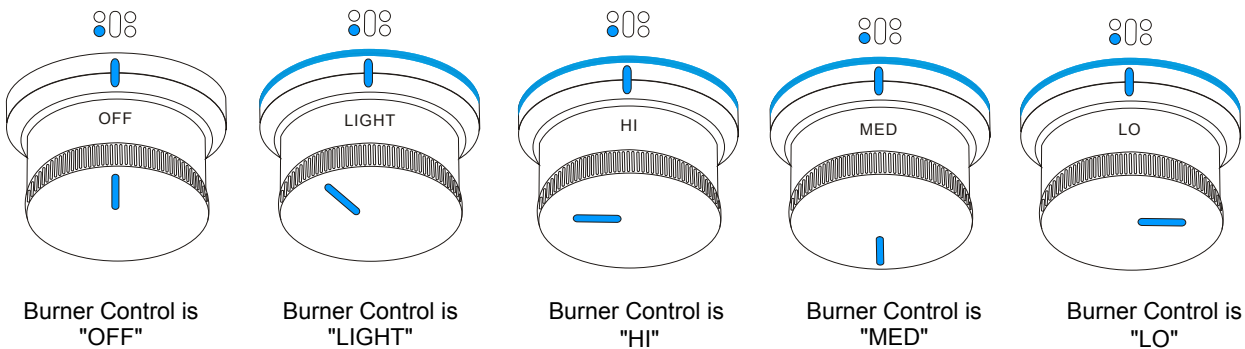


## Flame Characteristics:

Natural Gas: Burner flames should be soft blue in color and stable with no yellow tips, excessive noise, or fluttering. (Occasional yellow flicker is acceptable.)

LP Gas (i.e. Propane): Burner flames should be blue in color, with some yellow at outer edge.

If flames are completely or mostly yellow, don't light evenly around burner, or are accompanied by excessive noise or fluttering, contact a qualified service provider for repairs. Some yellow streaking is normal during the initial startup. Allow unit to operate 4-5 minutes and re-evaluate before calling for service.

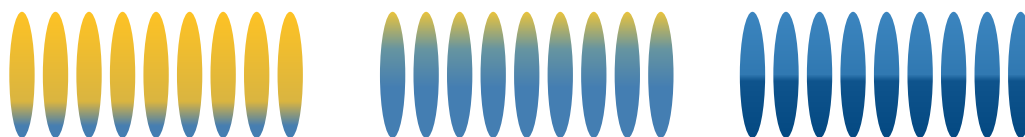

**Yellow Flames  
Call For Service**

**Yellow Tips on  
Outer Cones**

**Soft Blue Flames  
Normal For Natural Gas**

## Griddle (some models):

### ⚠ WARNING

#### FIRE HAZARD

- Use care when cooking greasy foods. Spilled grease may result in fire.
- Never place any items on the griddle when it is not in use. Heat from surrounding burners can heat the griddle and may result in fire.


### ⚠ CAUTION

#### BURN HAZARD

- Place and remove the griddle only when griddle is cool and all surface burners are off.
- Back of griddle may be hot due to oven vent location, even if cooktop has not been in use. Always place and remove griddle using pot holders or oven mitts.

The cast iron griddle provides an extra-large cooking surface for meats, pancakes, and other foods usually prepared in a skillet. Before first use, rinse with hot water and dry thoroughly. Prepare the surface with cooking spray or other preferred cooking oil. The griddle can only be used over the center oval burner of the cooktop. The griddle sits directly on top of the center grate - there is no need to remove the center grate.

To use the griddle, operate the control knob the same as for any other burner. Allow griddle to preheat approximately 10 minutes at medium power setting before use. Adjust knob setting as necessary to obtain desired results.

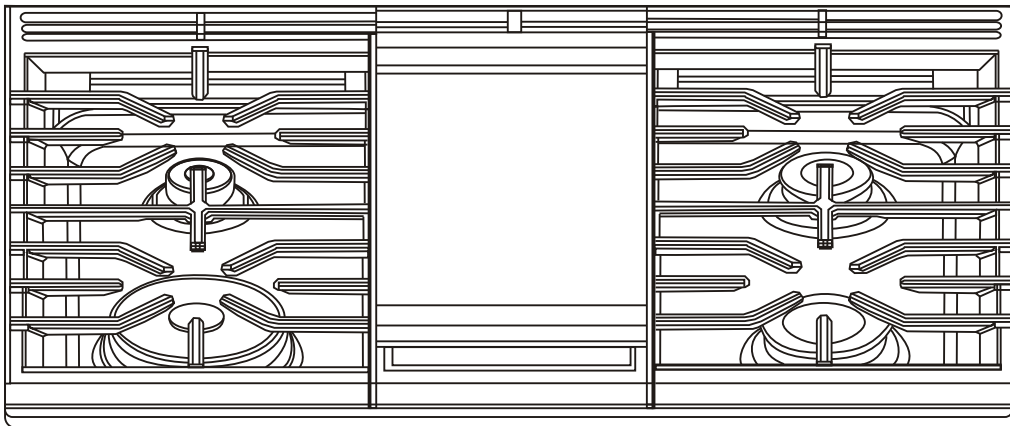

## In Case of Power Failure:

### **⚠ CAUTION**

#### **BURN HAZARD**

- Use extreme caution if lighting cooktop burners during power outage. Keep hands away from flames by using fireplace matchsticks or grill lighter with extended wand.

During a power failure, electronic ignition will not function. However, cooktop burners may be operated if lit manually.

Directions:

1. With the knob in the "OFF" position, light a match or lighter and hold flame near ports (openings around perimeter of burner top) beneath burner cap. Keep hand away from path of flames.
2. Turn knob to the "LIGHT" position.
3. Once lit, remove match/lighter and adjust knob to desired position. Burner will continue to work as normal until turned off.

# OVEN OPERATION

## **⚠️WARNING**

### **FIRE, CARBON MONOXIDE HAZARD**

- Never place anything (aluminum foil, spill mat, baking stone, cookware, etc.) on the bottom of the oven cavity. These items can trap heat or melt, resulting in damage to the appliance and risk of electric shock, smoke, or fire.
- Never cover any slots, holes or passages in the oven bottom or cover an entire rack with materials such as aluminum foil. Doing so blocks airflow through the oven and may cause carbon monoxide poisoning.
- If materials inside the oven should ignite, keep door closed, turn off the appliance, and disconnect the circuit at the circuit breaker box. Wait for the oven to cool before removing contents, cleaning oven, and restoring power.
- Cooktop grates direct vented air away from walls and cabinets. Do not operate oven without cooktop grates in place.

## **⚠️CAUTION**

### **BURN HAZARD**

- Always use pot holders or oven mitts when using the oven. Use only dry pot holders. Moist or damp pot holders on hot surfaces may result in burns from steam. Do not let pot holder touch oven burners. Do not use a towel or other bulky cloth.
- The oven is vented along the rear of the cooktop. When the oven is in use, this area may get very hot. Do not block or cover the oven vent.

### **NOTE: FOR BEST EXPERIENCE**


1. When the oven is used for the first time, the presence of a distinctive odor is normal. Ensure your kitchen is well ventilated during this conditioning period.
2. Proper preheating is important for good results. Unless the recipe specifically instructs differently, place food in the oven only after preheating is complete. For best results, place food in immediately after preheat beep is sounded.
3. It is normal for certain amount of moisture to evaporate from the food during any cooking process. The amount depends on the moisture content of the food. The moisture may condense on any surface cooler than the

inside of the oven, such as the door trim or control panel. Steam or moisture may appear at the oven vent - this is normal.


4. Do not leave the door open any longer than necessary. If the door is left open too long, the baking mode will be automatically cancelled.
5. If in operation, the convection fan will automatically shut off any time door is opened.
6. The various baking modes have a 12-hour time limit, after which the control will automatically end the baking mode. Broil mode has a 1-hour time limit. If desired, these modes can be restarted after the time limit expires.
7. To catch drips/spill, place a cookie sheet on a separate rack below the food.
8. At altitudes greater than 3,000 feet, recipes may need to be adjusted to achieve optimal results. Consult USDA or other trusted source for recommended recipe alterations for high altitude baking.

### Oven Racks:

**Flat Rack:** Versatile and low profile, each range is supplied with one or more flat oven racks. Flat racks slide in and out of oven on rack guides formed into side of oven wall. Multiple racks can be used simultaneously, if desired. REMOVE DURING SELF-CLEAN TO PREVENT DISCOLORATION. If racks do not move smoothly, a thin application of vegetable oil can be applied to edges of rack using the corner of a paper towel to reduce friction. Apply vegetable oil then wipe off any excess before use.

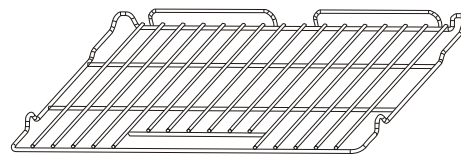

**Extension Rack:** Slides in and out of oven on ball bearing slides, allowing heavier dishes to be moved smoothly and easily. REMOVE DURING SELF-CLEAN TO PREVENT DISCOLORATION AND DAMAGE TO BALL BEARING SLIDES. If ball bearing slides do not move smoothly, they can be lubricated with graphite powder lubricant. Do not lubricate with grease or oil.

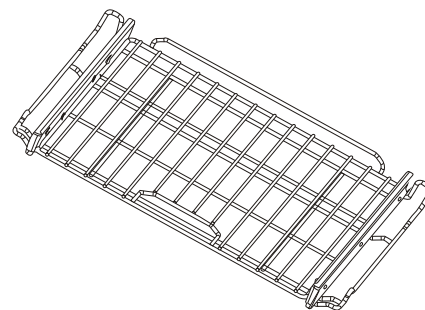

## Removing/Inserting Racks:

### ⚠ CAUTION


#### BURN HAZARD

- Always place oven racks in the desired location while oven is cool. If rack must be moved while oven is hot, do not let pot holder contact hot oven surfaces.

Removing Rack: Racks are designed to stop before coming completely out of the oven to reduce the risk of dropped or spilled foods.


To remove the rack:

1. Remove all food and utensils from rack
2. Grasp firmly from both sides
3. Pull rack out until it contacts the stop position
4. Lift up on the front of the rack and continue pulling outward

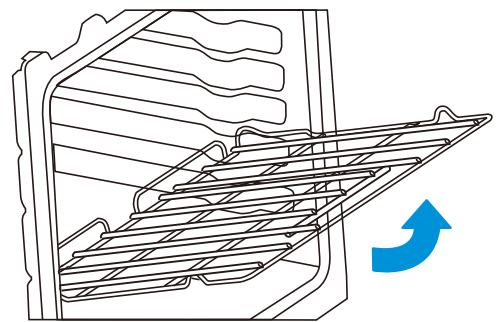

Inserting Rack: The rack can be installed in only one direction. To insert the rack:


1. Orient the rack so that the handle is towards the front and the interlock features are on the top side.
2. Tip rack so that the front is several inches higher than the back.
3. Slip the interlock features under the stop position on the rack guides formed in the oven walls.
4. Rotate rack down while pushing back to complete the insertion process.

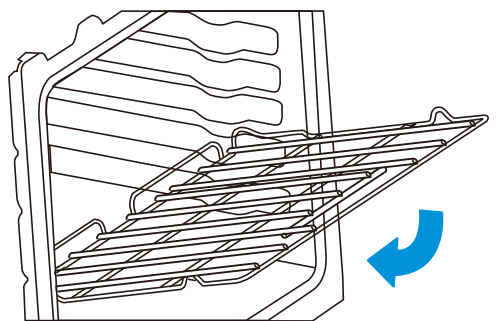

**NOTE:** The extension rack frame inserts into the rack guides formed into the oven wall in the same manner as the flat rack. Be careful to hold the extension rack firmly so that the ball bearings do not slide during the removal/insertion process.

## Rack Positions:

For best performance, adjust rack so food is placed at the center of the oven. For most foods this will be rack position #4. For larger foods like roasts and turkey, move the rack position down to #3 or #2 to keep the food centered in the oven. When using multiple racks simultaneously, try to space the food out around the oven center (rack position #3 and #5 for two racks). Broiling performs best with the food close to the broil burner - typically rack position #6 or #7.

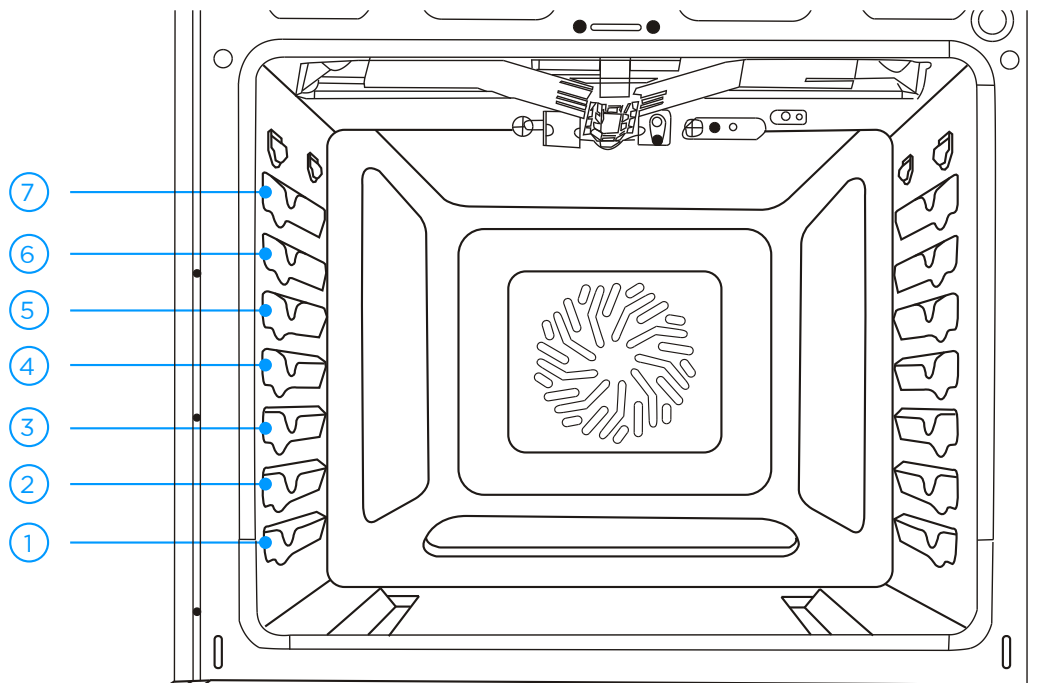

## Preheating:

For oven modes that require preheating, the control will automatically enter preheat mode after "START/ENTER" is pressed. Preheating is generally desirable, although not absolutely necessary in all circumstances. Some foods are more robust and may have acceptable results without preheating. These foods include large pieces of meat (whole roasts, hams, or poultry) where the total cooking time is much longer than the time required to preheat. These foods also include frozen potato products and frozen processed dinners that, by their nature and design, are more robust to baking variations. More delicate foods, such as breads (including cakes, cookies, pastries, and pizzas), desserts, soufflés, etc. will likely not have acceptable results without proper preheating.

If a baking mode (Bake, Convection Bake, Convection Roast, Pizza, etc.) utilizes preheat, after "START/ENTER" is pressed, the temperature display will show the current oven temperature. The display will continue to show the oven temperature increasing until the set temperature is reached. Once the set temperature is reached, the control will beep to alert the user that preheat is complete.

### **Bake:**

Designed for general baking recipes, "BAKE" applies heat from both above and below to achieve exceptional baking performance. Works best for small- and medium-sized foods that require only one rack position at the center of the oven, such as casseroles, frozen dinners, single-layer cakes, and individual racks of cookies.

#### **Directions:**

1. Press the "BAKE" button.
2. The control will default to 350°F (175°C). If desired, and depending on your model, use either the numeric keypad or the available knob to adjust the desired oven temperature.
3. Press the "START/ENTER" button or click the Control Input Knob (if present).
4. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
5. Press "CLEAR/OFF" to exit.

### **Keep Warm (some models):**

#### **⚠ WARNING**

#### **FOODBORNE ILLNESS HAZARD**

- Bacteria may grow in food at temperatures below 140°F. Do not attempt to cook food using the "KEEP WARM" mode. This mode is designed to keep cooked foods warm, not to heat cold foods.

Designed for keeping hot foods hot. Cover dishes to prevent food from drying out. For best results, do not use "KEEP WARM" for more than 2 hours.

Directions (Control Input Knob models):

1. Press the "KEEP WARM" button.
2. Press the "START/ENTER" button or click the Control Input Knob (if present).
3. Press "CLEAR/OFF" to exit.

Directions (Numeric Keypad Input models):

1. Press the "BAKE" button twice.
2. Press the "START/ENTER" button or click the Control Input Knob (if present).
3. Press "CLEAR/OFF" to exit.

### **Broil:**

#### **NOTE:** FOR BEST EXPERIENCE

1. The broil burner is very powerful. Follow recipe directions and monitor food closely to reduce risk of burning food.
2. For broiling meat, it is recommended to use a broiling pan to allow grease and juices to drain away from the meat. Do not line broiling pan with aluminum foil, as this will prevent greases from draining properly.
3. This is a "closed-door broil" system. Broil will not operate with the door open. If the door is left open, an alert will sound to close the door. If the door is not closed, the broil mode will ultimately cancel itself.

Designed to provide similar results to grilling, "BROIL" is a method of cooking that exposes food to direct radiant heat only from the broil burner at the top of the oven. "BROIL" can be used to cook steaks or other foods where a seared exterior is preferred. It can also be used in short durations to brown tops of casseroles or melt cheese. "BROIL" performs best with food placed closest to burner, typically at rack position #6 or #7, depending on the size of the dish.

## Directions:

1. Press the "BROIL" button.
2. The control will default to "high broil." To select "low broil," press the "BROIL" button again or turn the Control Input Knob (if present).
3. Press the "START/ENTER" button or click the Control Input Knob (if present).
4. Allow broil to operate for 5-10 minutes before placing food in the oven. No preheat beep will sound.
5. Press "CLEAR/OFF" to exit.

## Proof (some models):

Designed to use the oven lights to provide a gently warm environment for the rising of bread or roll dough. In order to not kill the yeast in the dough, this mode will not start if the oven temperature is too warm. If the mode will not start, allow dough to rise on the kitchen counter. Generally, PROOF performs best with food at rack position #4. After dough has risen as desired, bake according to recipe directions.

## Directions (Control Input Knob models):

1. Press the "PROOF" button.
2. Press the "START/ENTER" button or click the Control Input Knob (if present).
3. Preheat is not required - place food in oven immediately.
4. Press "CLEAR/OFF" to exit.

## Directions (Numeric Keypad Input models):

1. Press the "BAKE" button three times.
2. Press the "START/ENTER" button or click the Control Input Knob (if present).
3. Preheat is not required - place food in oven immediately.
4. Press "CLEAR/OFF" to exit.

The word "PROOF" will be shown below the clock in the control display when this mode is active.

## Convection Bake:


Convection baking uses a fan inside the oven to circulate the air. This provides a better distribution of the oven heat and a more efficient baking process. Heat is applied to the oven from above, below, and (on some models) behind. CONVECT BAKE is designed for baking recipes that require the use of multiple racks, such as 4-layer white cakes, multiple racks of cookies, or baking multiple recipes simultaneously. CONVECT BAKE performs best with racks spaced evenly out from center of oven (see section on rack positions).

Directions:

1. Press the "CONVECT BAKE" button.
2. The control will default to 350°F (175°C). If desired, and depending on your model, use either the numeric keypad or the available knob to adjust the desired oven temperature.
3. Press the "START/ENTER" button or click the Control Input Knob (if present).
4. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
5. Press "CLEAR/OFF" to exit.

Special instructions for baking four cake layers simultaneously:

1. Use convection bake mode
2. Place racks at positions 2 and 4
3. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
4. Place layers on rack 4 towards the back of the oven, and layers on rack 2 towards the front of the oven so that one pan is not directly above another.

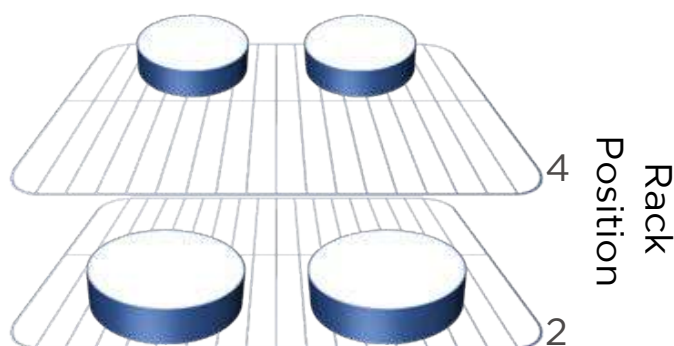

Special instructions for Air-Frying and getting crispy foods from your oven:

1. Place oven rack at position 5 (closer to broiler)
2. Press "CONVECT BAKE" button.
3. The control will default to 350 F(175°C). Adjust temperature based on the food to cook (see attached chart).
4. Press the "START/ENTER" button or click the Control Input Knob (if present).
5. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
6. Use any flat, non-stick cookie sheet.
7. Adjust time, temperature or rack position based on your preferences.
8. Place food inside the oven and cook per recommended time. (see chart below).

<b>Foods recommended</b>	<b>Temp[°F]</b>	<b>Cook time[min]</b>
Frozen Fries	475	18
Fresh Fries*	475	22
Frozen Wings	450	40
Fresh Wings	450	30
Frozen Mozzarella Sticks	475	6
Frozen Chicken Nuggets	440	13
Brussel Sprouts	440	15
Breaded Chicken Breasts	400	30

**\*NOTE**

For more even and crispy results, flip foods half way through the cooking time.

**Convection Roast (some models):**

Convection roasting uses a fan inside the oven to circulate the air. This provides a better distribution of the oven heat and a more efficient baking process. Heat is applied to the oven from above, below, and (on some models) behind. CONVECT ROAST is designed for cooking large pieces of meat, such as roast, ham, turkey, or chicken, providing crisp skin on poultry and better browning on roasts.

Directions:

1. Press the "CONVECT ROAST" button.
2. The control will default to 350°F (175°C). If desired, and depending on your model, use either the numeric keypad or the available knob to adjust the desired oven temperature.
3. Press the "START/ENTER" button or click the Control Input Knob (if present).
4. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
5. Press "CLEAR/OFF" to exit.

### **Pizza (some models):**

This mode uses customized heating algorithm to optimize baking performance for fresh pizza. Fresh pizza can be homemade or from purchased many grocery stores or specialty shops.

Directions:

1. Press the "PIZZA" button.
2. The control will default to 350°F (175°C). If desired, and depending on your model, use either the numeric keypad or the available knob to adjust the desired oven temperature.
3. Press the "START/ENTER" button or click the Control Input Knob (if present).
4. Allow oven to preheat before placing food in oven. Higher temperatures will take longer to preheat. Oven display will show oven temperature as it increases. Control will beep when preheat is complete.
5. Press "CLEAR/OFF" to exit.

### **Delay (some models):**

#### **⚠WARNING**

#### **FOODBORNE ILLNESS HAZARD**

- Foods that spoil easily, such as milk, eggs, fish, stuffing, poultry, and pork, should not be allowed to sit for more than 1 hour before cooking. Spoilage may occur sooner if oven is warm.

Designed to allow user to delay the start of a baking operation until a specified time of day. Works only with "BAKE," "KEEP WARM," "CONV BAKE," "CONV ROAST," "PROOF," "SELF-CLEAN," and "STEAM-CLEAN." (Does NOT work with "PIZZA" or "BROIL.") Once "DELAY" has been set, it cannot be modified



- oven operation must be cancelled and restarted from the beginning to set a different "DELAY" value. "DELAY" cannot be set for more than 12 hours in advance.

#### Directions:

1. Select oven baking mode by pressing the appropriate button (i.e. "BAKE," "CONV BAKE," etc.)
2. Press the "DELAY" button.
3. Clock will begin to flash, indicating that a time of day to start the oven must be entered. Enter the time of day when the oven is to begin operation and press the "START/ENTER" button or click the Control Input Knob (if present).
4. Place food in the oven.
5. Display will alternate between the current time of day and the time when the oven will turn on. Also, the words "DELAY START" will be shown above the clock in the control display when this mode is active.
6. When the start time is reached, a signal will alert user that oven is starting. Upon starting, the display will convert to show the normal information for the bake mode selected.

#### Cook Time (some models):

Designed to allow user to end oven operation after a specified time. Works only with "BAKE," "KEEP WARM," "CONV BAKE," or "CONV ROAST." Once a "COOK TIME" has been set, it cannot be modified - baking mode must be cancelled and restarted from the beginning to set a different "COOK TIME." Duration cannot be set for longer than 12 hours. Can be used in conjunction with "DELAY" feature - set "DELAY" feature first (see above), and then set "COOK TIME."

#### Directions:

1. Start oven operation normally as described above.
2. Press the "COOK TIME" button.
3. Clock will display "00:00" indicating that a time duration must be entered. Enter time in hours and minutes (hh:mm) and press the "START/ENTER" button or click the Control Input Knob (if present).
4. Clock will begin to count down. When "00:00" is reached, the display will flash and sound an alert to indicate the bake mode has ended. Oven will either turn off or revert to "KEEP WARM" mode, depending on the settings. (See Control Settings section of this manual for instructions on changing settings.)
5. Press "CLEAR/OFF" to clear the signal or to exit the timed bake early.

## Probe (some models):

### **⚠️WARNING**


#### **FOODBORNE ILLNESS & BURN HAZARDS**

- Consuming undercooked food can result in foodborne illness. Use probe feature only according to the following instructions to ensure all portions of the food reach minimum safe cooking temperatures. Consult reputable government sources, such as USDA, FDA, or CDC, for recommended safe minimum cooking temperatures.
- Check the internal temperature at multiple locations with a food thermometer after cooking to ensure that all portions of the food have reached the minimum safe internal temperature for that food.
- If oven has been preheated, use oven mitts to open the receptacle and insert probe to avoid burn injury.
- Use only the probe supplied with your oven - do not use any accessories not specifically designed to work with your appliance.

Designed to work in conjunction with "BAKE," "CONVECT BAKE," or "CONVECT ROAST," the oven probe supplied with your oven can monitor the internal food temperature and turn off the oven when the food reaches the desired temperature. Some foods, particularly small or thin items, are not suited for cooking with the probe due to their size or shape. Position rack at optimal position prior to preheating or initiating the "PROBE" function.

#### Directions:

1. Place meat in an appropriate baking dish or pan. Insert meat probe into meat. Use only the probe provided with your appliance. To avoid damage to the probe, meat should be completely defrosted prior to inserting probe.
  - 1) Position probe so that the tip is in the approximate center of the thickest part of the food. For whole poultry, insert the probe into the thickest part of the breast.
  - 2) For best results, insert at a point that allows as much of the probe to be inserted into the food as possible.
  - 3) The probe should not touch bone, fat, or gristle.
2. Place baking dish into oven, plug probe into receptacle, and close the door. Preheating is not required.

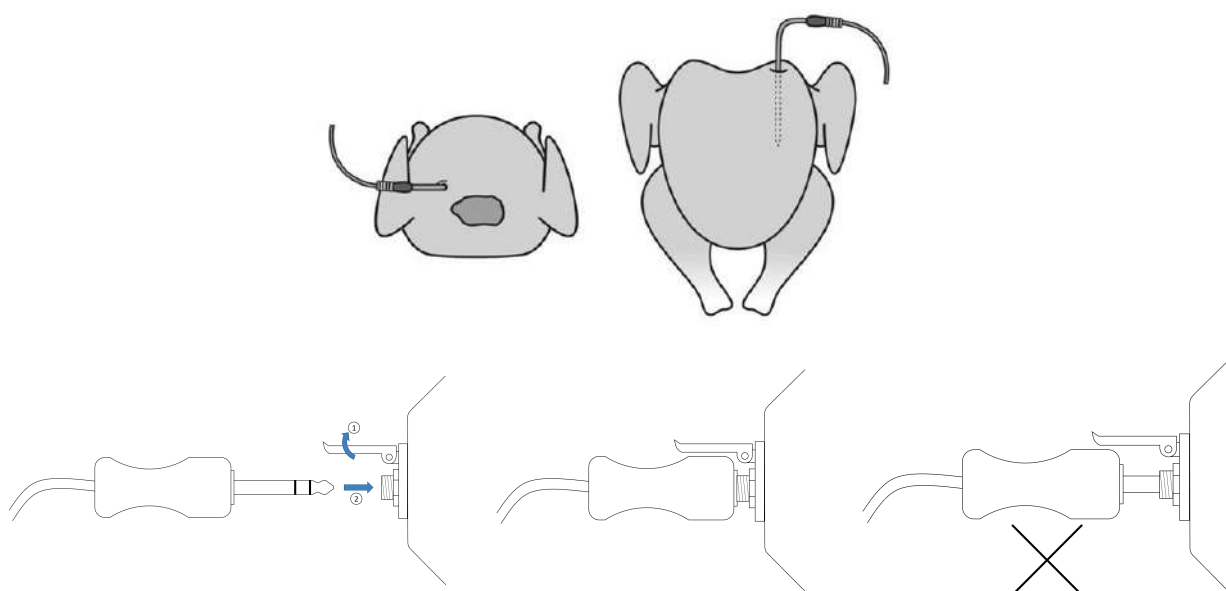

3. Select the baking mode ("BAKE," "CONV BAKE," or "CONV ROAST"), select oven temperature, and press the "START/ENTER" button or click the Control Input Knob (if present).
4. Once oven temperature has been set, the blue text and probe icon will flash, indicating that the desired food temperature is to be set next. Adjust food temperature to the desired value and press the "START/ENTER" button or click the Control Input Knob (if present).
5. While the probe mode is in operation, the display will alternate between the oven set temperature and the probe temperature reading.
6. Once the oven probe reaches the desired temperature, the display will flash and sound an alert to indicate the bake mode has ended. Oven will either turn off or revert to "KEEP WARM" mode, depending on the settings. (See Control Settings section of this manual for instructions on changing settings.)
7. Press "CLEAR/OFF" to clear the signal or to exit the probe bake mode early.

### Modifying the probe temperature:

1. On Control Input Knob models with a separate "PROBE" key on the oven control, pressing this key allows user to change the desired food temperature at which the bake cycle will end.
2. On Numeric Keypad Input models, the desired food temperature cannot be modified. The bake mode must be ended by pressing the "CLEAR/OFF" key and re-entering the bake mode and desired food temperature as described above.

## Sabbath Mode:

Designed for use on Jewish Sabbath and holidays, this mode has been certified to comply with the standards set forth by Star-K. For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit <http://www.star-k.org>.



When in Sabbath Mode, the oven operation may be controlled as described below, however audible signals will not sound, the clock is disabled, oven lights are disabled, and changes to the display may be delayed from 30 to 60 seconds. (There is no need to remove oven lightbulbs during Sabbath Mode.) The oven will be allowed to operate indefinitely until Sabbath Mode is exited, overriding the factory 12-hour default maximum continuous oven operation. Baking during Sabbath Mode is a two-step process; first the Sabbath mode must be selected and then the bake mode must be set.

### Entering Sabbath Mode:

1. Select the "SETTINGS" button, select the **SAB** option, and turn this setting to "ON." See Control Settings section of this manual for instructions on changing settings.
2. A single bracket "]" will appear in the display, indicating that Sabbath Mode is active.

### Controlling the Oven:

1. During Sabbath Mode, the function of the buttons on the control are modified to perform the functions described in the diagrams below.
2. For continuous baking operation, select the button corresponding to the desired oven temperature, then press the "START/ENTER" button.
3. For a timed baking operation, select the button corresponding to the desired oven temperature, then select the button corresponding with the operating time, then press the "START/ENTER" button.
4. After having pressed the "START/ENTER" button, a random delay between 30 and 60 seconds will pass, and a second bracket "]" [" will appear in the display, indicating that the oven has started baking.

- Temperature can be adjusted at any time by pressing the button corresponding to the desired oven temperature, then pressing the "START /ENTER" button.
- Press the "CLEAR/OFF" button to cancel any baking operation in progress. After a random delay between 30 and 60 seconds, the display will return to a single bracket "]".

Control Input Knob Models

Function During Sabbath Mode:	<b>BAKE</b>	<b>BROIL</b> Hi / Low	<b>CONVECT BAKE</b>	<b>PIZZA</b>	<b>STEAM CLEAN</b>
	Bake 200F	Bake 250F	Bake 300F	Bake 350F	Bake 400F
	<b>KEEP WARM</b>	<b>PROOF</b>	<b>CONVECT ROAST</b>	<b>PROBE</b>	<b>SELF CLEAN</b>
	90 minutes	2 hours	3 hours	4 hours	5 hours

Numeric Keypad Input Models

Function During Sabbath Mode:	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>
	Bake 200F	Bake 250F	Bake 300F	Bake 350F	Bake 400F
	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>0</b>
	90 minutes	2 hours	3 hours	4 hours	5 hours

### Exiting Sabbath Mode:

- Quickly press the "SETTINGS" button three times to reopen the settings menu.
- Locate the Sabbath Mode setting, and change this setting to "OFF."

NOTE: If a power outage occurs while in Sabbath Mode, when power is restored the appliance will return to Sabbath Mode, but it will not resume any baking operations that may have been in progress.

## Steam-Clean (some models):

### ⚠CAUTION


#### BURN HAZARD

- Oven surfaces - especially oven bottom - may be hot. Use caution to avoid contact with hot surfaces.
- Hot surfaces may create hot steam in wet sponge or cloth while cleaning. If steam is evident when wiping out oven, wait until oven has cooled slightly.

Designed to generate steam and gently warm the oven surfaces to loosen grease and light soils.

Directions:

1. Start with oven at room temperature.
2. Remove all items from oven, including oven racks.
3. Wipe out any large spills or excess debris prior to starting steam-clean. Scrape off and remove any burnt-on debris with a stiff plastic utensil (hard plastic spatula, plastic paint scraper, old credit card, etc.)
4. For improved softening of tough stains, spray inside surfaces with water spray bottle or wipe surfaces with a wet sponge before starting.
5. Pour 1 cup (8 oz.) of water in the center bottom of the oven and close the door.
6. For Control Input Knob models, press "STEAM-CLEAN" button. For Numeric Keypad Input models, press "CLEAN" button once.
7. Press the "START/ENTER" button or click the Control Input Knob (if present).
8. Door does not lock during steam clean - do not open door until steam clean cycle has fully completed.
9. After steam-clean cycle is complete, soak up any remaining water from oven bottom and wipe down surfaces within oven with soft, damp, non-abrasive sponge or cloth.
10. Press "CLEAR/OFF" to exit at any time.

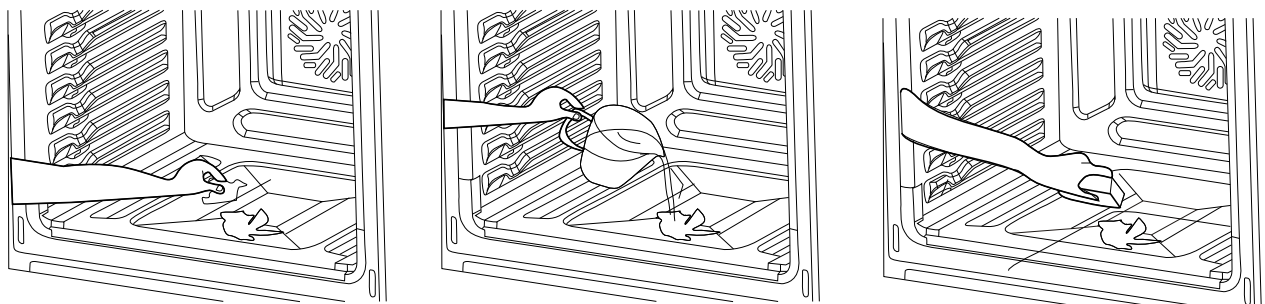

## Self-Clean:

### **⚠WARNING**

#### FIRE & BURN HAZARDS

- Read and follow instructions in the "Self-Clean Hazards" section at the beginning of this manual before using self-clean.

#### **NOTE:** FOR BEST EXPERIENCE

1. Due to the high temperatures generated, it may be preferable to delay using the self-clean feature until the weather is colder to avoid unnecessarily burdening the home air conditioning system.
2. Your oven can be set to operate self-clean for 3, 4, or 5 hours. This time does not include the time required for the oven to cool down and unlock. (Allow an addition 60 to 90 minutes for door to unlock.)
3. Shorter times use less energy, but longer times generally provide more thorough cleaning. To conserve energy, use shorter times for light to moderate soiling, and use longer times only for heavy soiling.

Designed to generate very high oven temperatures that are capable of reducing stubborn oven soils to ash that can be easily wiped out after the oven has cooled.

#### Directions:

1. Remove all items from oven, including oven racks.
2. Wipe out any large spills or excess debris prior to starting self-clean.
3. For Control Input Knob models, press "SELF-CLEAN" button. For Numeric Keypad Input models, press "CLEAN" button TWICE.
4. Select the number of hours you wish self-clean to operate and press the "START/ENTER" button or click the Control Input Knob (if present).
5. Oven door will lock while self-clean is performed.
6. After oven has unlocked and cooled completely, wipe out any ashy residue with a damp, non-abrasive sponge or cloth.
7. Press "CLEAR/OFF" to exit at any time. If self-clean is cancelled early, the oven will remain locked until it has cooled sufficiently.

## Control Lock:

Allows user to disable the buttons on the control to prevent accidental operation of the oven from pets or children, or while cleaning controls. For safety reasons, the "CLEAR/OFF" button is never disabled. CONTROL LOCK can be enabled after a baking mode has been started.

Directions: Hold "CONTROL LOCK" button for 3 seconds to activate or deactivate this feature.





## WiFi (Remote Operation):


Allows use of most oven functions using a connected smart device, such as smart phone or tablet. Remote operation has two modes: Manual and Auto Recipe. Manual mode allows you to turn on/off selected oven operations manually using a smart device. Auto Recipe mode allows you to program a series of oven operations that will sequence and end automatically according to the settings selected.

Provides the ability to monitor oven and cooktop operation, and control selected oven functions. Follow the instructions in the app for more details.



WiFi must be enabled at the range control before remote operation can be used. See app connection instructions in the "Preparing for First Use" section in this manual. The connected  icon in the display section (located left of the clock) will indicate your connection status and whether remote operation is enabled:

1. Icon is off: WiFi has not been turned on. Press the  icon to turn on WiFi capability
2. Icon is flashing slowly: WiFi has been turned on, but it is not connected. Follow the instructions under "Preparing for First Use" in this manual.
3. Icon is flashing quickly: WiFi is in the process of connecting to your home network. Follow app instructions.
4. Icon is solid: WiFi has successfully connected to your home network, and the range can now be controlled via the MSmartLife app.

Directions: Simply press the  button to activate or deactivate the WiFi functionality. To disable remote operation from smart devices, deactivate the WiFi feature.

## Timer:

Midea ovens come equipped with a built-in kitchen timer function for your convenience.

Directions:


1. Press "TIMER" button.
2. Clock will display "00:00". Enter time in hours and minutes (hh:mm) and press the "START/ENTER" button or click the Control Input Knob (if present).
3. Clock will begin to count down. When "00:00" is reached, timer will signal.
4. Cancel or clear the timer function by pressing the "TIMER" button. ("CLEAR/OFF" is reserved for canceling baking modes only.)

## Oven Light:

Controls the oven lights.


Directions (Control Input Knob models):

1. Press the "OVEN LIGHT" button to cycle oven light on/off

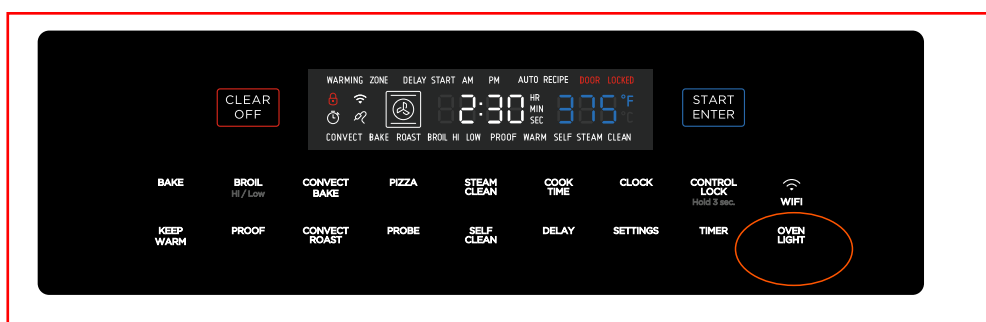

Directions (Numeric Keypad Input models):

1. Use the "OVEN LIGHT" knob to the right of the control to turn oven light on/off

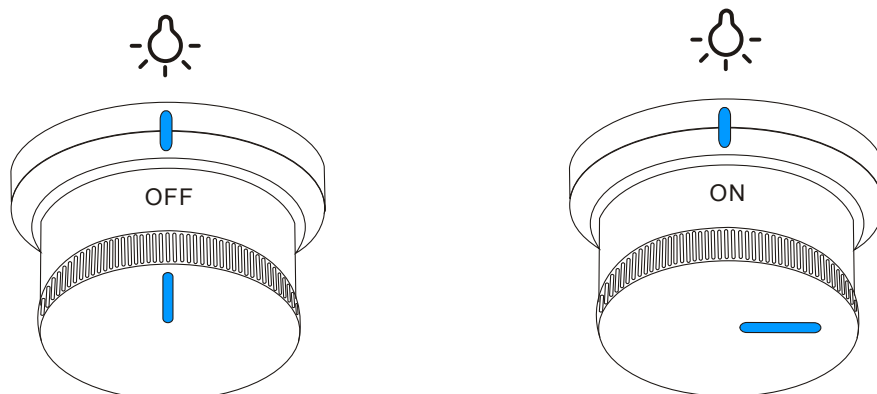

## In Case of Power Failure:

During a power failure, the oven is inoperable and no attempt should be made to operate it.

# CONTROL SETTINGS

## Settings:

Midea ovens are provided with a variety of settings available to help you customize the appliance to your personal preferences. The ability to adjust settings is only available when no other oven operation is in progress.

Navigation of the settings menu:

1. Enter the settings menu by pressing the "SETTINGS" button on the control panel. The first menu option will be displayed in white (flashing) with the current setting displayed in blue (solid).
2. Depending on the model, use the Control Input Knob or "+" and "-" buttons to navigate menu options.
3. Press the "START/ENTER" button or click the Control Input Knob (if present) to select a menu option to be adjusted. The menu option selected will turn solid, and the blue setting will begin to flash, indicating the setting can now be adjusted.
4. Depending on your model, use the selector knob or "+" and "-" buttons to adjust the setting value.
5. Press the "START/ENTER" button or click the Control Input Knob to confirm modification to setting value, or use "SETTINGS" or "CLEAR/OFF" buttons to reject modifications and return to the menu options level.
6. Press "SETTINGS" or "CLEAR/OFF" again to exit the settings menu entirely.

The image shows the text "CAL" in a white, digital-style font on a black background, representing the Oven Calibration setting.

Oven Calibration - If you find your oven is running hotter or colder than expected, based on the outcome of recipes with which you are very familiar, the oven calibration setting allows you to offset oven's target temperature in order to achieve the results you desire. Calibration can be offset between -25 and +25 degrees Fahrenheit. Default offset is zero.

The image shows the text "CLOCK" in a white, digital-style font on a black background, representing the Clock setting.

Clock - Only present on models where no dedicated "CLOCK" button is available on the control. Used to set the time of day on the display clock.

The image shows the text "DEG" in a white, digital-style font on a black background, representing the Degree Units setting.

Degree Units - Your oven is programmed by default to use degrees Fahrenheit, but it can be set to operate in degrees Celsius using this setting.

A digital display showing the text "d 15P" in a white, segmented font on a black background.

Display Brightness - The user interface is programmed by default to operate at maximum brightness. If desired, you can reduce the brightness of the display using this setting. Reducing the brightness will reduce the standby energy usage of the oven control and could extend the life of the display.

A digital display showing the text "hold" in a white, segmented font on a black background.

Hold After Cook - When using the timed bake function, by default the oven will turn off when the time expires. You have the option to have the oven switch to "Warm Mode" at the end of a timed bake function by altering this setting.

A digital display showing the text "Sabb" in a white, segmented font on a black background.

Sabbath Mode - For customers who observe the Jewish Sabbath, selecting this mode will place the range into an operating mode compliant with the standards set forth by Star K. Complete details on the operation of Sabbath Mode are found in a dedicated section within this manual. For further assistance, guidelines for proper usage and a complete list of models with the Sabbath feature, please visit the web at <http://www.star-k.org>.

A digital display showing the text "Vol" in a white, segmented font on a black background.

Volume - The audible feedback of the control is programmed by default to operate at the maximum level. If desired, you can reduce the volume using this setting.


A digital display showing the text "SALE" in a white, segmented font on a black background.

Demo (Sales) Mode - This sets the appliance for "demo mode." In this mode, the controls will function as normal but will not allow any cooking mode to be initiated. This is intended to be used only by retailers on showroom floors, and is not intended to be used once the appliance has been purchased. By default, demo mode is off.


# CLEANING AND MAINTENANCE

## ⚠️WARNING

### Tip-Over Hazard

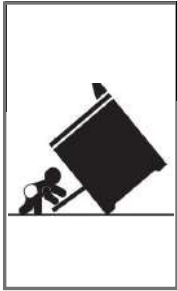

1. If range is moved for cleaning, servicing, or any other reason, confirm the anti-tip device is engaged per the installation instructions.
2. A child or adult can tip the range and be killed.
3. Failure to follow these instructions can result in death or serious burns to children and adults.

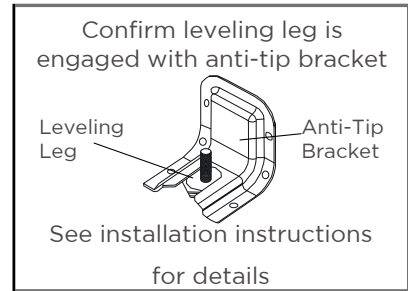

### Control Lock:

If desired, the oven control can be disabled during cleaning by pressing and holding the "CONTROL LOCK" button for 3 seconds. Re-enable the controls by again holding the "CONTROL LOCK" button for 3 seconds.

### Cooktop:

## ⚠️CAUTION

### BURN, INHALATION HAZARDS

- Clean cooktop with caution - To avoid steam burns, do not use wet sponge or cloth while cooking area is hot.
- Some cleaners can produce noxious fumes if applied to a hot surface. Allow cooktop to cool completely before applying any cleaning chemicals.

For best results and prolonged cooktop life, it is recommended to clean the cooktop after each use. Follow these instructions for best results:

Directions:

1. Make sure the cooktop, including grates and burners, are completely cool.
2. Remove burner grates and set aside.
3. Clean burners one at a time to avoid mixing up burner locations and/or burner caps. See detailed instructions for cleaning of cooktop burners below. With burners removed, avoid having debris wiped inside burner openings in cooktop. Carefully wipe out any debris from inside burner openings in cooktop with a dry paper towel, making sure to not push any debris, water, or cleaning material into hole in brass orifice.

4. Clean stainless steel surfaces with general purpose stainless steel cleaner. Follow instructions provided with cleaning compound. Rub in direction of brushed finish. Repeat as necessary to remove all soils. Dry thoroughly to prevent corrosion and water marks.
5. Clean enameled surfaces and around burner bases with general purpose kitchen cleaner. Follow instructions provided with cleaner. Repeat as necessary to remove all soils. Dry thoroughly to prevent corrosion and water marks.
6. Wash griddle and grates by hand with warm soapy water. To prevent corrosion, do not soak in water. Do not wash in dishwasher. For stubborn soils, a plastic scouring pad or stiff nylon brush may be used.

## Cooktop Burners:

### **⚠CAUTION**



#### **BURN, INHALATION HAZARDS**

- Follow instructions carefully to ensure burners are located and assembled correctly for proper combustion.

Clean burners one at a time to avoid mixing up burner locations and/or burner caps.

Directions:

1. Remove cap from burner and wash with warm soapy water. Do not wash in dishwasher. For stubborn soils, a plastic scouring pad or stiff nylon brush may be used. Dry thoroughly.
2. Remove burner from cooktop. Dump out any debris found inside burner. Wash with warm soapy water. Do not wash in dishwasher. For stubborn soils, a plastic scouring pad or stiff nylon brush may be used. Check that no debris remains inside burner ports (openings around perimeter of burner top). Dry thoroughly.
3. Replace burner and burner caps onto cooktop at correct locations and in correct orientation. See images below for proper assembly and alignment.

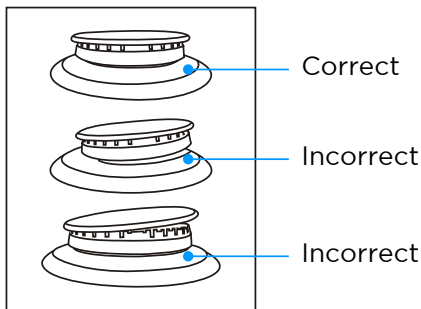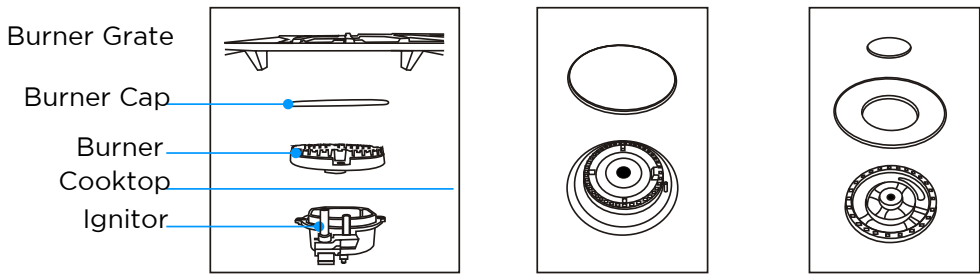

**Control Panel:**

**⚠ CAUTION**

**ELECTRIC SHOCK HAZARD**



- Do not use excessive amounts of water or cleaners to clean knob areas. If moisture is forced into openings behind knobs, there is a potential for electric shocks.
- Avoid spraying kitchen cleaners directly into the openings behind knobs.

**NOTICE**

**TO PREVENT COSMETIC DAMAGE**

- Do not use scouring pads, abrasive cleaners, strong liquid chemicals, steel wool, or oven cleaners, as these may damage the control panel finish.

For best results, it is recommended to clean the user interface and control panel after each use. Control knobs can be removed for easier cleaning. Ensure knobs are in the "OFF" position before removing. Pull straight back with a firm pressure to remove knob from stem. Clean entire panel with a lightly damp, non-abrasive cloth using mild soap and water. Glass cleaner can be used on oven control to remove streaks. Stainless steel cleaner can be used on the exposed metal to remove streaks. Knobs should be washed by hand in warm soapy water - do not wash in dishwasher. Be sure to align profile in knob to stem shape to ensure smooth fit and avoid damage to knob or control.

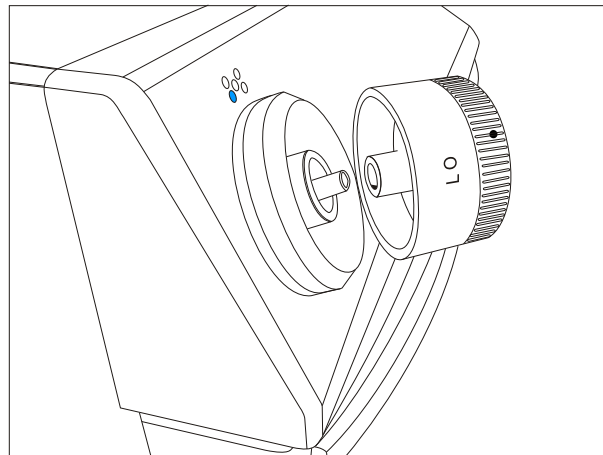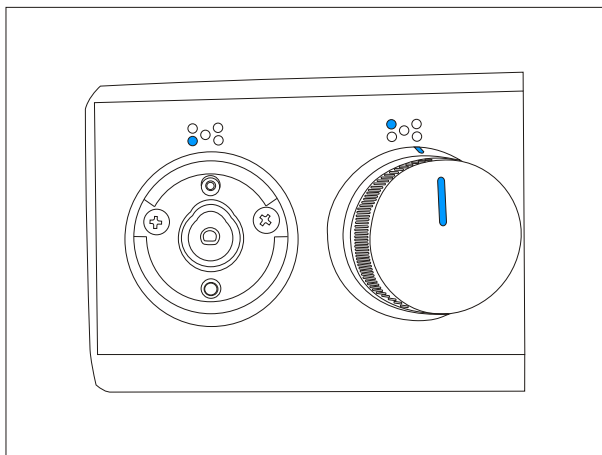

## Oven Interior:

### ⚠CAUTION

#### BURN HAZARD

- Oven surfaces - especially oven bottom - may be hot. Use caution to avoid contact with hot surfaces.
- Hot surfaces may create hot steam in wet sponge or cloth while cleaning. If steam is evident when wiping out oven, wait until oven has cooled slightly.

Check oven after each use to determine if any spills or splattering occurred that require cleaning. Wipe out oven interior with a lightly damp, non-abrasive cloth using mild soap and water to remove light spills. Follow the STEAM-CLEAN instructions under "Oven Operation" to remove moderate soiling. For stubborn or heavy soiling, follow the SELF-CLEAN instructions under "Oven Operation."


## Oven Lights:

### ⚠CAUTION

#### SHOCK, BURN, AND LACERATION HAZARDS

- Disconnect power to oven and wait until oven is cool before attempting to service light bulbs.
- Handle glass cover carefully to reduce risk of breakage. If lamp cover is difficult to remove, do not force. Contact a qualified service provider for repairs.
- Do not operate oven without glass cover in place.


Oven lamps are located in the top of the oven, close to the oven door. To replace the light bulb, first twist glass cover to unscrew it from base. Light bulb can be removed by pulling firmly straight out from the light socket. Replace bulb only with G8 style 120V halogen bulb rated 25W or less. Twist glass cover back onto lamp socket before using oven.

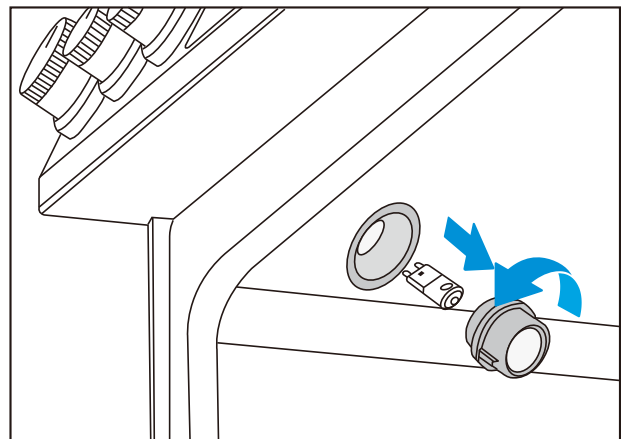

#### Drawer:

Clean drawer by wiping down interior surfaces with soft, damp, non-abrasive sponge or cloth. Removal of drawer is not required for cleaning, but can be done if desired. To remove drawer, fully extend drawer and operate the release levers on each side while pulling lightly on drawer.

To reinstall the drawer, align the rails on the drawer with the slides on the range and push drawer in until fully closed. Open and close drawer to ensure slide rails are operating properly.

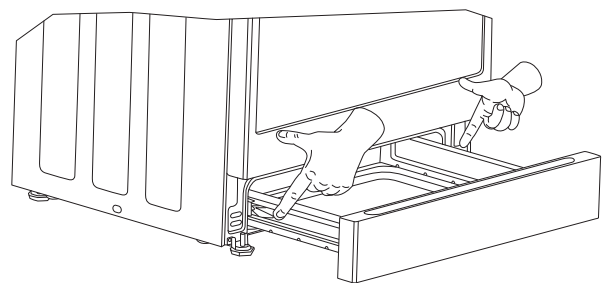

## Door:

### **⚠️WARNING**

#### **FIRE HAZARD**

- To maintain proper door seal during baking operations and self-clean, do not rub or clean the door gasket. It has a very low resistance to abrasion.
- If the gasket becomes worn, frayed, or damaged in any way, contact a qualified service provider for repair.
- If door is removed, confirm that door operates correctly and seals properly when reinstalled. If door gasket does not seal completely, heat escaping from around doors could ignite cabinetry

### NOTICE




#### **TO PRESERVE APPEARANCE**

- To prevent streaking of internal door glass, do not allow excess water or spray cleaner to enter any holes or slots in the door.
- Do not use scouring pads, abrasive cleaners, strong liquid chemicals, steel wool, or oven cleaners, as these may damage the door finish.

Clean door as frequently as desired to remove dust, splatter, and fingerprints. Wipe door surfaces with a lightly damp, non-abrasive cloth using mild soap and water. Burned-on residue on interior door glass can be cleaned with glass cleaning compound and/or razor scraper. Enameled portions of the door interior can be cleaned using soapy water and a non-abrasive sponge. Glass cleaner can be used on door glass to remove streaks. Stainless steel cleaner can be used on the exposed metal to remove streaks.



Door can be removed for easier cleaning, servicing, or installation:

1. Open door fully.
2. On each door hinge, flip down the lock mechanism so that it engages with the door when the door is rotated towards being closed.
3. Once both lock mechanisms are engaged, continue to rotate door until 2-3 inches from being fully closed.
4. Grasp door firmly from the sides and lift door up and out from oven face. Do not lift door by door handle to reduce risk of broken door glass.

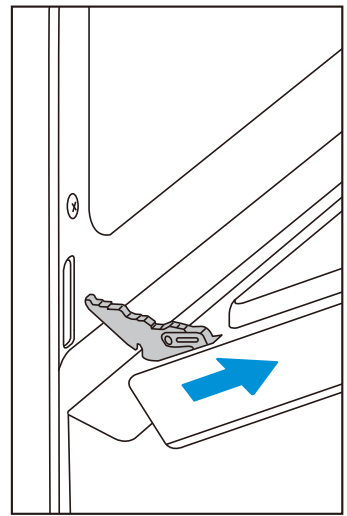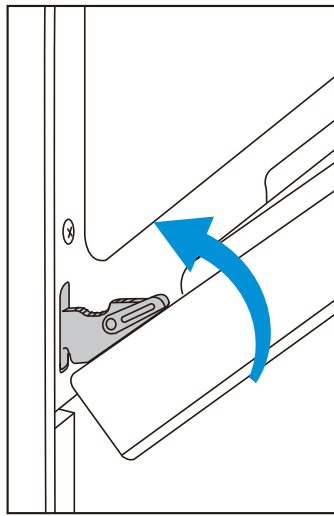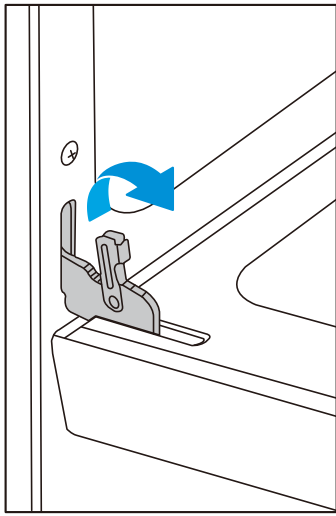

### Reinstalling door:

1. Holding door from the sides, align door so that hinges slip back into openings.
2. Rotate door until 2-3 inches from being fully closed, allow door to drop into notches on hinges.
3. Rotate door out until fully open.
4. Flip the hinge locking mechanism back up and away from the door.
5. Check that door opens and closes correctly.
6. If door does not operate correctly, re-engage locking mechanisms, remove door, and reattempt installation.

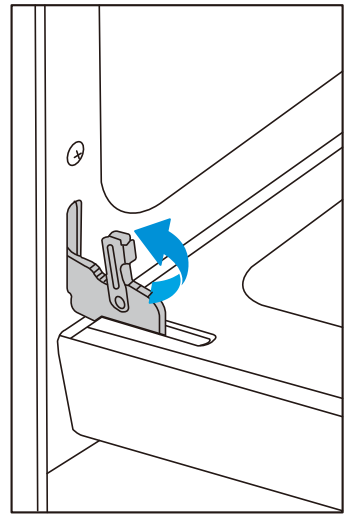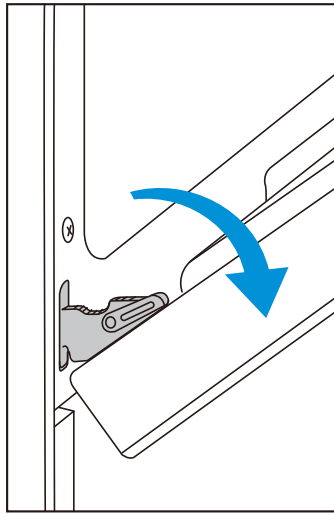







# TROUBLESHOOTING (read before calling for service)

Midea is committed to providing you with a quality appliance that works as expected. If you find something that is not working as anticipated, check the table below for helpful hints and advice that might save you the time and expense of calling for repair.

Cooktop:	
Problem:	Possible Reason:
<b>MSmartLife app will not control cooktop</b>	Cooktop cannot be controlled through MSmartLife app.
<b>Burners do not light</b>	If control panel display is not lit, appliance may not be receiving power - check circuit breaker or fuse has not tripped and that cord is properly plugged in.
	If control panel display is operating, check the following: <ul style="list-style-type: none"> <li>• Gas shut off valve is in the ON position and the gas supply to the house is not shut off</li> <li>• Burners and burner caps are properly positioned on cooktop</li> <li>• Burner ports (openings around perimeter of burner top) are not clogged</li> <li>• The igniters are clean, dry, and sparking to the burners</li> </ul>
<b>Unable to maintain a rolling boil or will not cook fast enough.</b>	Improper cookware - Only use pans with flat bottoms and that match the diameter of the cooktop burner selected. Adjust flame so that flame does not extend beyond edge of pot.
	Large pots and pans can lose a lot of heat from the top - cover pan with a lid to retain heat better.
<b>Flames around burners are not even</b>	Ensure burner cap is seated properly on burner and ports (openings around perimeter of burner top) are not clogged
<b>Cooktop is discolored.</b>	Cooktop is not cleaned thoroughly - see section in this manual on care and cleaning of cooktop.

## Oven:

Problem:	Possible Reason:
<b>Unable to use MSmartLife app to control oven</b>	If WiFi signal icon  is flashing slowly, WiFi has not been connected. See instructions in "Preparing For First Use."
	If WiFi signal icon  is flashing quickly, WiFi signal has been lost. Check that router is on and no obstructions are hindering signal. Can try to reset router and wait 15 minutes to reconnect. Otherwise repeat connection instructions in "Preparing For First Use."
	If WiFi signal icon  is off,  has not been enabled. Press the  button to enable. WiFi signal icon  will turn on.
<b>Strong "burning" or "oily" odor when using new oven.</b>	This is normal with a new range and will disappear after a few uses. Still, to be careful, you should double-check that all packaging has been removed from the appliance - check around door sides and inside drawer.
<b>Clicking noise can be heard when oven is operating</b>	The oven burner cycles on and off to maintain the oven temperature selected. When burner turns on, the electric spark ignition may be heard periodically. It is normal to spark for only a few seconds, followed by the sound of the burner igniting.
<b>Control is dark and will not respond</b>	If control panel display shows only "]" or "]" [", the control is in Sabbath Mode. Refer to that section for how to operate control and how to exit Sabbath Mode.
<b>Control is on but will not respond</b>	Check that "CONTROL LOCK" has not been activated.
	Turning power off and back on at the breaker box can usually reset the oven control and clear response issues.
<b>Oven door is locked and will not open.</b>	If self-clean recently finished, this is normal. Wait for the oven to cool fully and it will unlock. Otherwise, try resetting the appliance by cycling the circuit breaker off and on.
<b>Door will not close properly</b>	Door is not installed properly. See instructions on removing and re-installing door in "Cleaning and Maintenance" section.

<b>Problem:</b>	<b>Possible Reason:</b>
<b>Drawer will not close properly</b>	Drawer has come off of slide rails. See instructions on removing and re-installing drawer in "Cleaning and Maintenance" section.
<b>Oven is taking too long to cook.</b>	All ovens operate slightly differently from each other. Adjust oven calibration upwards to make oven cook faster. See "Control Settings" section of this manual
<b>Food is overcooked.</b>	All ovens operate slightly differently from each other. Adjust oven calibration downwards to reduce overcooking. See "Control Settings" section of this manual
<b>Food is not baking evenly - top gets done faster/slower than bottom.</b>	Make sure you are using the recommended rack settings. See "Rack Positions" at the start of the "Oven Operation" section.
	Recipe may perform better at a different rack position. Try moving the food down a rack position to make the bottom darker. Try moving food up a rack position to make the top darker.
<b>Oven light is not working</b>	Oven light may be burned out. Follow instructions in "Cleaning and Maintenance"
	If display also shows "]" or "]" [" then Sabbath Mode setting must be turned off.
<b>The oven will not start self-clean</b>	If oven was in use recently, this is normal. Self-clean can only be initiated when the oven has cooled sufficiently.
	If cooktop is in use, self-clean cannot be started. This is normal.
<b>Metal "popping" sounds during self-clean.</b>	This is normal as the extreme temperatures cause the metal frame to expand.
<b>Oven not clean after a self-clean cycle.</b>	After self-clean, the remaining white/grey ash must still be wiped out by hand.
	If black soiling still remains, oven may have been too heavily soiled to clean with the settings selected. Rerun self-clean using the longest possible setting.
	Some areas, such as bottom door corners, may be too cool to turn soils into ash. These areas may need to be cleaned by hand.
<b>Convection fan runs in modes other than convection</b>	This may be normal-convection fan typically runs during preheat to ensure oven is evenly preheated. Convection fan also runs in Convection Bake, Convection Roast, Pizza, and Steam Clean.
<b>Hot air is coming from the openings at the back of the cooktop</b>	This is normal - the oven vents out and a cooling fan also discharges hot air from the openings at the back of the cooktop.

Problem:	Possible Reason:
<b>Smoke or steam is coming from the openings at the back of the cooktop.</b>	It is normal for steam to be released from the oven vent at the back of the cooktop. If the exhaust has no smell (or smells like normal baking food), do not be alarmed.
	If the exhaust smells like burning food, check that the food is not burning and that there is no spillage or splattering in the oven that may be producing the smoke.
	If the oven is in self-clean, this may be normal. Monitor progress of self-clean to ensure smell is only the result of soiling in the oven cavity being converted to ash.
	If the exhaust smells like anything else is burning (plastic, wood, etc.), turn oven off and make sure smoking stops. Contact a qualified service provider for repairs.
<b>Condensation on door glass</b>	This is normal. Condensation will evaporate as oven heats up.
<b>Cooling fan continues to run after oven has been turned off</b>	This is normal to prevent the remaining oven heat from damaging controls. Fan will turn off when oven is sufficiently cool.
<b>"E" and a number appears in display</b>	This is an error code. Press "CLEAR/OFF" to clear the display and stop beeping. If necessary, reset power to the oven by cycling circuit breaker off and on. If error code remains or repeats, write down error code and contact a qualified service provider for repairs.

# WARRANTY

## MIDEA RANGE LIMITED WARRANTY

### ATTACH YOUR RECEIPT HERE. PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.

Please have the following information available when you call the Customer Service Center:

- Name, address and telephone number
- Model number and serial number
- A clear, detailed description of the problem
- Proof of purchase including dealer or retailer name and address

#### IF YOU NEED SERVICE:

1. Before contacting us to arrange service, please determine whether your product requires repair. Some questions can be addressed without service. Please take a few minutes to review the Troubleshooting section of the User Manual, or visit <http://Midea.com/us/support>
2. All warranty service is provided exclusively by our authorized Midea Service Providers, in the U.S. and Canada.

#### Midea Customer Service

**In the U.S.A. or Canada, call 1-866-646-4332.**

If outside the 50 States of the United States or Canada, contact your authorized Midea dealer to determine whether another warranty applies.

## LIMITED WARRANTY

### WHAT IS COVERED

#### FIRST YEAR LIMITED WARRANTY (PARTS AND LABOR)

For one year from the date of purchase, if this major appliance is installed, operated and maintained according to instructions attached to or furnished with the product, Midea America Corporation (hereafter "Midea") will pay for factory specified replacement parts and repair labor to correct defects in materials or workmanship that existed when this major appliance was purchased, or at its sole discretion replace the product. In the event of product replacement, your appliance will be warranted for the remaining term of the original unit's warranty period.

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR OR REPLACEMENT AS PROVIDED HEREIN. Service must be provided by a Midea designated service company. This limited warranty is valid only in the 50 States of the United States or Canada and applies only when the major appliance is used in the country in which it was purchased. This limited warranty is effective from the date of original consumer purchase. Proof of original purchase date is required to obtain service under this limited warranty.

## LIMITED WARRANTY

### WHAT IS NOT COVERED

1. Commercial, non-residential or multiple-family use, or use inconsistent with published user, operator or installation instructions.
2. In-home Instruction on how to use your product.
3. Service to correct improper product maintenance or installation, installation not in accordance with electrical codes or correction of household electrical system (i.e. house wiring, fuses, etc.).
4. Consumable parts (i.e. light bulbs, batteries, air or water filters, etc.).
5. Defects or damage caused by the use of non-genuine Midea parts or accessories.
6. Damage from accident, misuse, abuse, fire, floods, electrical issues, acts of God or use with products not approved by Midea.
7. Repairs to parts or systems to correct product damage or defects caused by unauthorized service, alteration or modification of the appliance.
8. Cosmetic damage including scratches, dents, chips, and other damage to appliance finishes unless such damage results from defects in materials and workmanship and is reported to Midea within 30 days.
9. Routine maintenance of the product.
10. Products that were purchased as is or as refurbished products.
11. Products that have been transferred from its original owner.
12. Discoloration, rust or oxidation of surfaces resulting from caustic or corrosive environments including but not limited to high salt concentrations, high moisture or humidity or exposure to chemicals.
13. Pick-up or delivery. This product is intended for in-home repair.
14. Travel or transportation expenses for service in remote locations where an authorized Midea servicer is not available.
15. Removal or reinstallation of inaccessible appliances or built-in fixtures (i.e. trim, decorative panels, flooring, cabinetry, islands, countertops, drywall, etc.) that interfere with servicing, removal or replacement of the product.
16. Service or parts for appliances with original model/serial numbers removed, altered or not easily identified.

**The cost of repair or replacement under these excluded circumstances shall be borne by the customer**

#### DISCLAIMER OF IMPLIED WARRANTIES

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. Some states and provinces do not allow limitations on the duration of implied warranties of merchantability or fitness, so this limitation may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.

## **DISCLAIMER OF REPRESENTATIONS OUTSIDE OF WARRANTY**

Midea makes no representations about the quality, durability, or need for service or repair of this major appliance other than the representations contained in this warranty. If you want a longer or more comprehensive warranty than the limited warranty that comes with this major appliance, you should ask Midea or your retailer about buying an extended warranty.

## **LIMITATION OF REMEDIES; EXCLUSION OF INCIDENTAL AND CONSEQUENTIAL DAMAGES**

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. MIDEA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state or province to province.



make yourself at home

Parsippany, NJ, 07054

If appliance is not working as expected, please contact Midea customer service at:

1-866-646-4332

or

<http://midea.com/us/support>

Free 3 months  
extension\* of the  
original limited warranty  
period! simply text a  
picture of your proof of  
purchase to:

**1-844-224-1614**

\*The warranty extension is for the  
three months immediately following  
the completion of the product's  
original warranty period.

Rev. 1.0 - 04/20

© Midea Group, 2020

PN:16171100A33922