




## Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,  
safety notices and shop for accessories.

1. Open the camera app  
on your smartphone  
and point at the QR  
code to scan.

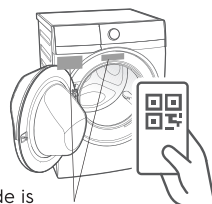

Product Registration QR code is  
located on the front of your appliance  
or inside the door rim.

2. Tap the notification or link to open the  
registration form.
3. Complete your details and enjoy peace  
of mind.



**Electrolux**

## IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

## WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time. Welcome to Electrolux.

**Visit our website to:**



Get usage advice, brochures, trouble shooting, service information, buy accessories & spare parts, online product registration : **[www.electrolux.com](http://www.electrolux.com)**

## CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts. When contacting Service, ensure that you have the following data available. The information can be found on the rating plate. Model, PNC, Serial Number.

 Warning / Caution-Safety information.

 General information and tips

 Environmental information.

**Subject to change without notice.**

## CONTENTS

|                               |    |                                                                |           |
|-------------------------------|----|----------------------------------------------------------------|-----------|
| <b>1. SAFETY INFORMATION</b>  |    | <b>3. CONTROL PANEL</b>                                        |           |
| 1.1 Conditions Of Use.....    | 4  | 3.1 Control Panel Description.....                             | 11        |
| 1.2 Child Safety.....         | 5  | 3.2 Program Chart.....                                         | 12        |
| 1.3 General Safety.....       | 5  | 3.3 Program Options Compatibility....                          | 14        |
| 1.4 Installation.....         | 6  | 3.4 Options.....                                               | 14        |
| 1.5 Use.....                  | 6  | 3.5 Settings.....                                              | 18        |
| <b>2. PRODUCT DESCRIPTION</b> |    | 3.6 Start/Pause ( ▶   ) and Add<br>Clothes ( 🧺 ) Touchpad..... | 19        |
| 2.1 Parts.....                | 8  | <b>4. BEFORE FIRST USE .....</b>                               | <b>19</b> |
| 2.2 Accessories.....          | 9  |                                                                |           |
| 2.3 Load Sensor .....         | 10 |                                                                |           |

|                                                                                                                                    |    |
|------------------------------------------------------------------------------------------------------------------------------------|----|
| 5. DAILY USE - WASHING (Only)                                                                                                      |    |
| 5.1 Loading The Laundry.....                                                                                                       | 20 |
| 5.2 Using Detergent And Additives ...                                                                                              | 20 |
| 5.3 Options Setting.....                                                                                                           | 21 |
| 5.4 Starting A Cycle (▷  ).....                                                                                                    | 22 |
| 5.5 Interruption Of A Program.....                                                                                                 | 22 |
| 5.6 Changing A Program.....                                                                                                        | 22 |
| 5.7 Changing The Options .....                                                                                                     | 22 |
| 5.8 Opening The Door.....                                                                                                          | 22 |
| 5.9 At The End Of The Program.....                                                                                                 | 23 |
| 5.10 When The Washing Program<br>Is Completed, But There Is<br>Water In The Drum.....                                              | 23 |
| 5.11 AUTO Off Mode .....                                                                                                           | 23 |
| 6. DAILY USE - DRYING (Only) .....                                                                                                 | 24 |
| 7. DAILY USE - WASHING & DRYING<br>(Non-Stop Program)                                                                              |    |
| 7.1 Washing Program +<br>“Dryness Level” Option .....                                                                              | 24 |
| 7.2 Washing Program +<br>“Time Dry  ” Option..... | 25 |
| 8. WASHING HINTS                                                                                                                   |    |
| 8.1 Sorting The Laundry.....                                                                                                       | 26 |
| 8.2 Temperatures.....                                                                                                              | 26 |
| 8.3 Before Loading The Laundry.....                                                                                                | 26 |
| 8.4 Maximum Loads.....                                                                                                             | 26 |
| 8.5 Removing Stains.....                                                                                                           | 26 |
| 8.6 Detergents Type And Quantity<br>Of Detergent .....                                                                             | 27 |
| 9. DRYING HINTS                                                                                                                    |    |
| 9.1 Preparing The Drying Cycle.....                                                                                                | 28 |
| 9.2 Laundry Not Suitable For Drying.                                                                                               | 28 |
| 9.3 Garment Labels.....                                                                                                            | 28 |
| 9.4 Drying Cycle Duration .....                                                                                                    | 28 |
| 9.5 Additional Drying.....                                                                                                         | 29 |
| 10. INTERNATIONAL WASH CODE<br>SYMBOLS .....                                                                                       | 29 |
| 11. CARE AND CLEANING                                                                                                              |    |
| 11.1 External Cleaning.....                                                                                                        | 30 |
| 11.2 Descaling .....                                                                                                               | 30 |
| 11.3 After Each Wash.....                                                                                                          | 30 |
| 11.4 Maintenance Wash .....                                                                                                        | 30 |
| 11.5 Cleaning The Dispenser Drawer.                                                                                                | 30 |
| 11.6 Cleaning The Drawer Recess .....                                                                                              | 31 |
| 11.7 Cleaning The Pump.....                                                                                                        | 31 |
| 11.8 Cleaning The Water Inlet Filter ...                                                                                           | 33 |
| 11.9 Frost Precautions .....                                                                                                       | 34 |
| 12. TROUBLESHOOTING                                                                                                                |    |
| 12.1 Possible Failures.....                                                                                                        | 35 |
| 12.2 Emergency Door Opening.....                                                                                                   | 39 |
| 13. TECHNICAL DATA .....                                                                                                           | 40 |
| 14. INSTALLATION                                                                                                                   |    |
| 14.1 Unpacking .....                                                                                                               | 40 |
| 14.2 Positioning .....                                                                                                             | 42 |
| 14.3 Water Inlet.....                                                                                                              | 43 |
| 14.4 Water Drainage .....                                                                                                          | 43 |
| 14.5 Electrical Connection.....                                                                                                    | 45 |
| 15. ENVIRONMENT CONCERNS                                                                                                           |    |
| 15.1 Packaging Materials.....                                                                                                      | 45 |
| 15.2 Old Machine.....                                                                                                              | 45 |
| 15.3 Ecological Hints.....                                                                                                         | 45 |
| 16.  WI-FI CONNECTIVITY SETUP.....                | 46 |
| 16.1 Download and installing and<br>configuring “Electrolux Life”<br>App. ....                                                     | 46 |
| 16.2  Remote Start.....                         | 47 |
| 17. WARRANTY.....                                                                                                                  | 51 |

# 1. SAFETY INFORMATION

## 1.1 Conditions Of Use

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environment;
- farm houses;
- by clients in hotels, motels, and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

 **WARNING!** The appliance must not be supplied through an external switching device, such as timer, or connected to a circuit that is regularly switched on and off by utility.

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features.

Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

## 1.2 Child Safety

- This Washer-Dryer is not intended for use by young children or infirm persons without supervision.
  - Young children should be supervised to ensure that they do not play with the appliance.
  - The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
  - Keep all detergents in a safe place out of children's reach.
  - Make sure that children or pets do not climb into the drum.
  - This machine is provided with child safety lock option (  ) to prevent children playing with the control panel. (see page 18)
- 


## 1.3 General Safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature wash program the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check inside the drum before using the appliance.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Only use manufacturer's recommended quantities of fabric softener and detergent. Damage to the fabric or appliance can occur if you exceed the recommended amount.
- Do not use your Washer-Dryer to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, clean and maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.



**For safety reasons do not use double adaptors, extension cords and multi-plug adapters.**



## 1.4 Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable.
- If the appliance is installed on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber.
- Any electrical work required to install this appliance should be carried out by a qualified electrician.



**May cause electric shock! if the machine is not connected to an earthed/ground system. DO NOT touch the wet clothes and metal parts.**

## 1.5 Use

- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the relevant section in the user manual.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the Washer-Dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the Washer-Dryer is accessible.
- As some duvets and eiderdowns should be washed/dried in large commercial machine because of their bulk, please check with the manufacturer of the item before washing/drying in a domestic machine.

- The users should always check that they have not left their gas lighters (disposable or otherwise) in their clothing.
- Never tumble dry items which have had contact with chemicals such as dry cleaning fluid. These are of volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing.
- Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash-through-to dry you should use the conventional detergent dispenser drawer.



#### **CAUTION!**



- Never stop a washer-dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Do not dry cloths in washer-dryer with dry clean solvents. Also, do not use laundry enhancement products during the drying cycle.

#### **To minimize the risk of fire in a washer-dryer, the following should be observed:**

- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a washer-dryer. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in washer-dryer. The items become warm, causing an oxidation creates heat.  
If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics contain vegetable or cooking oil or have been contaminated by hair care products be placed in washer-dryer, it should first be washed in hot water with extra detergent - this will reduce, but not eliminate the hazard. The "cool down" cycle of washer-dryer is used to reduce the temperature of the items. It should not be removed from the washer-dryer or piled or stacked while hot.
- Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in washer-dryer.
- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosine, spot removers (some brands), turpentine, waxes and wax removers.
- Items containing foam rubber (also known as latex foam) or similarly textured rubber, like materials should not be dried in a washer-dryer on a heat setting.
- Foam rubber materials can produce fire by spontaneous combustion when heated.
- Fabric softeners or similar products should not be used in a washer-dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.
- Undergarments that contain metal reinforcements should not be placed in a washer-dryer. Damage to the washer-dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.
- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in washer-dryer.


## 2. PRODUCT DESCRIPTION

### 2.1 Parts

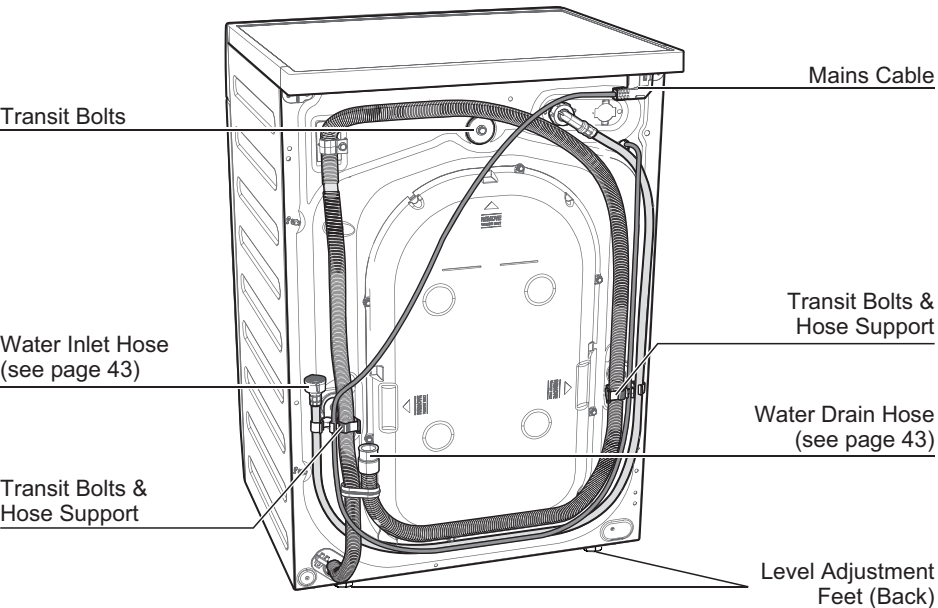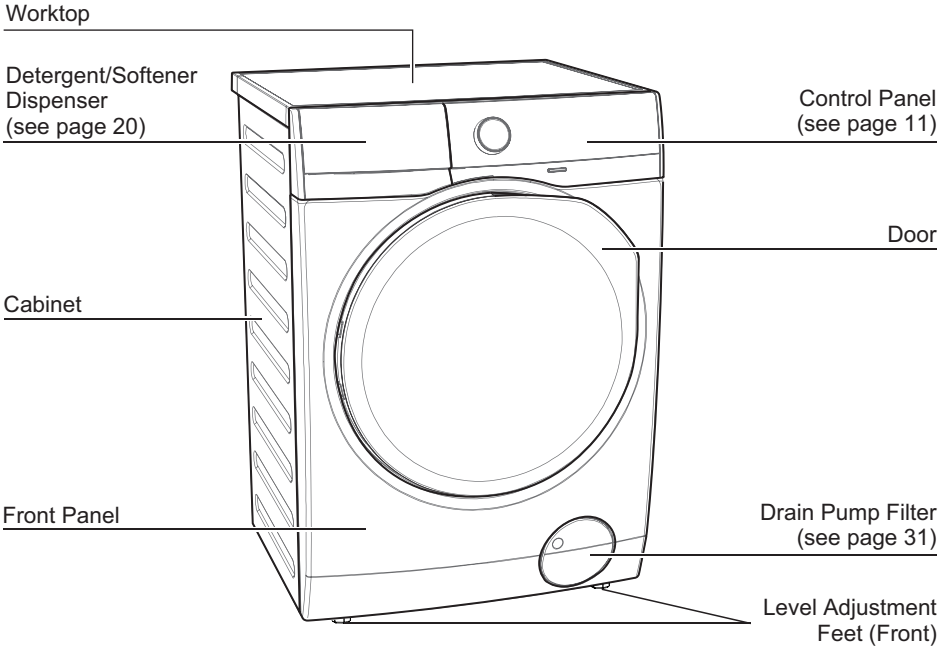


### Detergent/Softener Dispenser

(For more informations, see page 20, 30)

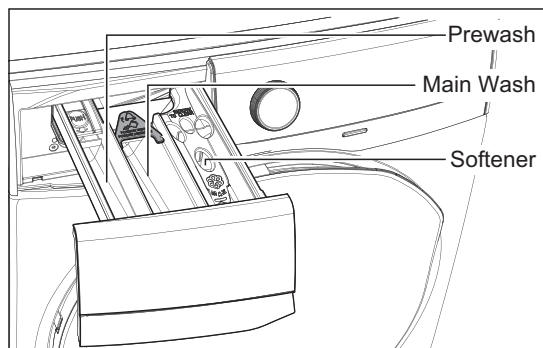


### Door (when open)


(for more informations, see page 20)

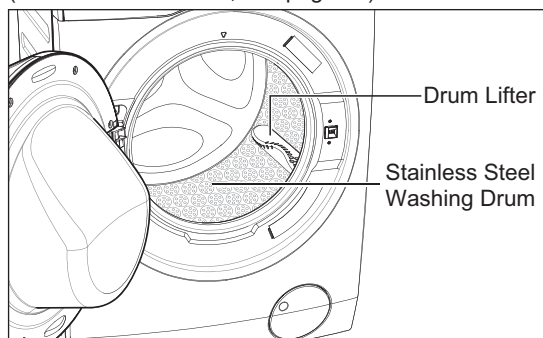



### Drain Pump Filter (when open)

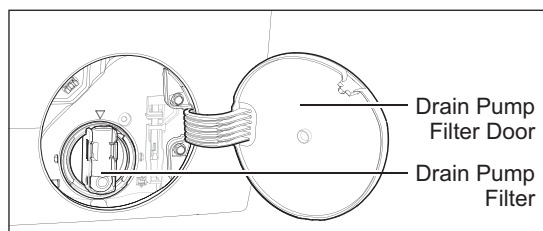

### Level Adjustment Feet

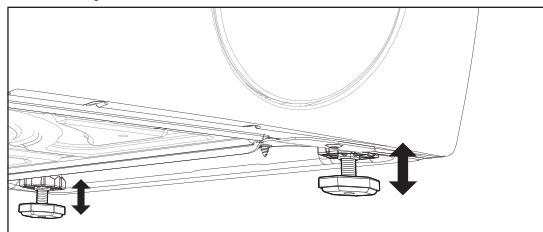

### Transit Bolt (when remove)

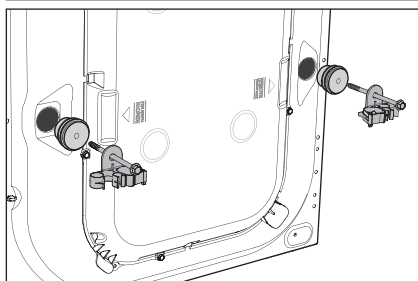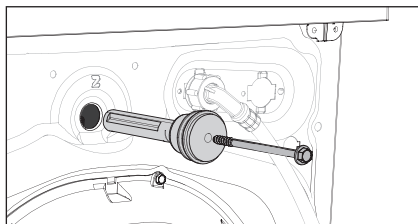

**!** Transit bolts must be removed before using the appliance.

## 2.2 Accessories

### Plastic Caps

To close the holes on the rear side of the cabinet after the removal of the transit bolts.



### Plastic Hose Guide

To connect the drain hose on the edge of a sink.




## 2.3 Load Sensor

This machine has “Load Sensing Device” which shows how much load you put in the machine and maximum load recommended for selected wash program.

**i** The display shows these indicators when the door is open.

**i** The weight shown on display is an approximate weight only.


**i** For correct operation of the load sensor, activate the appliance and set a wash program **BEFORE** loading the laundry in the drum.

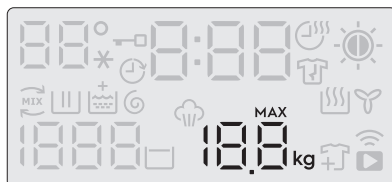

- The display will show “MAX” when max limit is reached for selected program.
  - On the display, the weight of the laundry updates by 0.5 kg steps.
  - The weight is a general indication that changes with the type of the laundry.
  - If you exceed the max weight limit of a program, the symbol “MAX” will start flashing as long as the load in the drum is more than recommended load, even after the door is closed.
-


## 3. CONTROL PANEL

### 3.1 Control Panel Description

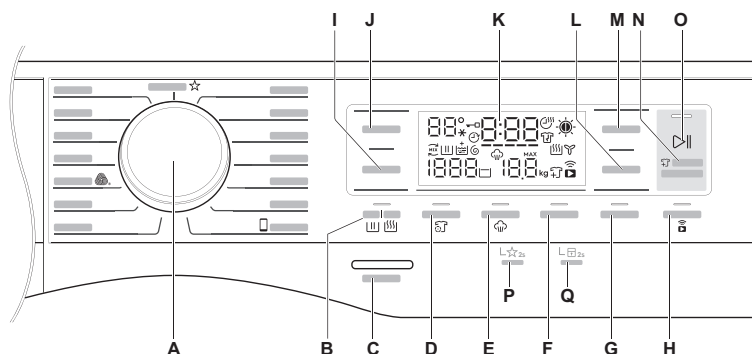

- |                                           |                                        |
|-------------------------------------------|----------------------------------------|
| <b>A</b> Program knob                     | <b>J</b> Temp touchpad                 |
| <b>B</b> Wash/Dry Mode Selection Touchpad | <b>K</b> Display                       |
| <b>C</b> On/Off button                    | <b>L</b> Time Dry touchpad             |
| <b>D</b> SensorWash touchpad              | <b>M</b> Dryness Level touchpad        |
| <b>E</b> Hygienic Care touchpad           | <b>N</b> Pause to add Clothes option   |
| <b>F</b> Prewash Care touchpad            | <b>O</b> Start/Pause touchpad          |
| <b>G</b> Delay Start touchpad             | <b>P</b> Favourite program save option |
| <b>H</b> Remote touchpad                  | <b>Q</b> Child safety lock option      |
| <b>I</b> Spin touchpad                    |                                        |

#### Display

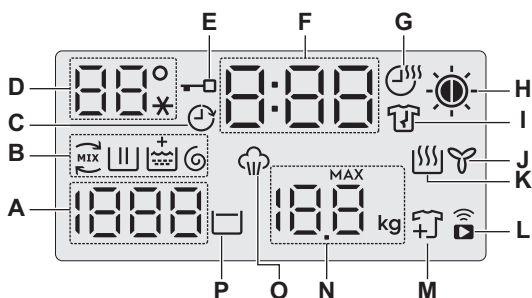

- |                                                                               |                                                     |
|-------------------------------------------------------------------------------|-----------------------------------------------------|
| <b>A)</b> Spin Speed                                                          | <b>E)</b> Door Lock Icon                            |
| <b>B)</b> Program Phase Indication Icon:                                      | <b>F)</b> Program Duration                          |
| Ultramix Phase              Wash Phase<br>Rinse Phase              Spin Phase | <b>G)</b> Time Dry Icon                             |
| <b>C)</b> Delay Start Icon                                                    | <b>H)</b> Dryness Level Icon                        |
| <b>D)</b> Temperature (* corresponds to cold wash)                            | Extra Dry              Cupboard Dry<br>Iron Dry     |
|                                                                               | <b>I)</b> Anticrease Phase Icon                     |
|                                                                               | <b>J)</b> Cooling Phase Icon                        |
|                                                                               | <b>K)</b> Drying Phase Icon                         |
|                                                                               | <b>L)</b> Remote Icon                               |
|                                                                               | <b>M)</b> Add Clothes Icon                          |
|                                                                               | <b>N)</b> Maximum Load Capacity Of Selected Program |
|                                                                               | <b>O)</b> Vapour Phase Icon                         |
|                                                                               | <b>P)</b> Rinse Hold Icon                           |

### 3.2 Program Chart

| Program;<br>Temperature<br>range                                                                                  | Max.<br>Spin<br>Speed | Max. Load<br>(Dry Clothes) |                          | Type of load and soil level                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------|-----------------------|----------------------------|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                   |                       | Wash                       | Dry                      |                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Cottons;</b><br>Cold to 90°C                                                                                   | 1400<br>rpm           | <b>Max.<sup>1)</sup></b>   | <b>Max.<sup>1)</sup></b> | White and coloured cotton.                                                                                                                                                                                                                                                                                                                                              |
| <b>Mixed;</b><br>Cold to 60°C                                                                                     | 1200<br>rpm           | 4 kg                       | 3 kg                     | Synthetic or mixed fabric items.                                                                                                                                                                                                                                                                                                                                        |
| <b>Delicates;</b><br>Cold to 40°C                                                                                 | 1200<br>rpm           | 4 kg                       | –                        | Delicate fabrics such as acrylics, viscose, polyester items.                                                                                                                                                                                                                                                                                                            |
| <b>Bedding;</b><br>Cold to 60°C                                                                                   | 800<br>rpm            | 3 kg                       | –                        | Special program for one synthetic blanket, duvet, bedspread and so on.                                                                                                                                                                                                                                                                                                  |
| <b>Vapour Refresh</b>                                                                                             | –                     | 1.5 kg                     | –                        | This cycle removes odours and helps to dewrinkle the laundry.<br> Do not add detergent.                                                                                                                                                                                                |
| <b>Energy Saver;</b><br>Cold, 40°C <sup>2)</sup>                                                                  | 1400<br>rpm           | <b>Max.</b>                | <b>Max.</b>              | White and colourfast cotton. Set this program to have a good washing results and decrease the energy consumption. The time of the washing program is extended.                                                                                                                                                                                                          |
|  <b>App Program</b>              | –                     | –                          | –                        | You can send any additional program from Mobile Application to store at this program position and can recall to using it everytime when you rotate program knob to this position. This can be done through the App.<br> Program “Outdoor” is the default stored program from factory. |
| <b>Spin</b>                                                                                                       | 1400<br>rpm           | <b>Max.</b>                | <b>Max.</b>              | To spin the laundry and drain the water in the drum.                                                                                                                                                                                                                                                                                                                    |
| <b>Rinse + Spin</b>                                                                                               | 1400<br>rpm           | <b>Max.</b>                | <b>Max.</b>              | To rinse and spin the laundry.                                                                                                                                                                                                                                                                                                                                          |
| <b>Wool</b>  ;<br>Cold to 40°C | 1200<br>rpm           | 2 kg                       | 1 kg                     | Specially tested program for woollen garments bearing the “Pure new woollen, non-shrink, machine washable” label.                                                                                                                                                                                                                                                       |
| <b>Quick 15;</b><br>Cold to 30°C                                                                                  | 1200<br>rpm           | 1.5 kg                     | –                        | Lightly soiled synthetics or mixed fabrics.                                                                                                                                                                                                                                                                                                                             |
| <b>Daily 39;</b><br>30°C to 40°C                                                                                  | 1200<br>rpm           | 5.5 kg                     | –                        | Daily wear coloured cotton clothes such as shirts, blouses, towels and undergarments. Ideal for low level of soil.                                                                                                                                                                                                                                                      |

| Program;<br>Temperature<br>range     | Max.<br>Spin<br>Speed | Max. Load<br>(Dry Clothes) |      | Type of load and soil level                                                                                           |
|--------------------------------------|-----------------------|----------------------------|------|-----------------------------------------------------------------------------------------------------------------------|
|                                      |                       | Wash                       | Dry  |                                                                                                                       |
| <b>Full Wash 60;</b><br>30°C to 60°C | 1400<br>rpm           | <b>Max.</b>                | 4 kg | Daily wear coloured cotton clothes such as shirts, blouses, towels and undergarments. Ideal for normal level of soil. |
| <b>WashDry 60;</b><br>30°C, 40°C     | 1200<br>rpm           | 1 kg                       | 1 kg | Non-Stop washing and drying program for 3 - 5 shirts with lightly soil.                                               |
| <b>Favourite</b>                     | –                     | –                          | –    | Recall your favourite program.                                                                                        |

1) Maximum capacity depended on the model of the Washer Dryer (see defined on the control panel).

2) Energy Saver Program with 40degC option selected is recommended for a full load of normally soiled cotton and is the Energy and Water rating label program.

## Woolmark Apparel Care - Blue



The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of wool garments labelled as “hand wash” provided that the garments are washed according to the instructions issued by the manufacturer of this machine.

Follow the garment care label for drying and other laundry instructions. M1361

The Woolmark symbol is a Certification mark in many countries.

### 3.3 Program Options Compatibility

| Program        | Option  |            |                             |                        |             |                             |         |             |
|----------------|---------|------------|-----------------------------|------------------------|-------------|-----------------------------|---------|-------------|
|                | No Spin | Rinse Hold | Dryness <sup>2)</sup> Level | Time <sup>2)</sup> Dry | Sensor Wash | Hygienic Care <sup>1)</sup> | Prewash | Delay Start |
| Cottons        | ■       | ■          | ■                           | ■                      | ■           | ■                           | ■       | ■           |
| Mixed          | ■       | ■          | ■ <sup>3)</sup>             | ■                      | ■           | ■                           | ■       | ■           |
| Delicates      | ■       | ■          |                             |                        | ■           | ■                           | ■       | ■           |
| Bedding        | ■       |            |                             |                        | ■           | ■                           |         | ■           |
| Vapour Refresh |         |            |                             |                        |             | ■                           |         | ■           |
| Energy Saver   | ■       | ■          | ■                           | ■                      |             | ■                           | ■       | ■           |
| App Program    |         |            |                             |                        |             |                             |         |             |
| Spin           | ■       |            | ■                           | ■                      |             |                             |         | ■           |
| Rinse + Spin   | ■       | ■          | ■                           | ■                      |             |                             |         | ■           |
| Wool           | ■       | ■          |                             | ■                      |             |                             |         | ■           |
| Quick 15       | ■       | ■          |                             |                        |             |                             |         | ■           |
| Daily 39       | ■       |            |                             |                        |             |                             |         | ■           |
| Full Wash 60   | ■       | ■          | ■                           | ■                      |             |                             |         | ■           |
| WashDry 60     |         |            |                             |                        |             |                             |         | ■           |
| Favourite      |         |            |                             |                        |             |                             |         |             |

1) Hygienic Care option can be combined with temperature 40°C to 90°C only.

2) Do not select a spin speed LOWER than that proposed by the appliance to avoid a too long drying time so saving energy. In any case the reduction of the spin speed is only possible after selecting drying.

3) This program can select only “Cupboard Dry” option.

### 3.4 Options

#### Wash/Dry Mode Touchpad

This touchpad is used to select Program Mode of your machine. Program modes available are:

- Wash Only Mode (default)
- / ■ Wash and Dry Mode
- Dry Only Mode

If a mode is not compatible with program selected, the symbol “---” will flash on display along with buzzer sound.

Changing a running program mode is **possible only by switching off** the machine.

#### Temperature Touchpad

Press this touchpad repeatedly to increase or decrease the wash temperature if you want your laundry to be washed at a temperature different from the one proposed by the Washer-Dryer.

#### Spin Selection Touchpad

Press this touchpad repeatedly to increase or decrease the spin speed or select Rinse Hold, if you want your laundry to be spun at a speed different from the one proposed by the Washer-Dryer.

- **No Spin ( --- )**

No spin option eliminates all the spin phases and increase the number of rinses.

- **Rinse Hold ( □ )**

By selecting this option the water of the last rinse is not emptied out and the drum turns regularly to prevent the laundry creases.

The door is still locked to indicate that the water must be emptied out.

**i** The door stays locked with the water in the drum. To continue the cycle, you must press ▷|| (Start/Pause).

## SensorWash ( ) Touchpad

Select "SensorWash" option to turn ON the sensors for the dirt and detergent residue.

When using this option, machine will automatically check the dirt level and detergent residue\* in your laundry. It will automatically adjust the washing time and numbers of rinses according to the load to make sure that your clothes are really clean.

*\* Only for liquid detergent*

The SensorWash technology consist of 2 different sensors for detection:

1) The 1<sup>st</sup> Turbidity sensor detects the dirt level at the start of cycle and automatically calculates the actual time needed to remove the level of dirt in the wash; from low dirt levels all the way to the maximum dirt level.

**i** The initial time displayed on the control panel indicates the time needed for the maximum dirt level.

2) The 2<sup>nd</sup> Conductivity sensor will check the amount of detergent residue after the first rinse and the machine will calculate the optimum number of rinses (Maximum of 2 additional rinses) needed to make sure that the detergent residue is properly removed.

**i** Please see details of detergent usage at "Detergents Type and Quantity of Detergent"

## Hygienic Care ( ) Touchpad

Select this option to add approximately 30 minutes of tumbling in vapour after the rinse cycle. The indicator of this option will be on.

- Vapour may not necessarily be visible inside the drum during a vapour cycle. Vapour is created below the drum and allowed to naturally rise into the clothes.
- Vapour may not be present during the entire vapour cycle.
- Vapour function is more effective with half load.
- At the end of the Vapour cycle, the clothes will be warmer, softer and detached from the drum.

### NOTE

If Vapour option is selected, rinse temperatures will be elevated.

During a vapour cycle, you may notice vapour exiting from the drain hose of the Washer-Dryer, this is normal and there is no cause for alarm.

## Prewash Touchpad

Select this option if you wish your laundry to be pre-washed before the main wash. Use this option for heavy soil. The indicator of this option will be on.

When you set this function, put the detergent into the “  ” compartment. This function increases the program duration.

## Delay Start Touchpad

This option makes it possible to delay the start of the program by 30 min, 60 min or 90 min and then by every hour from 2 to 20 hours. The delay you have selected is indicated on the display. The end time will increase in order to show you the selected delay.

You must select this option after you have set the program and before you press the Start/Pause button.

If you wish to add laundry in the machine during the delay time, press Start/Pause touchpad to put the machine in pause mode. Add laundry, close the door and press Start/Pause touchpad again.

You can cancel the delay time at any moment, by pressing “Delay Start” touchpad repeatedly till the display shows delay time “  ”, then press the Start/Pause touchpad.

## Remote ( ) Touchpad

This option allows you to connect washing machine to Wi-Fi network and to link it to your smart phone.

By this functionality you can receive notifications, control and monitor your washing machine from your mobile devices.

**Please refer to Chapter “  WI-FI CONNECTIVITY SETUP”.**

 When the door is open, remote functions are disabled.

## Dryness Level Touchpad

Press this touchpad to set dryness level using auto sensing feature. The display will show the selected option.

- Extra dry 
- Cupboard dry 
- Iron dry 

### NOTE

- Dryness level settings are based on wash program selected.

- The final time value is the total duration of the washing + detachment + drying cycles, calculated on a default load size.
- At the end of the program the appliance performs the anti-crease phase for approximately 10 minutes. During this time, the display will show time remaining “E nD” and door is locked “→D”.



If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.

### Dryness Option Guidelines:

| Level of dryness                                                      | Type of fabric                                                              | Load                              |
|-----------------------------------------------------------------------|-----------------------------------------------------------------------------|-----------------------------------|
| <b>Extra Dry</b><br>Ideal for towels or similar                       | Cotton and linen<br>(bathrobes, bath towels, etc)                           | up to <b>Max.<sup>1)</sup></b> kg |
| <b>Cupboard Dry</b><br>Suitable for items to put away without ironing | Cotton and linen<br>(bathrobes, bath towels, etc)                           | up to <b>Max.<sup>1)</sup></b> kg |
|                                                                       | Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen) | up to 3 kg                        |
| <b>Iron Dry</b><br>Suitable for ironing                               | Cotton and linen<br>(sheets, tablecloths, shirts, etc.)                     | up to <b>Max.<sup>1)</sup></b> kg |

1) Maximum capacity depended on the model of the Washer Dryer (see defined on the control panel)

### Time Dry ( ) Touchpad

If you wish to carry out a timed drying program, keep pressing this touchpad until the desired time is reached.



#### NOTE

- Maximum allowable timed drying changes based on wash program selected.

- The final time value is the total duration of the washing + detachment + drying cycles.
- At the end of the program the appliance performs the anti-crease phase for approximately 10 minutes. During this time, the display will show time remaining “E nD” and door is locked “→D”.



If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.

### Dry Time Option Guidelines:

| Type of fabric                                                                            | Load (kg)                    | Spin Speed (rpm) | Suggested Times (Hrs) |
|-------------------------------------------------------------------------------------------|------------------------------|------------------|-----------------------|
| Cotton and linen<br>(bathrobes, bath towels, etc.).                                       | 5 - <b>Max.<sup>1)</sup></b> | 1400             | 3 - 4                 |
|                                                                                           | 3 - 5                        | 1400             | 2 - 3                 |
|                                                                                           | 2 - 3                        | 1400             | 1 - 2                 |
| Synthetic or mixed fabric items<br>( jumpers, blouses, underwear, household linen, etc.). | 3                            | 1200             | 2 - 3                 |
|                                                                                           | 1                            | 1200             | 1                     |
| Wool and hand washable wool.                                                              | 1                            | 1200             | 2                     |

1) Maximum capacity depended on the model of the Washer Dryer (see defined on the control panel)

## Duration of the drying cycle

The drying time can vary according to :

- the final spin speed;
- dryness level (Extra Dry or Cupboard Dry or Iron Dry);
- the type of laundry;
- the size of load.



## Fibre residue

**After drying fluffy fabrics, such as new towels, it is advisable to perform a Rinse program to ensure that any residue that may remain in the tub is completely removed and does not stick to garments dried afterwards. After each drying cycle, clean the drain pump filter. Please refer to care and cleaning in section 11 “CARE AND CLEANING”.**

## Additional drying

Should the laundry still be too wet at the end of the program, set another short drying cycle.

- The final part of a washer- dryer cycle occurs without heat (cool down cycle). This ensures the laundry will be left at a low temperature.

### • **WARNING!**

**To prevent the formation of creases or shrinking of fabrics, avoid excessive drying.**

## 3.5 Settings

### Save Favourite (☆) Program

Program settings that are frequently used can be saved (e.g. Cotton, 60°C, 1200 rpm, with Prewash and Hygienic Care).

To program/re-program Favourite with your own selections and save them, proceed as follows:

1. Put machine in Stand-By mode.
2. Select your desired program settings.
3. To save favourite program, press and hold “Hygienic Care  ” touchpad about 2 seconds and you will hear “Bip, Bip” sound and “Favourite” LED is flashing.

To recall the favourite wash program, turn selector knob to “Favourite ☆” program. You will get acknowledgement on the screen when the Favourite program is loaded.

-  App Program cycle cannot be saved as a Favourite on the appliance.

## Child Safety Lock ( ) Option

Your appliance is provided with CHILD SAFETY LOCK which permits you to leave the appliance unsupervised with the door closed without having to worry that children might be injured by or cause damage to the appliance.

-  Set this option after pressing the Start/Pause touchpad.

### To set “Child Lock” option:

- To activate the function, press and hold “Prewash” touchpad about 2 seconds until the display shows the icon “ ”.

-  If you press any touchpad while Child Lock is activated, the icon “ ” will flash on display 3 times along with buzzer sound.

-  The touchpads are locked (except for the On/Off button).

-  This function remains enabled even after the appliance is switched off.

- To deactivate the function, press and hold “Prewash” touchpad about 2 seconds until the display shows the icon “ ”.

## Enabling/Disabling End-Of-Wash Buzzer

This setting permits you to either enable or disable the buzzer at the end of the program. As an example, you might wish to disable this buzzer when you start a wash when going to bed, so that when the wash finished approximately 1 hour later, it will not disturb you through the night.

**i** Error warning beeps such as critical faults are not disabled.

- To disable the buzzer sound, press “SensorWash (  )” and “Hygienic Care (  )” touchpads at the same time about 3 seconds, the icon “  ” will show on display along with buzzer sound.
- To return to default configuration press these 2 touchpads at the same time about 3 seconds, the icon “  ” will show on display along with buzzer sound.

### 3.6 Start/Pause ( ) and Add Clothes ( ) Touchpad

This touchpad has 2 functions:

#### 1. Start/Pause ( )

After you have selected the desired program and options, press this touchpad to start the machine. The Start/Pause pilot light will stop flashing and remain lit until the water level is above the bottom edge of the door then pilot light goes OFF.

If you have selected a “Delay Start” option, the countdown will begin and will be shown on the display.

To interrupt a program which is running, press this touchpad to pause the machine, the Start/Pause pilot light flashes.

To restart the program from the point at which it was interrupted, press this touchpad again, the Start/Pause pilot light will stop flashing.

#### 2. Add Clothes ( )

**i** You can only add clothes when the icon “  ” shown on the display.

To add clothes:


1. Pressing the “Start/Pause” touchpad to pause the program.
2. Wait for the machine to come to a complete stop before opening the door (wait for door lock “  ” icon to turn off).
3. Add clothing and close the door.
4. Resume the program by pressing “Start/Pause” touchpad again.

## 4. BEFORE FIRST USE

**i** NOTE

**During installation or before first use you may observe some water in the machine. This is a residual water left in the machine after a full functional test in the factory to ensure the machine is delivered to customers in perfect working order and is no cause for concern.**

1. Ensure that the electrical and water connections comply with the installation instructions.
2. Put 2 litres of water in the detergent compartment for washing phase. This activates the drain system.

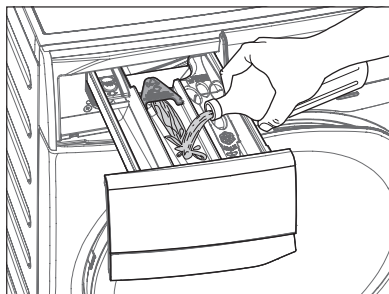

3. Select a Cottons cycle at 90 °C, without any laundry in the machine, to remove any manufacturing residue from the drum and tub then start the machine.


## 5. DAILY USE - WASHING (Only)

### 5.1 Loading The Laundry

1. Turn the water tap on.
2. Connect the main plug to the main socket.
3. Press the On/Off button to turn on the Washer-Dryer. Turn the knob to set a program. The Washer-Dryer will propose a temperature and automatically select the spin value provided for the program you have chosen.

The selector knob can be turned either clockwise or counter-clockwise.


4. Check and remove objects (if there are any) that could be trapped in the fold.

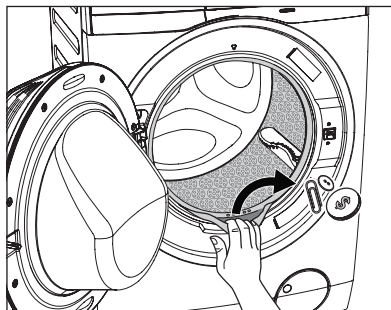

5. Place the laundry in the drum, one item at a time, shaking them out as much as possible. (Refer to page 26 "WASHING HINTS")
6. Close the door.



Make sure that no laundry remains between the seal and the door.

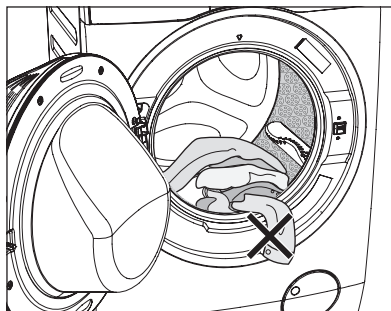


### 5.2 Using Detergent And Additives

**i** Please read "Detergents Type and Quantity of Detergent" on page 27 before use.

#### 1. Detergent Dispenser Drawer

The detergent dispenser is divided into three compartments.

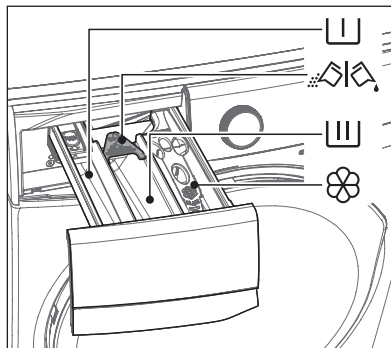


#### • Compartment "PREWASH"

This compartment is only used for detergent when a "Prewash" option is selected.

#### • Compartment "MAIN WASH"

This compartment is used for detergent on all programs.

 Detergent flap

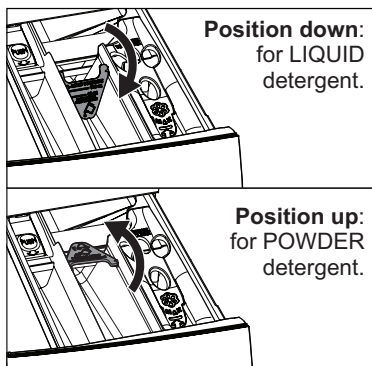

#### • Compartment "SOFTENER"


This compartment is used for fabric conditioner and starching agent.

**i When you use the liquid detergent**


- Do not use gelatinous or thick liquid detergents.
- Do not put more liquid than the maximum level.
- Do not set the "Prewash" phase.
- Do not set the "Delay Start".

2. Measure out the detergent and the fabric softener;


- Pull out the dispenser drawer until it stops.
- Measure out the amount of detergent required, pour it into the main wash compartment .

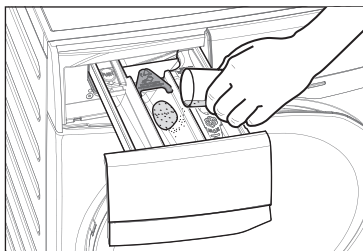

- If you wish to carry out the "Prewash" phase, pour it into the compartment marked .

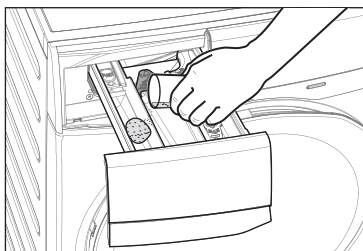

- If required, pour fabric softener into the compartment marked .

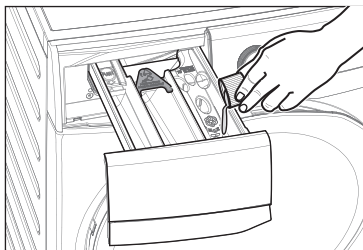

- Close the drawer gently.

**i NOTE**

The softener amount used must not exceed the "MAX" mark in the drawer.

If you use thick softeners it is recommended to dilute with water.

**i NOTE**

Residues of detergent, softener and water may remain in the dispenser. It is recommended to clean the dispenser regularly to remove any residue.

## 5.3 Options Setting

1. If you want your laundry to be spun or use temperature different from the one proposed by the Washer-Dryer, press "Spin" and "Temp" touchpads repeatedly to change the spin speed and temperature.

Press the option touchpads, if you want your laundry to be washed with special functions.

**i NOTE**

- Different functions can be combined which is dependent on the program selected.
- If an option is not compatible with the program selected, the symbol "- - -" will flash on display along with buzzer sound.

2. If you want to delay the start of the program, press the "Delay Start" touchpad repeatedly to choose your Washer-Dryer delay time.

## 5.4 Starting A Cycle ( ▷|| )

To start a program, press the Start/Pause touchpad. The corresponding pilot light will stop flashing and a default program duration will be displayed on the screen.

After approx. 15 minutes from the start of a program:

- The appliance will automatically adjust the selected program duration according to the type and size of the load.
- The display will show adjusted program duration.

### NOTE

If you press any touchpad while a program is operating, the symbol “- - -” will flash on display along with buzzer sound. (except Start/Pause touchpad and On/Off button)

## 5.5 Interruption Of A Program

- To pause, press Start/ Pause. The indicator will start flashing.
- Press the Start/Pause again. The program will continue.

## 5.6 Changing A Program

Changing a running program **is possible only by switching off** the appliance.

- Press the “On/Off” button to cancel the program and to turn off the appliance.
- Press the “On/Off” button again to start the appliance.

Now you can set a new wash program and change any available options. Press Start/Pause to start the new program.

### NOTE

The appliance will not drain the water (except programs; Hygienic Care, Spin, Rinse + Spin).

## 5.7 Changing The Options

It may be possible to change some of the options after a program has started.

1. Press the touchpad Start/Pause. The indicator will start flashing.
2. If available change the options that you wish.
3. Press Start/Pause again. The program will continue.

## 5.8 Opening The Door

While a program or the Delay Start is operating, the appliance door is locked and the display shows the indicator “”. First, set the machine to PAUSE by pressing the “Start/Pause” touchpad. Wait until the door lock indicator goes off, then the door can be opened.

If the door lock indicator “” does not disappear, this means that the machine is already heating and the water level is above the bottom edge of the door or the drum is turning. In this case the door CAN NOT be opened. If you need to open it, you must drain the water to open the door.

In case of Remote (  ) function is activated, when program cycle end and anticrease phase is complete. The door will remain locked for 5 minutes, if you want to open the door at that time, press Remote (  ) touchpad once to turned off function then the door is unlocked.



**In case of emergency please refer to “Emergency door opening” on page 39.**

## 5.9 At The End Of The Program To drain the water:

- The appliance stops automatically.
- The acoustic signal will operate.
- The display will show “E n d”.
- The indicator of the touchpad Start/Pause goes off.
- The door lock indicator “ ” goes off.
- Remove the laundry from the appliance. Make sure that the drum is empty.
- Keep the door partly open, to prevent the mildew and odours.
- Turn off the water tap.

### NOTE

At the end of the program, the time remaining can suddenly decrease from 7 minutes or less to 0 due to the overestimated total program time during the load sensing phase. In some cases (with perfectly balanced load) the program time can be shorter than the time estimated after the load sensing phase is completed. This is a normal behavior of the machine and not a cause for concern as it does not compromise its performance.

## 5.10 When The Washing Program Is Completed, But There Is Water In The Drum

(Option “Rinse Hold  ” is used)

- The drum turns regularly to prevent the creases in the laundry.
- The indicator “Start/Pause” flashes to remind you to drain the water.
- The door lock indicator “ ” is on. The door stays locked.

### You must drain the water to open the door.

1. Press the “Start/Pause  ” touchpad. The appliance drains the water and spins with the maximum spin speed for selected program.

**Alternatively**, before pressing the “Start/Pause” touchpad, you can press the “Spin” touchpad to change the spin speed. You can select “No Spin (---)”, if you want the machine to only drain the water.

2. When the program is completed and the door lock indicator “ ” goes off, you can open the door.
3. Press the “On/Off” button to deactivate the appliance.

### NOTE

After approximately 18 hours, if you do not press Start/Pause touchpad, the appliance will drain and spin automatically (except for “Wool” program) .

## 5.11 AUTO Off Mode

The AUTO Off mode automatically deactivates the appliance to decrease the energy consumption when:

- You do not press any buttons for 5 minutes before you press “Start/Pause”.
  - Press the “On/Off” button to activate the appliance again.
- After 5 minutes from the end of the washing program.
  - Press the “On/Off” button to reactivate the appliance. Display will show the end of the last wash.
  - Press any touchpad again to show the last wash program.

## 6. DAILY USE - DRYING (Only)

1. Press the On/Off button to turn on the machine.

 The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.

2. Load the laundry. Make sure the load size does not exceed the maximum drying capacity of the machine.
3. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 12), according to your clothes then press **Wash/Dry Mode** touchpad to switch your machine to **Dry Only** (  ) mode.
4. If you wish to select an automatic drying, press the "Dryness Level" option until the icon corresponding to the required dryness level appears on the display. (see page 16)
5. If you wish to select a timed drying, press the "Time Dry" (  ) option repeatedly until desired drying time reached. (see page 17)
6. Press "Start/Pause" (  ) touchpad to start the program. The time remaining is updated every minute.

7. At the end of the program :

- The acoustic signal will operate.
- The display will show "E n d" and "Anti Crease (  )" icon is lit.
- The door lock indicator "  " is still on.
- The appliance will perform the anti-crease phase for approximately 10 minutes.

After anti-crease phase finish, the door lock indicator "  " goes off. The display will show "E n d".

 If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.

8. Press "On/Off" button to switch the machine off.
9.  At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

## 7. DAILY USE - WASHING & DRYING (Non-Stop Program)

### 7.1 Washing Program + "Dryness Level" Option

1. Load the laundry and add detergent and fabric softener. Make sure the load size does not exceed the maximum drying capacity of the machine.
2. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 12), according to your clothes then press **Wash/Dry Mode** touchpad to switch your machine to **Wash and Dry** (  /  ) mode.
3. Select the required options by pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.
4. Set the dryness level by pressing "**Dryness Level**" touchpad. The display will then show the whole duration of wash & dry cycle.
 

 If a program is not compatible with the drying option selected, the symbol " --- " will flash on display.
5. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.

6. At the end of the program press the On/Off button to switch the machine off.



At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

### NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.
- Some drying level options are not available for some programs.

- When “Iron Dry  ” option is selected, the display time will be adjusted after approximately 15 minutes from the start of the program, based on the laundry type and load size.

The display will show the new adjusted time.

- When “Extra Dry  ” or “Cupboard Dry  ” is selected the display time will be adjusted towards the end of the drying cycle when machine senses required dryness level has been achieved. In case of laundry quantity lower than maximum load capacity, the time remaining can suddenly decrease from e.g. approximately 50 minutes to 10.

## 7.2 Washing Program + “Time Dry ” Option

1. Load the laundry and add detergent and fabric softener. Make sure the load size does not exceed the maximum drying capacity of the machine.
2. Turn the knob to set a wash program which can select drying option (refer to Program Chart on page 12), according to your clothes then press **Wash/Dry Mode** touchpad to switch your machine to **Wash and Dry (  /  ) mode**.
3. Select the required options by pressing the relevant touchpads. If possible, do not select a spin speed lower than that proposed by the machine to avoid unnecessary longer drying time therefore saving energy.
4. Set the drying time by pressing “Time Dry  ” touchpad repeatedly until desired drying time reached. The display will then show the whole duration of wash & dry cycle.



If a program is not compatible with the drying option selected, the symbol “ --- ” will flash on display.

5. Start the program by pressing Start/Pause touchpad. The time remaining is updated every minute on the display.

6. At the end of the program press the On/Off button to switch the machine off.



At the end of each drying cycle, the temperature of your clothing will be high. For your safety, please leave the door open to let your clothes cool before removing your laundry.

### NOTE

- If you wish to open the door during the anti-crease phase or interrupt it, press Start/Pause touchpad.
- If you set only 10 minutes of drying, the appliance performs only a Cooling (  ) phase.

## 8. WASHING HINTS

### 8.1 Sorting The Laundry


Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### 8.2 Temperatures


| Temp                 | Soil level                                                                                                                                                                    |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 90°C                 | For normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...).                                                                                |
| 60°C<br>50°C         | For normally soiled, colourfast garments (e.g. shirts, night dresses, pajamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear). |
| 40°C<br>30°C<br>Cold | For delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label pure new wool, machine washable, non-shrink.                  |

### 8.3 Before Loading The Laundry

- Make sure that no metal objects are left in the laundry (e.g. coin, hair clips, safety pins, pins).

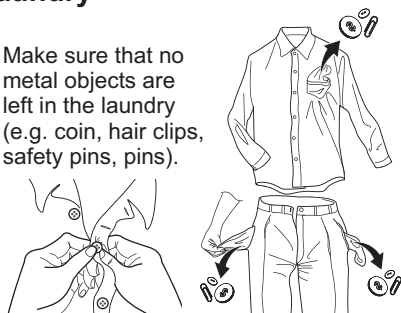

- Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.

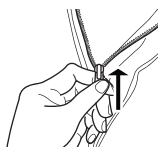

- Wash bras, pantyhose and other delicates in a mesh laundry bag, which you can purchase from your supermarket.



- Make sure that you wash lint collectors separately from lint producers.
- Never wash whites and coloured fabrics together. Whites may lose their "whiteness" in the wash.
- New coloured items may run in the first wash; they should therefore be washed separately the first time.
- Remove persistent stains before washing.
- Rub particularly soiled areas with a special detergent or detergent paste. Treat curtains with special care. Remove hooks or tie them up in a bag or a net.

### 8.4 Maximum Loads

Recommended loads are indicated in the program charts on page 12.

General rules:

| Clothes Load                  | Quantity                              |
|-------------------------------|---------------------------------------|
| Cotton, linen                 | drum full but not too tightly packed; |
| Synthetics                    | drum no more than half full;          |
| Delicate fabrics and woollens | drum no more than one third full.     |

Washing a maximum load makes the most efficient use of water and energy. For heavily soiled laundry, reduce the load size.

### 8.5 Removing Stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.

**Blood:** treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.

**Oil based paint:** moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.

**Dried grease stains:** moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.

**Rust:** oxalic acid dissolved in hot water or a rust removing product used in cold water. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.

**Mould stains:** treat with bleach, rinse well (whites and fast coloureds only).

**Grass:** soap lightly and treat with bleach (whites and fast coloureds only).

**Ball point pen and glue:** moisten with acetone (\*), lay the garment on a soft cloth and dab the stain.

**Lipstick:** moisten with acetone (\*) as above, then treat stains with methylated spirits. Remove any residual marks from white fabrics with bleach.

**Red wine:** soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.

**Ink:** depending on the type of ink, moisten the fabric first with acetone (\*), then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.

**Tar stains:** first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

(\*) do not use acetone on artificial silk.

## 8.6 Detergents Type And Quantity Of Detergent

Low sudsing detergent is required for this Washer-Dryer to prevent oversudsing problems, unsatisfactory washing result and harm to the machine.

Low sudsing detergents designed for front load washing machines are labelled "Front Loading", "high efficiency", "HE", such as Cold Power for Front Loaders or "Matic".

**Do not use wrong types of detergent, such as Top Loading, Handwash detergent or Soap-Based products in your frontload Washer-Dryer. This can result in excessive suds, longer cycle time, low spin speeds, poor rinsing and overloading of the motor.**

### Quantity of detergent to be used

The choice of detergent and use of correct quantities not only affects your wash performance, but also helps to avoid waste and protect the environment. Although biodegradable detergents contain substances which in large quantities can upset the delicate balance of nature.

The choice and quantity of detergent will depend on ;

- type of fabric (delicates, woollens, cottons, etc.) ;
- the colour of clothes ;
- size of the load ;
- degree of soil ;
- wash temperature ; and
- hardness of the water used.

Water hardness is classified by so-called "degrees" of hardness.

Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority.

You may have to try using the detergent quantity as per manufacturers' instructions then compare the wash result to the list below and adjust the amount of detergent for your future washes accordingly.

**Not enough detergent causes:**

- the washload to turn grey,
- greasy clothes.

**Too much detergent causes:**

- oversudsing,
- reduced washing effect,
- inadequate rinsing.

**Use less detergent if:**

- you are washing a small load,
- the laundry is lightly soiled,
- large amounts of foam during washing.

## 9. DRYING HINTS

### 9.1 Preparing The Drying Cycle

As a dryer, the appliance works on condensation principle.

Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.

**ATTENTION!**

**Before starting the drying program. Make sure the load size does not exceed the maximum drying capacity of the machine. In order to obtain good performances. (Refer page 12)**

- Also, fabrics containing residue of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried to avoid formation of harmful vapours.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash program.



**If using liquid detergents, a program without prewash must be selected.**

### 9.2 Laundry Not Suitable For Drying

- Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as anoraks, bed covers, quilts, sleeping bags and duvets must not be machine dried.
- Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract fluff.
- Remove the laundry when the appliance has finished drying.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.

### 9.3 Garment Labels

For drying, follow the indications given on the manufacturer's labels:

-  = May be tumble dried
-  = Drying at high temperature
-  = Drying at reduced temperature
-  = Do not tumble dry.

### 9.4 Drying Cycle Duration

The drying time may vary depending on:

- speed of the final spin;
- dryness level required (Extra dry, Cupboard dry, Iron dry);
- type of laundry;
- weight of the load.

The average drying time for a timed drying are indicated in the "Time Dry  " option (see page 17). The experience will help you to dry your laundry in a more suitable way according to the different fabrics.

## 9.5 Additional Drying

If the laundry is still damp at the end of the drying program, select a short drying cycle again.



**WARNING!**

**Do not over dry the laundry in order to avoid creasing of fabrics or garments shrinking.**

## 10. INTERNATIONAL WASH CODE SYMBOLS

 These symbols appear on fabric labels, in order to help you choose the best way to treat your laundry.

|                                                                                                            |                                                                                                                     |                                                                                                                                                              |                                                                                                                                       |                                                                                                                  |                                                                                                        |                                                                                                           |
|------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <br><b>Energetic wash</b> | <br>Max. wash temperature 95 °C    | <br>Max. wash temperature 60 °C                                             | <br>Max. wash temperature 40 °C                      | <br>Max. wash temperature 30 °C | <br>Hand wash         | <br>DO NOT wash at all  |
| <br><b>Delicate wash</b>  | <br>Max. wash temperature 60 °C    | <br>Max. wash temperature 40 °C                                             | <br>Max. wash temperature 40 °C                      | <br>Max. wash temperature 30 °C |                                                                                                        |                                                                                                           |
| <br><b>Bleaching</b>      | <br>Bleach in cold water           |                                                                                                                                                              |                                                                                                                                       | <br>DO NOT bleach               |                                                                                                        |                                                                                                           |
| <br><b>Ironing</b>       | <br>Hot iron max. 200 °C          | <br>Warm iron max. 150 °C                                                  | <br>Lukewarm iron max. 110 °C                       | <br>DO NOT iron                |                                                                                                        |                                                                                                           |
| <br><b>Dry cleaning</b> | <br>Dry cleaning in all solvents | <br>Dry cleaning in perchlorethylene, petrol, pure alcohol, R 111 & R 113 | <br>Dry cleaning in petrol, pure alcohol and R 113 | <br>DO NOT dry clean          |                                                                                                        |                                                                                                           |
| <br><b>Drying</b>       | <br>Flat                         | <br>On the line                                                           | <br>On clothes hanger                              | <br>High temperature          | <br>Low temperature | <br>DO NOT tumble dry |
|                                                                                                            |                                                                                                                     |                                                                                                                                                              |                                                                                                                                       | Tumble dry                                                                                                       |                                                                                                        |                                                                                                           |

## 11. CARE AND CLEANING

### **WARNING!**

You must **DISCONNECT** the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

### 11.1 External Cleaning

Clean the appliance only with soap and warm water. Fully dry all the surfaces.

### **CAUTION!**

**Do not use alcohol, solvents or chemical products.**

### 11.2 Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine.

Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions.

This will help to prevent the formation of lime deposits.

### 11.3 After Each Wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance.

Keeping the door open after a wash will also help to preserve the door seal.

### 11.4 Maintenance Wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.

We recommend that a maintenance wash be performed on a regular basis.


#### **To run a maintenance wash:**

- The drum should be empty of laundry.
- Select the hottest Cottons wash program.
- Press Start/Pause to start the program.


### 11.5 Cleaning The Dispenser Drawer

The washing powder and additive dispenser drawer should be cleaned regularly.


Remove the drawer by pressing the catch downwards and by pulling it out.

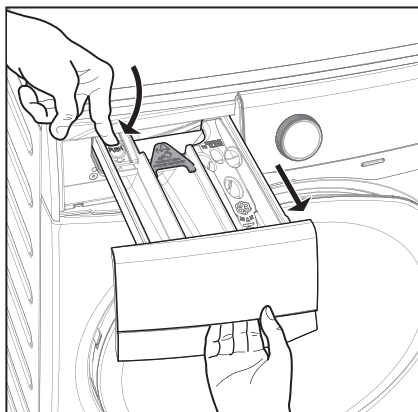

To aid cleaning, the top part of the additive compartment should be removed.

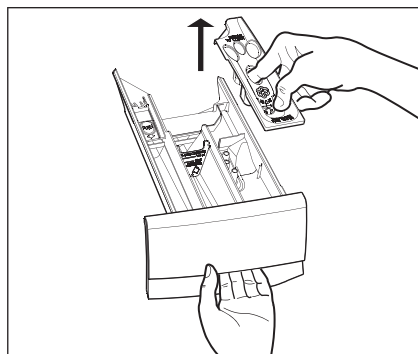


Flush it out under a tap to remove any traces of accumulated powder.

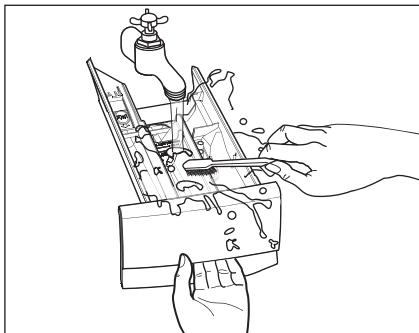

## 11.6 Cleaning The Drawer Recess

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess. Replace the drawer and run the rinse program without any clothes in the drum.

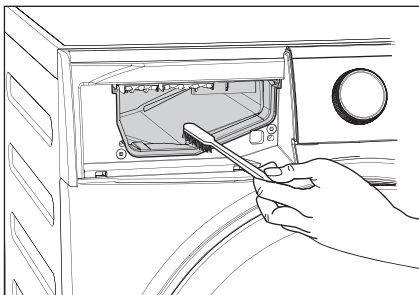

## 11.7 Cleaning The Pump

**i** Regularly examine the drain pump and make sure that it is clean.

**Clean the pump if:**



- The appliance does not drain the water.
- The drum cannot turn.
- The appliance makes an unusual noise because of the blockage of the drain pump.
- The display shows an alarm code because of the problem with water drain.

### **! WARNING!**

1. Disconnect the mains plug from the mains socket.
2. Do not remove the filter while the appliance is operating. Do not clean the drain pump if the water in the appliance is hot. The water must be cold before you clean the drain pump.



**To clean the drain pump:**

1. Open the drain pump door.

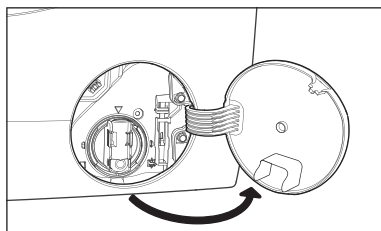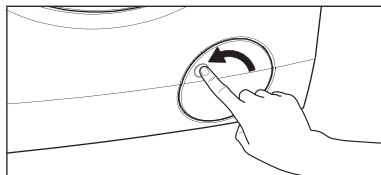

2. Place a suitable water container below the recess of the drain pump to collect the water that flows out.



Press the two levers and pull forward the drainage duct to let the water flow out.

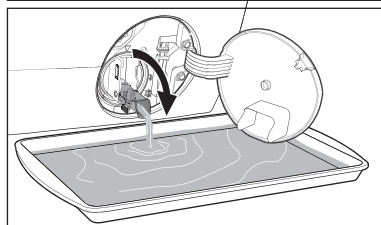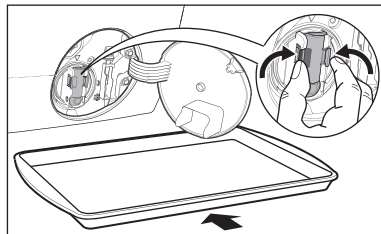


3. When the container is full of water, put the drainage duct back again and empty the container. Do step 2, 3 again and again until no more water flows out from the drain pump.




4. Push back the drainage duct and turn the filter counter-clockwise to remove it.

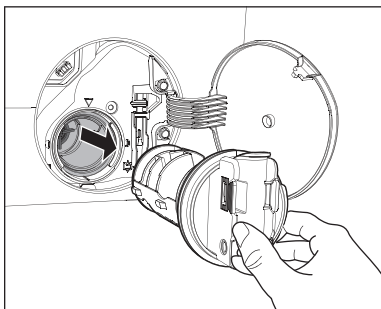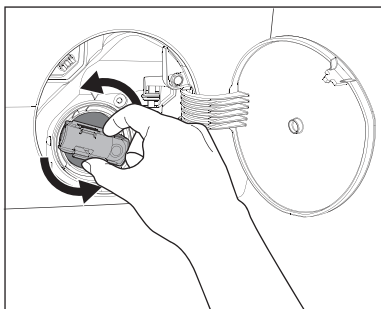


5. Remove fluff and objects from the pump (if there are any).

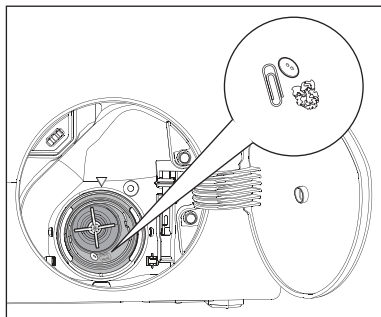


6. Make sure that the impeller of the pump can turn. If this does not occur, contact the service centre.

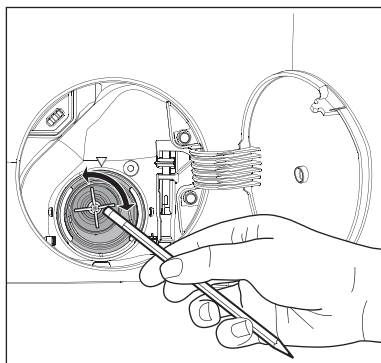

7. Clean the filter under the water tap.

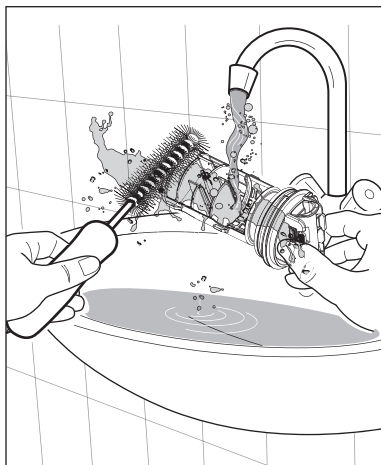

8. Put the filter back into the housing with exposed section facing up. Make sure that you correctly tighten the filter to prevent leakages.

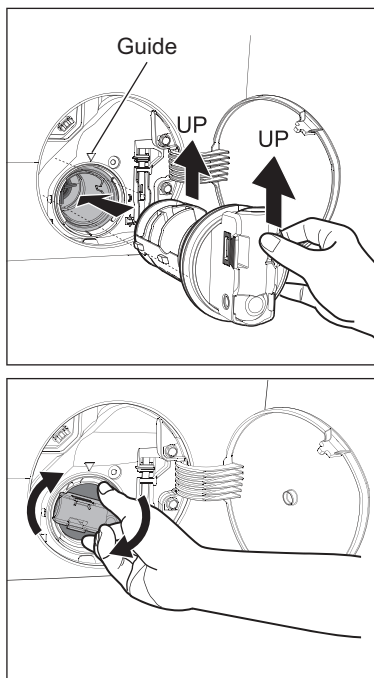

9. Close the drain pump door.


## 11.8 Cleaning The Water Inlet Filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.


### To clean the water inlet filters:

1. Close the water tap.
2. Remove the water inlet hose from the water tap.


3. Clean the filter in the inlet hose with a stiff brush.

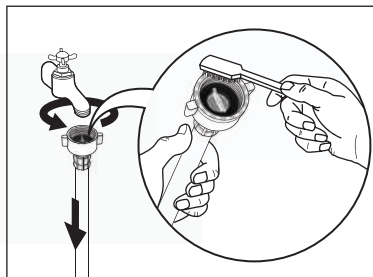

4. Remove the inlet hose behind the appliance.

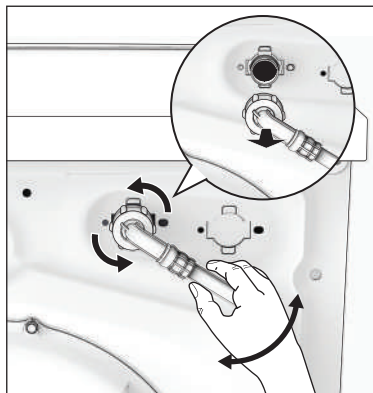

5. Clean the filter in the valve with a stiff brush or a towel.

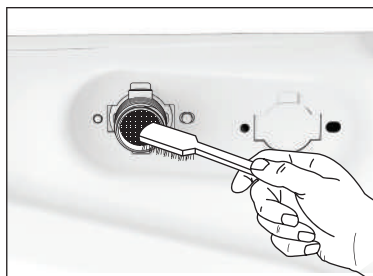


6. Install the inlet hose again. Make sure that the couplings are tight to prevent leakages.
7. Open the water tap.

## 11.9 Frost Precautions


If the appliance is installed in an area where the temperature can be less than 0 °C, remove the remaining water from the inlet hose and the drain pump.

### Emergency Drain

1. Disconnect the main plug from the main socket. Turn off the water tap.
2. Remove the water inlet hose.
3. Remove the drain hose from the rear support and unhook it from sink or spigot.

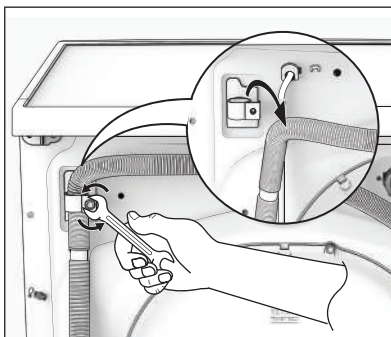

4. Put the end of the drain and inlet hose in a container. Let the water flow out of the hoses.

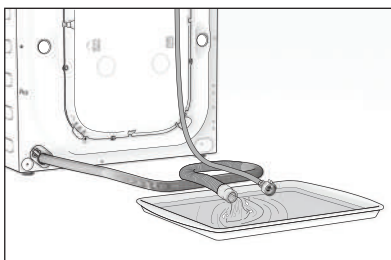

5. When no more water flows, install the inlet hose and the drain hose again.



#### NOTE

Make sure that the temperature is more than 0 °C before you use the appliance again.

## 12. TROUBLESHOOTING

### 12.1 Possible Failures

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer.

Before contacting your local Service Centre, please check troubleshooting.

Once the problem has been eliminated, press the Start/Pause button to restart the program. If after all checks, the problem persists, contact your local Service Centre.



**WARNING!** Deactivate the appliance before you do the checks.

#### Alarm Code:

|       |                                                                                                |
|-------|------------------------------------------------------------------------------------------------|
| E 10  | The appliance does not fill with water properly.                                               |
| E 20  | The appliance does not drain the water.                                                        |
| E 40  | The appliance door is open or not closed correctly. Please check the door!                     |
| E H0  | The main supply is unstable. Wait until the main supply is stable.                             |
| E 9 1 | No communication between electronic elements of the appliance. Switch off and switch on again. |
| E A0  | No Registration Data found in machine or Server.                                               |

| Malfunction                                    | Possible cause                                                 | Solution                                                                  |
|------------------------------------------------|----------------------------------------------------------------|---------------------------------------------------------------------------|
| <b>Machine does not start:</b>                 | The door has not been closed. (Error code: E 40 )              | Close the door firmly.                                                    |
|                                                | The plug is not properly inserted into the power socket.       | Insert the plug into the power socket.                                    |
|                                                | There is no power at the socket.                               | Please check your domestic electrical installation.                       |
|                                                | The Start/Pause touchpad has not been pressed.                 | Press the Start/Pause touchpad.                                           |
|                                                | The "Delay Start" has been selected.                           | If the laundry are to be washed immediately, cancel the "Delay Start".    |
|                                                | The Main supply is unstable. (If E H0 appears on the display.) | Wait until the main supply is stable. Appliance will start automatically. |
| <b>Machine does not fill the water:</b>        | The water tap is closed. (Error code: E 10 )                   | Open the water tap.                                                       |
|                                                | The inlet hose is squashed or kinked. (Error code: E 10 )      | Check the inlet hose connection.                                          |
|                                                | The filter in the inlet hose is blocked. (Error code: E 10 )   | Clean the water inlet hose filter.                                        |
|                                                | The door is not properly closed. (Error code: E 40 )           | Close the door firmly.                                                    |
| <b>Machine fills then empties immediately:</b> | The end of the drain hose is too low. (Error code: E 10 )      | Refer to relevant paragraph in "water drainage" section.                  |


| Malfunction                                         | Possible cause                                                                                                                                                        | Solution                                                                                                  |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| <b>Machine does not empty and/or does not spin:</b> | The drain hose is squashed or kinked. (Error code: E20)                                                                                                               | Check the drain hose connection.                                                                          |
|                                                     | The drain pump is clogged. (Error code: E20)                                                                                                                          | Clean the drain filter.                                                                                   |
|                                                     | The option "Rinse Hold" has been selected.                                                                                                                            | Press Start/Pause touchpad to drain the water or select spin program.                                     |
|                                                     | The laundry is not evenly distributed in the drum.                                                                                                                    | Pause the machine and redistribute laundry manually.                                                      |
| <b>There is water on the floor:</b>                 | Too much detergent or unsuitable detergent (creates too much foam) has been used.                                                                                     | Reduce detergent quantity and use correct type of detergent (refer page 27).                              |
|                                                     | Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. | Check the water inlet hose connection.                                                                    |
|                                                     | The drain hose is damaged.                                                                                                                                            | Call Service.                                                                                             |
| <b>Unsatisfactory washing results:</b>              | Too little detergent or unsuitable detergent has been used.                                                                                                           | Increase detergent quantity or use different detergent (refer page 27).                                   |
|                                                     | Stubborn stains have not been treated prior to washing.                                                                                                               | Use commercial products to treat the stubborn stains.                                                     |
|                                                     | The correct temperature was not selected.                                                                                                                             | Check if you have selected the correct temperature.                                                       |
|                                                     | Excessive laundry load.                                                                                                                                               | Reduce load.                                                                                              |
| <b>The door will not open:</b>                      | The program is still running.                                                                                                                                         | Wait until the end of cycle.                                                                              |
|                                                     | There is water in the drum.                                                                                                                                           | You must drain the water to open the door (refer "Opening The Door" on page 22).                          |
|                                                     | This problem may be caused by a failure of the appliance.                                                                                                             | Contact Service. If you need to open the door, please read carefully "Emergency door opening" on page 39. |
| <b>Machine vibrates or is noisy:</b>                | The transit bolts and packing have not been removed.                                                                                                                  | Check the correct installation of the appliance.                                                          |
|                                                     | The support feet have not been adjusted.                                                                                                                              | Check the correct levelling of the appliance.                                                             |

| <b>Malfunction</b>                                    | <b>Possible cause</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                         | <b>Solution</b>                                                                                                |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| <b>Machine vibrates or is noisy:</b>                  | The laundry is not evenly distributed in the drum.                                                                                                                                                                                                                                                                                                                                                                                                                            | Pause the machine and redistribute laundry manually.                                                           |
|                                                       | There is very little laundry in the drum.                                                                                                                                                                                                                                                                                                                                                                                                                                     | Load more laundry.                                                                                             |
|                                                       | Unstable floors eg. wooden floors.                                                                                                                                                                                                                                                                                                                                                                                                                                            | Refer to relevant paragraph in "Positioning" section.                                                          |
| <b>Cycle time longer than displayed:</b>              | Detergent over dose.                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Reduce the detergent quantity or use another one. (Refer page 27 "Detergents Type And Quantity Of Detergent"). |
|                                                       | Machine unbalance.                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Redistribute laundry manually in the drum and start the spin phase again.                                      |
| <b>The cycle is shorter than the time displayed.</b>  | The appliance calculated a new time according to the laundry load.                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                |
| <b>Spinning starts late or machine does not spin:</b> | <p>The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum.</p> <p>This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case, redistribute the load manually and select the spin program.</p> |                                                                                                                |
| <b>Machine makes an unusual noise:</b>                | Machine not installed properly.                                                                                                                                                                                                                                                                                                                                                                                                                                               | Make sure the levelling of the appliance is correct. Refer to "Installation".                                  |
|                                                       | Transit bolts or packaging not removed.                                                                                                                                                                                                                                                                                                                                                                                                                                       | Make sure that the packaging and/or the transit bolts are removed. Refer to "Unpacking".                       |
|                                                       | The load may be too small.                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Add more laundry in the drum.                                                                                  |
| <b>No water is visible in the drum:</b>               | Machines based on modern technology operate very economically using very little water without affecting performance.                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                |

| Malfunction                                                                        | Possible cause                                                                                                                                                 | Solution                                                                                                        |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| <b>Machine does not dry or does not dry properly:</b>                              | The “Time Dry” or the “Dryness Level” degree has not been selected.                                                                                            | Select the drying time or the dryness level degree.                                                             |
|                                                                                    | The water tap is not turned on.<br>(Error code: E 10 )                                                                                                         | Open the water tap.                                                                                             |
|                                                                                    | The drain filter is clogged.<br>(Error code: E 20 )                                                                                                            | Clean the drain filter.                                                                                         |
|                                                                                    | The machine is overloaded.                                                                                                                                     | Reduce the laundry load in the drum.                                                                            |
|                                                                                    | The selected drying program, time or dryness level was not suitable for the laundry.                                                                           | Select the suitable drying program, time or dryness level for the laundry.                                      |
| <b>Display time is frozen at the end of drying cycle for more than 30 minutes:</b> | Machine is optimizing the drying cycle according to the laundry type and load size. It will vary for each kind of fabric as the water absorption is different. | This is a normal behavior of the machine and not a cause for concern as it does not compromise its performance. |
| <b>Remote function does not work:</b>                                              | Registration Data lost or damaged.<br>(Error Code: E A0 )                                                                                                      | Restart machine by turn Off and turn On again. If problem not solved, please contact Service Centre.            |

**i NOTE**

If you are unable to identify or solve the problem, contact our service centre. Before calling service centre, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

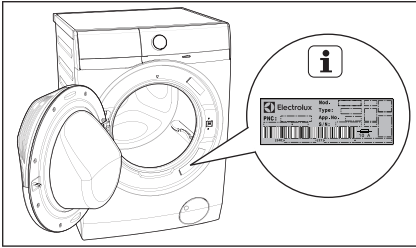

## 12.2 Emergency Door Opening

In case of power failure or appliance failure, the appliance door remains locked. The wash program continues when power is restored. If the door remains locked in case of failure, it is possible to open it using the emergency unlock feature.

**Before opening the door:**



### **WARNING!**

**Make sure that the water temperature and the laundry are not hot. Wait until they cool down if necessary.**


**Make sure that the water level inside the drum is not too high. If necessary, perform an Emergency Drain (see page 34).**

**Make sure that the drum is not rotating. Wait until the drum stops rotating if necessary.**

**To open the door proceed as follows:**

1. Press the On/Off button to switch the appliance off.
2. Disconnect the mains plug from the mains socket.
3. Open the filter cover.
4. Without touching the door. Insert a small flathead screw driver into the slot on emergency unlock strap (red strap) and pull down twice then pull the door open.  
Repeat if unsuccessful.

**Note:** Do not pull down emergency strap too hard.

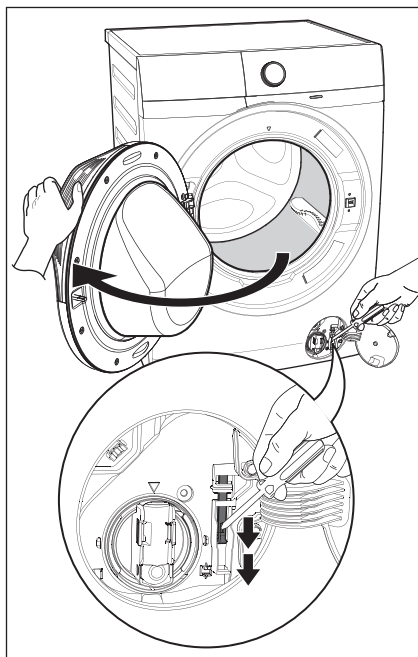

5. Take out the laundry.
6. Close the filter flap.

# 13. TECHNICAL DATA

|                                                  |                                                                                               |                             |                             |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------|-----------------------------|-----------------------------|
| <b>Dimensions (Height / Width / Depth)</b>       |                                                                                               | 85 X 60 X 65.9 cm           |                             |
| <b>Power supply (Voltage / Frequency)</b>        |                                                                                               | 220-240 V~ / 50 Hz          |                             |
| <b>Total power absorbed</b>                      |                                                                                               | Wash: 2000 W / Dry: 1500 W  |                             |
| <b>Water supply pressure (Maximum / Minimum)</b> |                                                                                               | 0.8 MPa / 0.05 MPa          |                             |
| <b>Maximum dry clothes capacity</b>              | <b>Program</b>                                                                                | <b>Washing</b>              | <b>Drying</b>               |
|                                                  | <b>Cottons</b>                                                                                | <b>Max.<sup>1)</sup> kg</b> | <b>Max.<sup>1)</sup> kg</b> |
|                                                  | <b>Mixed</b>                                                                                  | 4 kg                        | 3 kg                        |
|                                                  | <b>Delicates</b>                                                                              | 4 kg                        | —                           |
|                                                  | <b>Bedding</b>                                                                                | 3 kg                        | —                           |
|                                                  | <b>Vapour Refresh</b>                                                                         | 1.5 kg                      | —                           |
|                                                  | <b>Energy Saver</b>                                                                           | <b>Max.<sup>1)</sup> kg</b> | <b>Max.<sup>1)</sup> kg</b> |
|                                                  | <b>App Program</b>                                                                            | —                           | —                           |
|                                                  | <b>Spin</b>                                                                                   | <b>Max.<sup>1)</sup> kg</b> | <b>Max.<sup>1)</sup> kg</b> |
|                                                  | <b>Rinse + Spin</b>                                                                           | <b>Max.<sup>1)</sup> kg</b> | <b>Max.<sup>1)</sup> kg</b> |
|                                                  | <b>Wool</b>  | 2 kg                        | 1 kg                        |
|                                                  | <b>Quick 15</b>                                                                               | 1.5 kg                      | —                           |
|                                                  | <b>Daily 39</b>                                                                               | 5.5 kg                      | —                           |
|                                                  | <b>Full Wash 60</b>                                                                           | <b>Max.<sup>1)</sup> kg</b> | 4 kg                        |
|                                                  | <b>WashDry 60</b>                                                                             | 1 kg                        | 1 kg                        |
|                                                  | <b>Favourite</b> ☆                                                                            | —                           | —                           |
| <b>Spin speed (Maximum / Minimum)</b>            |                                                                                               | 1400 rpm / 400 rpm          |                             |

1) Maximum capacity depended on the model of the Washer Dryer (see defined on the control panel).

# 14. INSTALLATION


## 14.1 Unpacking




### CAUTION!

All transit bolts and packing must be removed before using the appliance.  
You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.


1. Use gloves. Remove the external film.  
If necessary, use a cutter.

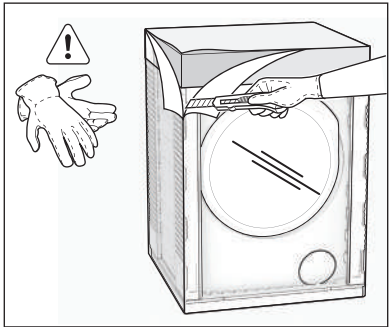


2. Remove the cardboard top.
3. Remove the polystyrene packaging materials.
4. Remove the plastic bag which cover the machine.

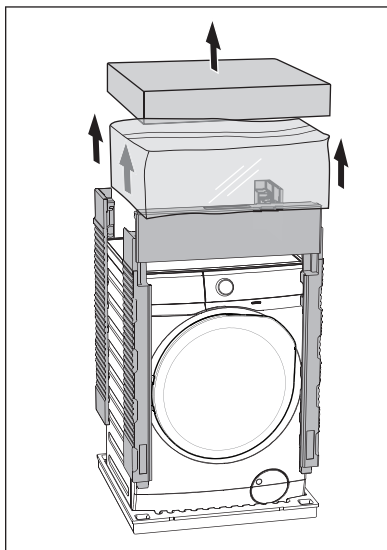


5. Open the door. Remove all the items from the drum.

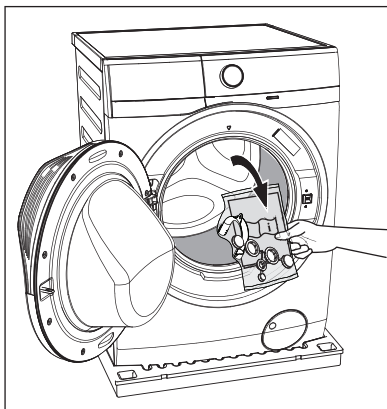


6. Put one of the polystyrene packaging elements on the floor behind the appliance. Carefully put down the appliance with the rear side on it. Make sure not to damage the hoses.

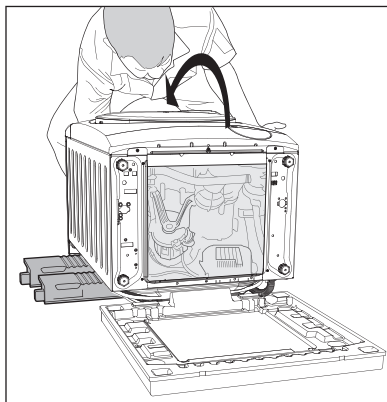

7. Remove the polystyrene base.


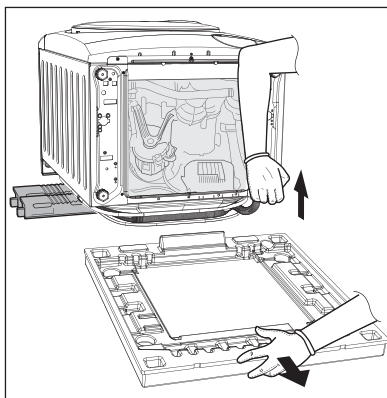


8. Pull up the appliance in vertical position.
9. Remove the power supply cable and the drain and inlet hoses from the hose holders (A) on the rear of the appliance.


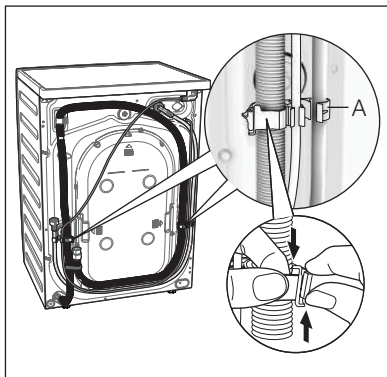


10. Remove the three transit bolts.

11. Pull out the plastic spacers.

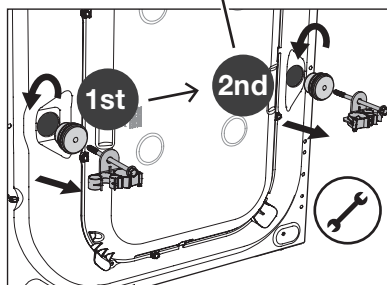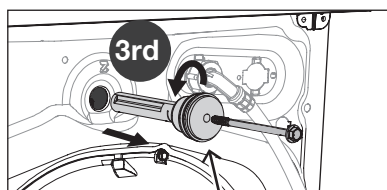


12. Put the plastic caps in the holes (X3). You can find these caps in the user manual bag.

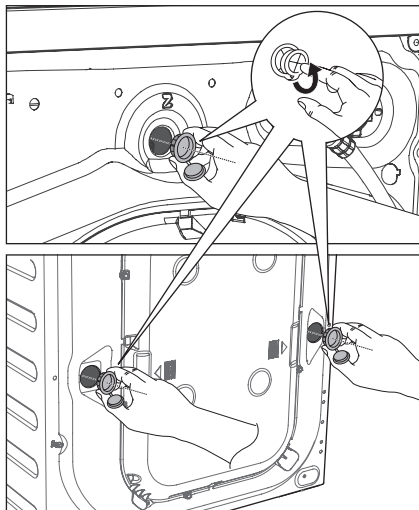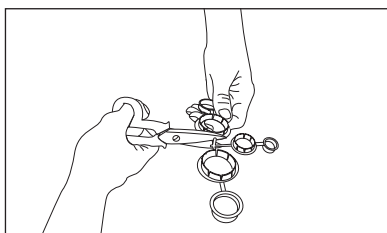

## 14.2 Positioning


It is important that your Washer-Dryer stands firm and leveled on the floor to ensure correct operation. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to avoid restricting the Washer-Dryer door.

Use a spirit level on the top and side of the Washer-Dryer to check the levels.

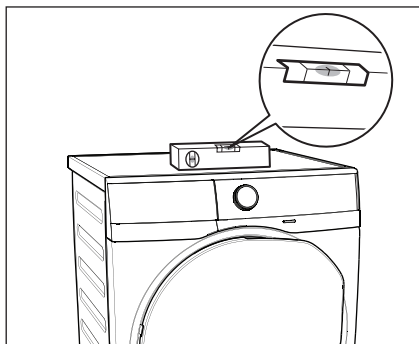


If you do not have a spirit level, as a guide use the edge of a door frame, cupboard or bench to check that the Washer-Dryer is leveled.

Loosen or tighten the feet to adjust the level. A correct adjustment of the appliance level prevents vibration, noise and the movement of the appliance when in operation.

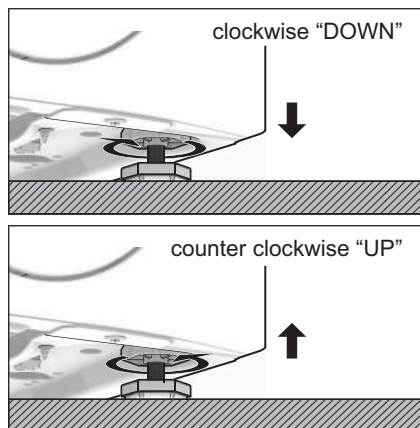

When the Washer-Dryer is levelled, try to rock it from corner to corner. If it does rock, adjust the legs again until it is levelled and does not rock.

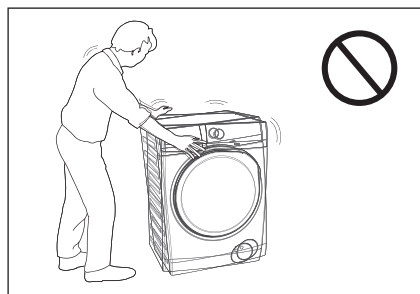


Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor. Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc.

Check that the machine does not touch the wall or cupboard units.

## 14.3 Water Inlet


Connect the water inlet hose to a tap with 3/4" BSP thread.

Use the hose supplied with the Washer-Dryer. **DO NOT USE OLD HOSES.**

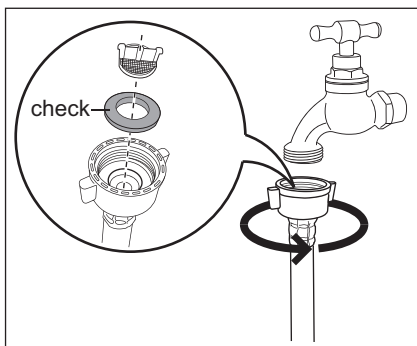

The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

Loosen the ring nut to angle the hose to the left or right depending on the position of your water tap. Do not place the inlet hose downwards. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.



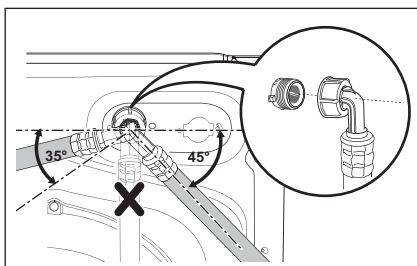


## 14.4 Water Drainage

The end of the drain hose can be positioned in three ways:

- **Hooked over the edge of a sink,** using the plastic hose guide supplied with the machine.


## Fitting Hose Guide

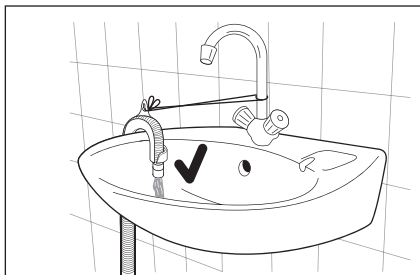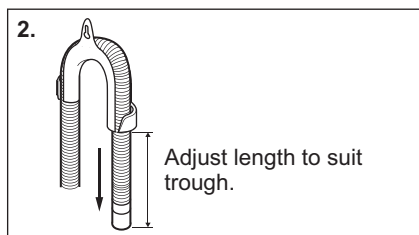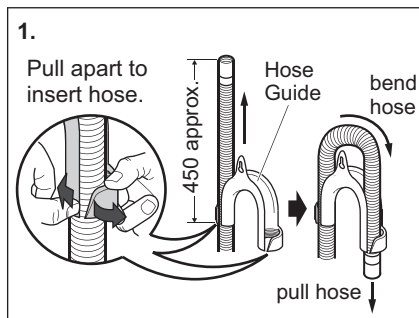

In this case, make sure the end cannot come unhooked when the machine will be emptied. This could be done by tying it to the tap with a piece of string or attaching it to the wall.


- **In a sink, drain pipe branch.**

This branch must be above the trap so that the bend is at least 60 cm above the ground.

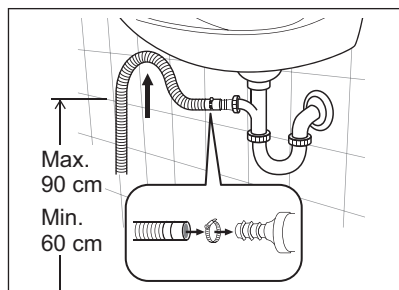

Push the drain hose onto the spigot and secure with a clamp, ensure a loop is formed in the drain hose to prevent waste from the sink entering the appliance.

- **Directly into a drain pipe, at a height of not less than 60 cm and not more than 90 cm.**

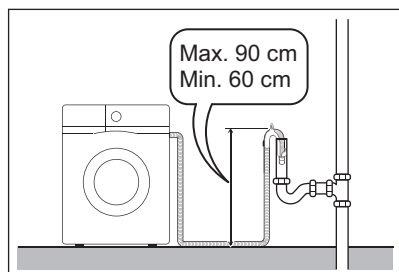

The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

The drain hose must not be twisted or curled. Run it along the floor; only the part near the drainage point must be raised.

For the correct functioning of the machine, the drain hose must remain hooked on the proper support piece situated on the top part of back side of the appliance.

## 14.5 Electrical Connection

This machine is designed to operate on a 220-240 V, single-phase, 50 Hz supply.

**“An incorrect power supply may void your warranty.”**

Check that your domestic electrical installation can take the maximum load required (refer TECHNICAL DATA), also taking into account any other appliances in use.



### CAUTION!

**Connect the machine to an earthed socket outlet.**



**The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precaution.**



**Should the appliance power supply cable need to be replaced, this shall be carried out by our Service Centre.**

When the appliance is installed, the power supply cable must be easily accessible.

## 15. ENVIRONMENT CONCERNS

### 15.1 Packaging Materials



The materials marked with the symbol  are recyclable.

>PE<=polyethylene

>PS<=polystyrene

>PP<=polypropylene

This means that they can be recycled by disposing them properly in appropriate collection containers.

### 15.2 Old Machine

Use authorized disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

### 15.3 Ecological Hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

## 16. WI-FI CONNECTIVITY SETUP

 "The software in this product contains components that are based on free and open source software. Electrolux gratefully acknowledges the contributions of the open software and robotics communities to the development project. To access the source code of these free and open source software components whose license conditions require publishing, and to see their full copyright information and applicable license terms, please visit: <http://electrolux.opensourcerepository.com> "

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.

By this functionality you can monitor and control your laundry appliance from your mobile devices.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

|                  |                                               |
|------------------|-----------------------------------------------|
| <b>Frequency</b> | 2.4 GHz according to local country regulation |
| <b>Protocol</b>  | IEEE 802.11b/g/n                              |
| <b>Max Power</b> | According to local country regulation         |

### 16.1 Download and installing and configuring "Electrolux Life" App\*.

1. Go to the App Store/Play Store on your smart device.



2. Download and install App "Electrolux Life".



\* Minimum requirements: iPhone6/iOS 9.3/ Android 5.1 and above. You will need to install the Electrolux Life App, create an Electrolux account and accept the Terms and Conditions and Electrolux's Privacy Policy in the App to use the connected features of the laundry appliance. Internet and Wi-Fi connections are required to use the full features of the App and the laundry appliance. Minimum requirements, Apps and services are subject to change without notice.

3. Create an Electrolux account. You can only create one Electrolux account per product. This account can be shared across multiple devices.
4. Setting up your Washing Machine. Make sure your machine is plugged in and operating normally, stand near it with your smart device. Tap on "Appliances" at the bottom of the home screen. Tap on "Add Appliance" and follow the prompts on screen.
  - \* Setup will take several minutes depending on your network speed.
5. Turning on your Washing Machine Wi-Fi. Initially your machine creates its own Wi-Fi network to assist in setting up. After setup this network disappears and your machine will connect to your home Wi-Fi network. Press and hold  Remote touch button for 3 seconds. The text  pop up for about 5 seconds and the icon  starts flashing and wireless module begins starting up. It may takes about 45 seconds before it is ready. When the wireless module is ready, the text  (Access Point) is on to inform you, that the access point will be open for about 3 minute.
6. Connect your Washing Machine:
  - iOS** Tap the home button to exit the app. Go to "Settings" on your phone and select "Wi-Fi". Select your Washing Machine's Wi-Fi

network. It is the one that begins with “@E\_” (it may take a few moments to appear). Tap the home button to exit your phone settings and then return to the Electrolux Life App.

Wait for confirmation of connection which may take up to a minute before proceeding to the next step.

 For iOS devices, you will then be prompted go to “SETTINGS” on your phone and select your Home Wi-Fi, then return to the Electrolux Life App.

### Android

For Android devices, select your Washing Machine's Wi-Fi network from the drop-down box.

7. Connect your Washing Machine to your home Wi-Fi.  
You'll need to select your Wi-Fi network name and input your password.  
If the connectivity is configured,  (Access Point) symbol is off and the icon  will stop blinking and lit steadily to confirm that the configuration was successful  
Connection success!

 Every time you switch the Washing Machine on, the machine takes 45 seconds to connect to the network automatically. When the  indicator stops blinking the connection is ready.

Please proceed to the next screen to register the Washing Machine.

8. Product registration; Simply add your Washing Machine's name and the purchase date.

### Congratulations!

Now you're all set up. You can start exploring the Electrolux Life App.

#### To switch the wireless connection off,

Press and hold  Remote touch button for 3 seconds until the first acoustic signal:  appears on the display.

To remove the wireless credentials,

Press and hold  Remote touch button for 10 seconds until the second acoustic signal:

— — — appears on the display.

 If you switch the machine off and on again, the wireless connection is automatically off.

## 16.2 Remote Start

When the App is installed and the wireless connection is complete, you can start and stop a program remotely by activate remote start.

 The Remote Control activates automatically when you press the Start/ Pause button to start the program, but it is also possible to start a program.

### Activate Remote Start

1. Press the  Remote button and the indicator  appears on the display.
2. Press the Start/Pause button to activate the Remote Start.  
Now it is possible to start the program remotely.

### Deactivate Remote Start

Press the  Remote touch button. The  icon is off and the remote start is deactivated.

 If the door is unlock, the Remote Start is deactivated.

NOTE

NOTE

NOTE



FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: ELECTROLUX WASHING MACHINES & WASHER/DRYERS

**This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.**

**1. In this warranty:**

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- (c) 'ASC' means Electrolux's authorised serviced centres;
- (d) 'Electrolux' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

**2. Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.

**3. Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months following the date of original purchase of the Appliance.

- Inverter motor – Further 8 years

**4. Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

**5. Travel and transportation costs:** Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

**6. Proof of purchase** is required before you can make a claim under this warranty.

**7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;
- (b) parts and Appliances not supplied by Electrolux;
- (c) cosmetic damage which does not affect the operation of the Appliance;

- (d) damage to the Appliance caused by:
  - (i) negligence or accident;
  - (ii) misuse or abuse, including failure to properly maintain or service;
  - (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
  - (iv) normal wear and tear;
  - (v) power surges, electrical storm damage or incorrect power supply;
  - (vi) incomplete or improper installation;
  - (vii) incorrect, improper or inappropriate operation;
  - (viii) insect or vermin infestation;
  - (ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced.

**8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;
- (b) have the model and serial number of the Appliance available;
- (c) have the proof of purchase (e.g. an invoice) available;
- (d) telephone the numbers shown below.

**9. Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

**10. New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

**11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty. For more information on how we handle your personal information, see our privacy policy at [www.electrolux.com.au/other/privacy/](http://www.electrolux.com.au/other/privacy/) or [www.electrolux.co.nz/other/privacy/](http://www.electrolux.co.nz/other/privacy/)

**Important Notice**

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

|                                                                                                                                                                                                              |                                                                                                                         |                                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>FOR SERVICE</b><br/>or to find the address of your nearest authorised service centre in Australia<br/><b>PLEASE CALL 13 13 49</b><br/><small>For the cost of a local call (Australia only)</small></p> | <p><b>AUSTRALIA</b><br/>ELECTROLUX HOME PRODUCTS<br/>163 O'Riordan Street, Mascot NSW 2020<br/>electrolux.com.au</p>    | <p><b>FOR SPARE PARTS IN AUSTRALIA</b><br/>please visit <a href="http://shop.electrolux.com.au">shop.electrolux.com.au</a> or call <b>13 13 50</b><br/><small>For the cost of a local call (Australia only)</small></p> |
| <p><b>FOR SERVICE</b><br/>or to find the address of your nearest authorised service centre in New Zealand<br/><b>PLEASE CALL 0800 10 66 10</b><br/><small>(New Zealand only)</small></p>                     | <p><b>NEW ZEALAND</b><br/>ELECTROLUX (NZ) Limited<br/>3-5 Niall Burgess Road, Mount Wellington<br/>electrolux.co.nz</p> | <p><b>FOR SPARE PARTS IN NEW ZEALAND</b><br/>or to find the address of your nearest spare parts centre in New Zealand<br/><b>PLEASE CALL 0800 10 66 20</b><br/><small>(New Zealand only)</small></p>                    |

